

[Manuals.plus](#) /

› [Microsoft](#) /

› Microsoft Sculpt Comfort Mouse H3S-00003 User Manual

Microsoft H3S-00003

Microsoft Sculpt Comfort Mouse H3S-00003 User Manual

Model: H3S-00003

INTRODUCTION

The Microsoft Sculpt Comfort Mouse is designed for comfortable navigation, especially optimized for Windows operating systems. It features wireless Bluetooth connectivity, a customizable Windows Touch Tab, and BlueTrack Technology for versatile surface tracking. This manual provides instructions for setting up, operating, maintaining, and troubleshooting your mouse.



Image: Top view of the Microsoft Sculpt Comfort Mouse, showcasing its ergonomic shape and the Microsoft logo.

SETUP

1. Install Batteries

1. Locate the battery compartment on the underside of the mouse.
2. Remove the battery cover.
3. Insert two AA batteries, ensuring correct polarity (+/-). Two AA batteries are included with the mouse.
4. Replace the battery cover securely.



Image: A hand demonstrating how to open the battery compartment and insert batteries into the mouse.

2. Bluetooth Pairing

The Sculpt Comfort Mouse connects wirelessly via Bluetooth, requiring no USB transceiver. Ensure your computer or device has Bluetooth capability.

1. Turn on the mouse using the power switch located on the underside.
2. Press and hold the Bluetooth pairing button on the underside of the mouse until the LED indicator begins to flash, indicating it is in pairing mode.
3. On your computer or device, navigate to the Bluetooth settings.
4. Select "Add Bluetooth or other device" and choose "Bluetooth".
5. Select "Microsoft Sculpt Comfort Mouse" from the list of available devices.
6. Follow any on-screen prompts to complete the pairing process. The LED indicator on the mouse will turn solid when successfully paired.

Your browser does not support the video tag.

Video: An official manufacturer video demonstrating the features and setup of the Microsoft Sculpt Comfort Mouse.

OPERATING INSTRUCTIONS

Basic Functions

- **Left-Click Button:** Primary selection and interaction.
- **Right-Click Button:** Accesses contextual menus.
- **Scroll Wheel:** Scrolls vertically through documents and web pages.
- **4-Way Scrolling:** Tilt the scroll wheel left or right to scroll horizontally.

Windows Touch Tab

The blue Windows Touch Tab on the side of the mouse provides quick access to Windows features. Its functionality is optimized for Windows 8 and later versions.

- **Press:** Opens the Start Screen or Start Menu (Windows 8/10).
- **Swipe Up:** Cycles through open applications.
- **Swipe Down:** Reveals the desktop.



Image: Side view of the mouse highlighting the blue Windows Touch Tab for quick access to Windows functions.

BlueTrack Technology

BlueTrack Technology allows the mouse to track on a wide variety of surfaces, including rough wood, carpet, and granite, making it highly versatile for use in different environments. It may not track on clear glass or mirrored surfaces.



Image: The mouse positioned on different surfaces, illustrating the versatility of BlueTrack Technology.

MAINTENANCE

Cleaning the Mouse

- Turn off the mouse before cleaning.
- Use a soft, lint-free cloth lightly dampened with water or a mild cleaning solution to wipe the exterior.
- Avoid getting moisture into any openings.
- Do not use abrasive cleaners or solvents.

Battery Replacement

When the mouse's performance degrades or the battery indicator light (if present) signals low power, replace the batteries. Refer to the "Install Batteries" section under Setup for detailed steps.

TROUBLESHOOTING

- **Mouse Not Connecting/Losing Connection:**
 - Ensure the mouse is turned on and batteries are correctly installed and charged.

- Verify Bluetooth is enabled on your computer or device.
 - Try re-pairing the mouse: turn off the mouse, remove it from your device's Bluetooth list, then repeat the Bluetooth pairing steps.
 - Move the mouse closer to your device to rule out range issues.
 - Check for interference from other wireless devices.
- **Cursor Movement is Erratic or Inaccurate:**
 - Ensure the surface you are using is suitable for BlueTrack Technology (avoid clear glass or mirrored surfaces).
 - Clean the optical sensor on the underside of the mouse with a soft, dry cloth.
 - Replace the batteries.
 - **Windows Touch Tab Not Responding:**
 - Ensure your operating system is Windows 8 or later for full functionality.
 - Install the latest drivers and software for the mouse from the Microsoft support website.

SPECIFICATIONS

Brand	Microsoft
Model Number	H3S-00003
Connectivity Technology	Bluetooth
Movement Detection Technology	Optical (BlueTrack)
Number of Buttons	5 (Left, Right, Scroll Click, Tilt Left, Tilt Right, Windows Touch Tab)
Hand Orientation	Ambidextrous (optimized for right-hand use due to thumb rest/Windows Touch Tab placement)
Power Source	2 AA Batteries (included)
Compatible Devices	Personal Computer (Laptop, PC, Tablet)
Operating System	Windows 8 (optimized), works with Mac/Windows Computers
Item Weight	4.8 ounces
Item Dimensions (L x W)	4.37"L x 2.69"W

WARRANTY INFORMATION

The Microsoft Sculpt Comfort Mouse comes with a manufacturer's warranty. For specific details regarding warranty coverage, duration, and claims process, please refer to the documentation included with your product or visit the official Microsoft support website.

SUPPORT

For further assistance, updated drivers, software, or additional troubleshooting guides, please visit the official Microsoft Support website. You can also find contact information for customer service there.

- **Official Microsoft Support:** support.microsoft.com
- **Microsoft Store:** [Visit the Microsoft Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question