

KitchenAid KHM7210CU

KitchenAid 7-Speed Hand Mixer

Model: KHM7210CU

Instruction Manual

INTRODUCTION

Thank you for choosing the KitchenAid 7-Speed Hand Mixer. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new appliance. Please read all instructions carefully before using the mixer for the first time and retain this manual for future reference. The KitchenAid 7-Speed Hand Mixer is designed to provide versatile mixing capabilities for a wide range of culinary tasks, from light whipping to incorporating dense ingredients.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. To protect against risk of electrical shock, do not put the mixer body in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts. Keep hands, hair, clothing, as well as spatulas and other utensils away from beaters during operation to prevent injury and/or damage to the mixer.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
8. Do not use outdoors.

9. Do not let cord hang over edge of table or counter.
10. Do not let cord contact hot surfaces, including the stove.
11. Remove beaters from mixer before washing.
12. This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

PRODUCT OVERVIEW

Components

The KitchenAid 7-Speed Hand Mixer comes with the following components:

- Hand Mixer Body
- Stainless Steel Turbo Beater II Accessories (2)
- Pro Whisk Attachment



Image: The KitchenAid 7-Speed Hand Mixer in Contour Silver, shown with its standard Turbo Beater II accessories inserted and the Pro Whisk attachment lying beside it. This image provides a comprehensive view of the main unit and

its primary mixing tools.



Image: A pair of Stainless Steel Turbo Beater II accessories. These beaters are designed for efficient mixing of various ingredients, from batters to cookie dough.



Image: The Pro Whisk attachment, ideal for incorporating air into mixtures, such as whipping egg whites or cream to achieve light and fluffy textures.

Key Features

- **7-Speed Control:** Offers a range of speeds from slow stirring (Speed 1) to high-speed whipping (Speed 7) for diverse mixing needs.
- **Stainless Steel Turbo Beater II Accessories:** Designed for thorough mixing of ingredients.
- **Pro Whisk Attachment:** Specifically for light and fluffy mixtures, such as egg whites or heavy cream.
- **Lockable Swivel Cord:** Allows the cord to be positioned out of the way during mixing for convenience.
- **Single-Handed Beater Eject Button:** Enables quick and easy removal of accessories.



Image: A close-up view of the lockable swivel cord mechanism on the hand mixer, highlighting its design for flexible positioning during use.



Image: A detailed view of the beater eject button located on the top of the hand mixer, illustrating the ease of accessory removal with a single press.

SETUP

Before First Use

Before using your hand mixer for the first time, wipe the mixer body with a damp cloth. Wash the Turbo Beater II accessories and Pro Whisk in warm, soapy water, then rinse and dry thoroughly. All accessories are dishwasher-safe.

Attaching Accessories

1. Ensure the hand mixer is unplugged from the electrical outlet.
2. Insert the desired accessories (Turbo Beater II or Pro Whisk) into the openings on the bottom of the mixer. Push firmly until they click into place. The Turbo Beater II accessories are interchangeable and can be inserted into either opening.

Power Connection

Once accessories are securely attached, plug the hand mixer into a standard electrical outlet. The lockable swivel cord can be adjusted to keep it out of your way during operation.

OPERATING INSTRUCTIONS

Speed Control

The KitchenAid 7-Speed Hand Mixer features a precise electronic control with 7 speeds. The speed control is located on the top of the mixer. Use the up and down arrows to adjust the speed.

- **Speed 1 (Stir):** For combining dry ingredients, starting batters, or mixing in nuts and chocolate chips.
- **Speeds 2-4 (Blend/Mix):** For mixing thin batters, gravies, and sauces.
- **Speeds 5-6 (Beat):** For beating whole eggs, creaming butter and sugar, or mixing medium

batters.

- **Speed 7 (Whip):** For whipping egg whites, heavy cream, or meringues to fluffy peaks.

Mixing Techniques

1. Always start mixing at a low speed to prevent splashing, then gradually increase to the desired speed.
2. Move the mixer slowly around the bowl, ensuring all ingredients are incorporated.
3. For best results, use a bowl large enough to contain ingredients without overflow.
4. When finished mixing, turn the mixer off before lifting it from the bowl.



Image: The KitchenAid Hand Mixer actively mixing cookie dough in a clear glass bowl, demonstrating its use in a typical kitchen application.

CARE AND CLEANING

Cleaning the Mixer Body

Always unplug the hand mixer before cleaning. Wipe the mixer body with a damp cloth. Do not immerse the mixer body in water or other liquids. Do not use abrasive cleaners or scouring pads, as they may scratch the surface.

Cleaning Accessories

The Stainless Steel Turbo Beater II accessories and the Pro Whisk attachment are dishwasher-safe. For manual cleaning, wash them in warm, soapy water, then rinse and dry thoroughly.

Storage

Store the hand mixer and its accessories in a clean, dry place when not in use. Ensure the cord is neatly wrapped to prevent damage.

TROUBLESHOOTING

If your KitchenAid Hand Mixer experiences issues, consult the following table for common problems and solutions.

Problem	Possible Cause	Solution
Mixer does not turn on.	Not plugged in; power outlet not functioning.	Ensure the mixer is securely plugged into a working electrical outlet. Test the outlet with another appliance.
Beaters are difficult to insert or remove.	Accessories not aligned correctly; eject button not fully pressed.	Ensure accessories are aligned with the openings. Press the eject button firmly to release.
Mixer seems to struggle with thick mixtures.	Speed setting too low; mixture too dense for hand mixer.	Increase the speed setting. For very thick doughs, a stand mixer may be more appropriate.
Unusual noise during operation.	Beaters not fully inserted; internal issue.	Ensure beaters are fully inserted. If noise persists, discontinue use and contact customer support.

If the problem persists after trying these solutions, please contact KitchenAid Customer Service.

SPECIFICATIONS

Feature	Detail
Brand	KitchenAid
Model Name	7-Speed Hand Mixer
Model Number	KHM7210CU
Color	Contour Silver
Product Dimensions	8"D x 3.5"W x 6"H
Item Weight	2 pounds
Controls Type	Push Button
Special Feature	Adjustable Speed Control
Dishwasher Safe Parts	Yes (Accessories)
UPC	883049271040



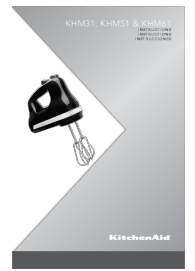

WARRANTY AND SUPPORT



KitchenAid products are manufactured to high-quality standards and are warranted to be free from defects in material and workmanship. For specific warranty details, including coverage period and terms, please refer to the warranty card included with your product or visit the official KitchenAid website. For customer support, service, or to order replacement parts, please visit the official KitchenAid website or contact their customer service line. You can also refer to the official user manual PDF for additional information: [KitchenAid User Guide \(PDF\)](#).

Note: No official product videos from the seller were available for embedding in this manual.

© 2024 KitchenAid. All rights reserved.

Related Documents - KHM7210CU

	<p>KitchenAid 7 & 9 Speed Hand Mixers: Instructions, Recipes, and Warranty</p> <p>Comprehensive guide for KitchenAid 7 and 9 Speed Hand Mixers, including setup, operation, safety, troubleshooting, care, and a collection of recipes. Features warranty information and product details.</p>
	<p>KitchenAid Flex Edge Beater for Hand Mixers: Compatibility and Speed Guide</p> <p>Find compatibility information and a detailed speed control guide for KitchenAid Flex Edge Beaters (KHMFEB2) for various hand mixer models. Includes important safety precautions and usage tips.</p>
	<p>KitchenAid KHM31, KHM51, KHM61 Hand Mixer Instructions</p> <p>User manual and instructions for KitchenAid KHM31, KHM51, and KHM61 hand mixers, covering safety, operation, care, and troubleshooting.</p>
	<p>KitchenAid KHM5APBU6 Hand Mixer: Owner's Manual, Instructions, and Recipes</p> <p>Comprehensive guide for KitchenAid KHM5APBU6 3 & 5 Speed Hand Mixers, including operating instructions, safety precautions, warranty details, troubleshooting, and a collection of recipes.</p>

 <p>KITCHENAID 5KSM150PSECV4 Owner's Manual</p> <p>Shop genuine replacement parts for KITCHENAID 5KSM150PSECV4</p> <p>KitchenAid</p> <p>Find Your KITCHENAID Model Parts - Select From 500 Models</p> <p>Manual contents below</p>	<p>KITCHENAID 5KSM150PSECV4 Owner's Manual - Comprehensive Guide</p> <p>Detailed owner's manual for the KITCHENAID 5KSM150PSECV4 tilt-head stand mixer. Covers assembly, operation, care, and troubleshooting in multiple languages. Find genuine parts and support.</p>
 <p>KITCHENAID 5KSM150PSSOB4 Owner's Manual</p> <p>Shop genuine replacement parts for KITCHENAID 5KSM150PSSOB4</p> <p>KitchenAid</p> <p>Find Your KITCHENAID Model Parts - Select From 500 Models</p> <p>Manual contents below</p>	<p>KitchenAid 5KSM150PSSOB4 Handleiding: Gebruik en Onderhoud</p> <p>Officiële handleiding voor de KitchenAid 5KSM150PSSOB4 kantelbare standmixer. Ontdek hoe u uw KitchenAid mixer veilig gebruikt, onderhoudt en de beste resultaten behaalt.</p>