

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Sunnydaze](#) /

› [Sunnydaze Water Auto Fill System Instruction Manual](#)

## Sunnydaze SDI- FF-211

# Sunnydaze Water Auto Fill System Instruction Manual

Model: SDI- FF-211

Brand: Sunnydaze

## PRODUCT OVERVIEW

The Sunnydaze Water Auto Fill System is designed to automatically maintain consistent water levels in outdoor fountains, preventing them from running dry. This system offers convenience by eliminating the need for manual refilling, ensuring your fountain always looks its best and its pump is protected.



Image: Components of the Sunnydaze Water Auto Fill System, showing the float unit, 1/4" tubing, and various fittings for connection.

## SETUP INSTRUCTIONS

Follow these steps for proper installation of your Water Auto Fill System:

- 1. Establish Water Source:** Connect the float unit to your water source. Fittings are provided for either a standard hose connection or a 1/2" threaded irrigation line. Push the 1/4" tubing into the coupling at the back of the float assembly.
- 2. Connect Tubing:** Insert the other end of the 1/4" drip hose into either the hose connection or the 1/2" threaded sprinkler riser connection. Ensure your water source has an approved double check valve or anti-siphon valve to prevent backflow.
- 3. Position Float Assembly:** Place the float assembly into the basin of your fountain. Keep the assembly level and free from falling water. Route the hose over the side or out the back of the fountain, ensuring it is not kinked.
- 4. Adjust Water Level:** Turn on the water. The float is preset for approximately 3.5 inches of water depth.

For deeper fountains, a 5-inch extension arm is provided to increase the water depth by an additional 2 inches. When using the extension arm, the float should remain level and not be more than 1.5 degrees inclined. The autofill system will not shut off properly if the float arm is significantly angled. Always aim to keep the water level as high as possible without overflowing.



# WaterLev™ Garden Fountain AutoFil

FF-211



## Instructions

### Easy To Install:

- 1) Establish water source. Fittings are provided for hose connection or 1/2" threaded irrigation connection. Insert hose into coupling at the back of float assembly. Push in drip hose 1/4" into coupling.
- 2) Insert other end of drip hose 1/4" into either hose connection or 1/2" threaded Sprinkler riser connection. Water source must have an approved double check valve or Anti-siphon valve.
- 3) Set float assembly into Basin of fountain keep assembly level and free of falling water. Run hose over the side or out the back of fountain.
- 4) Turn on water. Float is preset for approximately 3 1/2" of water depth. For more depth use 5" Extension Arm provided for 2 more inches of water Depth "Float should always be level" When using Extension arm. Float should not be more than 15 degrees incline. If the autofill does not shut off lower degree of float arm. **ALWAYS KEEP UNIT LEVEL IF POSSIBLE.**

### Regular service and maintenance required.

Customer agrees that it will be solely responsible for monitoring the use of the Product. Under no circumstances shall Stetson Development, Inc. be liable for any costs or damages arising from wasted or excess water usage. Customer agrees that Stetson Development, Inc. maximum liability for any claims brought by customer against Stetson Development, Inc. whether arising in contract, tort, or otherwise, shall be limited to the amount actually paid by Customer for the Product.

**Customer service [www.waterlev.com](http://www.waterlev.com)**

**Works excellent  
on both:**

### Wall Fountains



### Garden Fountains

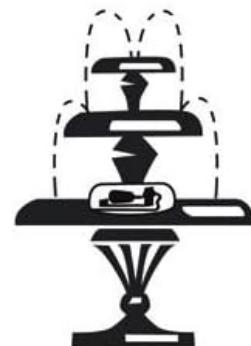


Image: Detailed setup instructions and diagrams for installing the auto-fill system in both wall and garden fountains.

## OPERATING INSTRUCTIONS

Once installed and the water source is connected, the Sunnydaze Water Auto Fill System operates automatically. The float mechanism monitors the water level in your fountain. As water evaporates or is lost, the float will drop, opening a valve to allow water to flow into the fountain until the desired level is restored. The float then rises, closing the valve and stopping the water flow.

This system is designed for continuous, hands-free operation, ensuring your fountain always has sufficient water without manual intervention.

## MAINTENANCE

Regular maintenance helps ensure the longevity and optimal performance of your auto-fill system:

- **Inspect Tubing:** Periodically check the 1/4" tubing for kinks, cracks, or blockages. Ensure it is securely connected to both the float unit and the water source.
- **Clean Float Mechanism:** Over time, mineral deposits or debris may accumulate on the float or its pivot points. Gently clean the float and its housing to ensure it moves freely and accurately detects water levels.
- **Check Water Source Connection:** Verify that the connection to your hose or irrigation line remains tight and free of leaks.
- **Winterization:** In freezing climates, disconnect the auto-fill system and drain all water from the tubing and float unit before the first frost to prevent damage from ice expansion. Store components indoors during winter.

## TROUBLESHOOTING

| Problem                                  | Possible Cause  | Solution   |
|--|---|--|
| Fountain not filling.                    | Water source off; kinked or blocked tubing; float mechanism stuck; insufficient water pressure. | Ensure water source is on; check tubing for obstructions and clear them; clean and free the float; verify adequate water pressure from source. |
| Fountain overfilling or continuous flow. | Float mechanism stuck in open position; float arm not level; debris preventing valve closure.   | Clean and free the float; adjust float assembly to be level; remove any debris from the valve area.  |
| Leaks at connections.                    | Loose connections; damaged O-rings or fittings; tubing not fully inserted.                      | Tighten all connections; inspect and replace damaged parts; ensure tubing is fully and securely inserted into fittings.                        |

## SPECIFICATIONS

---

**Dimensions (L x W x H):** 8.5 x 8.5 x 5 inches

**Item Weight:** 1.5 Pounds

**Power Source:** Unpowered (operates via water pressure and float mechanism)

**Special Feature:** Automatic Watering

**Hose Length:** 10 Feet (1/4" tubing)

**Material:** PVC

**Model Number:** SDI- FF-211

**UPC:** 819804011354

**Number of Pieces:** 5 (float unit, tubing, hose fitting, 1/2" threaded irrigation line fitting, extension arm)

## WARRANTY AND SUPPORT

---

Sunnydaze Decor backs its products with a **1-year manufacturer's warranty**, ensuring worry-free purchasing.

For detailed warranty information or support, please refer to the official Sunnydaze website or contact customer service.



Sunnydaze  
DECOR

# 1-YEAR WARRANTY



---

U.S. BASED SELLER

---

Image: Sunnydaze Decor 1-Year Warranty information, highlighting U.S. based seller.

An official User Guide (PDF) is also available for download: [Download User Guide PDF](#)

---

© 2025 Sunnydaze Decor. All rights reserved.