

[Manuals.plus](#) /

> [OVO](#) /

> OVO F11 Vibe Personal Massager Instruction Manual

OVO F11 Vibe

OVO F11 Vibe Personal Massager Instruction Manual

INTRODUCTION

Thank you for choosing the OVO F11 Vibe. This manual provides essential information for the safe and effective use of your personal massager. The OVO F11 Vibe is designed for comfort and ease of use, featuring a fully integrated vibrator with a blend of soft and firm materials. It offers 5 distinct vibration programs and is crafted from 100% body-safe silicone, ensuring it is lead-free and phthalate-free. The device is showerproof and operates with minimal noise.



Image: The OVO F11 Vibe shown in its retail packaging, highlighting the product's design.

SAFETY INFORMATION

- **Read all instructions:** Before first use, carefully read and understand all instructions in this manual.
- **Body-safe materials:** The OVO F11 Vibe is made from 100% body-safe silicone, free from lead and phthalates. Discontinue use if irritation occurs.
- **Cleaning:** Always clean the device thoroughly before and after each use as described in the Maintenance section.

- **Water resistance:** The device is showerproof. Do not submerge it completely in water for extended periods.
- **Battery safety:** Use only the specified battery type (AAA). Do not mix old and new batteries. Remove batteries if the device will not be used for a long period. Dispose of batteries responsibly.
- **Storage:** Store the device in a cool, dry place, away from direct sunlight and out of reach of children.
- **Medical conditions:** Consult a healthcare professional before use if you have any medical conditions or concerns.

SETUP

Battery Installation

The OVO F11 Vibe requires 2 AAA batteries for operation. Ensure the batteries are inserted with the correct polarity.

1. Locate the battery compartment cap, typically at the base of the device.
2. Twist or pull the cap to open the compartment.
3. Insert two fresh AAA batteries, ensuring the positive (+) and negative (-) ends align with the indicators inside the compartment.
4. Securely close the battery compartment cap to maintain the showerproof seal.



Image: Side view of the OVO F11 Vibe, illustrating its ergonomic shape and potential battery compartment location at the base.

OPERATING INSTRUCTIONS

The OVO F11 Vibe features easy-to-reach control buttons for simple operation.

Power On/Off

- To turn on: Press and hold the power button (usually marked with a vertical line or circle) for 2-3 seconds. The device will start on its lowest setting.

- To turn off: Press and hold the power button again for 2-3 seconds until the device stops.

Changing Programs

The OVO F11 Vibe offers 5 distinct vibration programs.

- While the device is on, short press the power button to cycle through the 5 available programs.
- Each press will advance to the next program.
- The device will remember the last used program when turned off and on again.



Image: Front view of the OVO F11 Vibe, clearly showing the integrated control button for power and program selection.

MAINTENANCE

Cleaning

Proper cleaning ensures hygiene and extends the life of your device.

- Always clean the OVO F11 Vibe before and after each use.
- Wash the device with warm water and a mild, toy-friendly soap.
- Rinse thoroughly to remove all soap residue.
- Dry completely with a lint-free cloth or allow to air dry before storage.
- Do not use cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone material.

Storage

- Store the device in a clean, dry place, away from direct sunlight and extreme temperatures.
- Keep it separate from other toys made of different materials to prevent material degradation.
- Remove batteries if the device will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

- **Device does not turn on:**
 - Ensure batteries are inserted correctly with the proper polarity.
 - Replace with fresh AAA batteries.
 - Check that the battery compartment cap is securely closed.
- **Vibrations are weak or inconsistent:**
 - This usually indicates low battery power. Replace the AAA batteries.
- **Device makes unusual noise:**
 - Ensure the battery compartment is fully sealed.
 - If the noise persists and is concerning, discontinue use and contact support.

SPECIFICATIONS

Model	F11 Vibe
Brand	OVO
Material	100% Body-safe Silicone (Lead-free, Phthalate-free)
Programs	5 Vibration Programs
Water Resistance	Showerproof
Power Source	2 x AAA Batteries
Dimensions (L x W x H)	15.2 x 20.3 x 5.1 cm (approximately)

WARRANTY

The OVO F11 Vibe comes with a **15-year manufacturer warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty information provided with your product packaging or contact OVO customer support.

SUPPORT

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact OVO customer support. Details for contacting support can typically be found on the product packaging or the official OVO website.

For the latest information and product updates, please visit the official OVO website.