

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Globe](#) /

› [Globe GSG14D Single Countertop Electric Sandwich Panini Grill Instruction Manual](#)

Globe GSG14D

Globe GSG14D Single Countertop Electric Sandwich Panini Grill

INSTRUCTION MANUAL

Product Overview

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Globe GSG14D Single Countertop Electric Sandwich Panini Grill. Please read all instructions carefully before use.



Image: The Globe GSG14D Single Countertop Electric Sandwich Panini Grill, featuring a stainless steel body and a single cooking surface with a hinged top plate.

Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the grill.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical hazards, do not immerse cord, plugs, or the appliance in water or other liquid.

- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

Setup

1. **Unpacking:** Carefully remove the grill from its packaging. Retain packaging materials for future transport or storage.
2. **Inspection:** Inspect the grill for any shipping damage. If damage is found, contact your supplier immediately.
3. **Placement:** Place the grill on a stable, level, heat-resistant surface. Ensure adequate clearance around the unit for ventilation, typically at least 6 inches (15 cm) from walls or other appliances.
4. **Initial Cleaning:** Before first use, wipe down the cooking plates with a damp cloth to remove any manufacturing residues. Dry thoroughly.
5. **Power Connection:** Ensure the power switch is in the 'OFF' position. Plug the power cord into a grounded electrical outlet that matches the voltage and amperage requirements of the unit.

Operating Instructions

1. **Preheating:** Turn the power switch to 'ON'. Set the temperature control knob to the desired cooking temperature. Allow the grill to preheat for approximately 10-15 minutes, or until the indicator light signals that the set temperature has been reached.
2. **Preparing Food:** Lightly brush the cooking plates with a small amount of cooking oil or butter to prevent sticking, especially for the first use or if cooking lean items.
3. **Cooking:** Place your sandwich or panini on the bottom cooking plate. Carefully lower the top plate using the handle. The hinged design allows the top plate to adjust to the thickness of the food.
4. **Cooking Time:** Cooking times will vary depending on the food item, its thickness, and desired doneness. Monitor the food closely to prevent overcooking.
5. **Removing Food:** Use a heat-resistant, non-metallic utensil to remove cooked food from the grill. Avoid using metal utensils that could scratch the non-stick coating.
6. **After Use:** Once cooking is complete, turn the temperature control knob to the lowest setting and switch the power to 'OFF'. Unplug the unit from the electrical outlet and allow it to cool completely before cleaning.

Maintenance and Cleaning

Regular cleaning and maintenance will extend the life of your grill and ensure optimal performance.

1. **Cool Down:** Always ensure the grill is unplugged and completely cool before attempting any cleaning.
2. **Drip Tray:** The grill is equipped with a removable drip tray to collect excess grease and food particles. Empty and clean the drip tray after each use. Wash with warm, soapy water and dry thoroughly.
3. **Cooking Plates:** For light cleaning, wipe the non-stick cooking plates with a damp cloth or sponge. For stubborn food residues, dampen a cloth with warm, soapy water and gently scrub. Avoid abrasive cleaners, scouring pads, or metal brushes, as these can damage the non-stick coating.
4. **Exterior:** Wipe the exterior stainless steel surfaces with a damp cloth and mild detergent. Dry with a soft cloth. Do not use harsh chemicals or abrasive cleaners.
5. **Storage:** Store the grill in a clean, dry place when not in use.

Troubleshooting

| Problem | Possible Cause | Solution |
|-------------------------|--|---|
| Grill does not heat up. | Unit not plugged in; Power switch is off; Faulty outlet; Thermal cutout activated. | Ensure unit is securely plugged in; Turn power switch to 'ON'; Test outlet with another appliance; Allow unit to cool completely and try again. If problem persists, contact service. |
| Food sticks to plates. | Plates not properly oiled; Food residue buildup; Non-stick coating wear. | Lightly oil plates before each use; Clean plates thoroughly after each use; If coating is worn, consider professional re-coating or replacement. |
| Uneven cooking. | Improper preheating; Food not evenly distributed; Grill not level. | Allow full preheating time; Ensure food is spread evenly; Place grill on a level surface. |




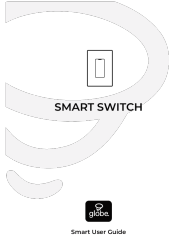


Specifications

- **Model:** GSG14D
- **Brand:** Globe
- **Type:** Single Countertop Electric Sandwich Panini Grill
- **Material:** Stainless Steel
- **Special Feature:** Non Stick Coating
- **Style:** Electric
- **Color:** Stainless
- **ASIN:** B00C35MDKU
- **Date First Available:** March 29, 2013

Warranty and Support

For specific warranty information, please refer to the documentation provided with your purchase or contact Globe customer service directly. If you require technical assistance or have questions not covered in this manual, please contact the manufacturer or your authorized service provider.

Related Documents - GSG14D

| | |
|---|---|
|  | <p>Globe Electric Countertop Panini/Sandwich Grill Instruction Manual</p> <p>Instruction manual for Globe Electric Countertop Panini/Sandwich Grill models GPG1410, GSG1410, GPG1410-C, and GSG1410-C, covering installation, operation, safety, cleaning, troubleshooting, and warranty information.</p> |
|  | <p>Globe GPG1410 Panini Grill Parts Catalog and Wiring Diagram</p> <p>Comprehensive parts catalog and wiring diagram for the Globe GPG1410 Panini Grill, including component lists, part numbers, and electrical schematics for service and maintenance.</p> |
|  | <p>Globe Streamwatch Xtreme Prepaid User Manual and Setup Guide</p> <p>Comprehensive user manual for the Globe Streamwatch Xtreme Prepaid device. Learn how to connect to the internet, stream content on your TV, access apps via Google Play, and find troubleshooting solutions. Includes setup guides and device information.</p> |
|  | <p>Globe Smart Switch User Guide</p> <p>User guide for the Globe Smart Switch, detailing installation, setup via the Globe Suite™ app, features like remote control, scheduling, and voice assistant integration. Learn how to enhance your home with smart lighting control.</p> |
|  | <p>Globe Running Boards Assembly Guide for Haul LT Bicycle</p> <p>Step-by-step instructions and safety information for assembling Globe Running Boards onto your Globe Haul LT bicycle, including parts lists, torque specifications, and weight limits.</p> |
|  | <p>Globe SMART FLOOR LAMP User Manual and Setup Guide</p> <p>Comprehensive guide for the Globe SMART FLOOR LAMP, including safety instructions, features, specifications, assembly, and connecting to the Globe Suite app and voice assistants like Google Home and Amazon Alexa.</p> |