

LG AKB73575401

LG AKB73575401 Home Theater Sound Bar Remote Control User Manual

Model: AKB73575401

1. INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your LG AKB73575401 Home Theater Sound Bar Remote Control. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The LG AKB73575401 is an original equipment manufacturer (OEM) remote control designed for specific LG Home Theater Sound Bar Speaker systems. It provides comprehensive control over your sound bar's functions, including power, volume, input selection, sound modes, and media playback.



Image 1: Front view of the LG AKB73575401 Home Theater Sound Bar Remote Control. The remote is black with various gray and black buttons, including a prominent red power button at the top.

3. BATTERY INSTALLATION

The remote control requires two AAA batteries (not included).

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Replace both batteries at the same time. Do not mix old and new batteries or different types of batteries. Remove batteries if the remote control will not be used for an extended period.

4. SETUP

This remote control is an original LG part and is typically pre-programmed to work with compatible LG Home Theater Sound Bar Speaker systems. No complex setup or pairing procedure is usually required. Simply install the batteries and point the remote towards your sound bar.

- Ensure your sound bar is powered on and within the remote's operating range (up to 10 meters).
- Point the remote control directly at the infrared (IR) receiver on your sound bar.

5. OPERATING INSTRUCTIONS

Familiarize yourself with the buttons on your remote control and their functions:

Button	Function
Power (red circle)	Turns the sound bar system ON or OFF.
INPUT	Cycles through available input sources (e.g., Optical, Bluetooth, HDMI).
OPTICAL	Directly selects the Optical input source.
FOLDER (up/down arrows)	Navigates through folders on connected media (e.g., USB).
VOL + / -	Adjusts the main volume level of the sound bar.
MUTE	Mutes or unmutes the sound bar's audio output.
AUTO POWER	Activates or deactivates the auto power on/off feature.
AV SYNC	Adjusts audio and video synchronization to prevent lip-sync issues.
INFO	Displays information about the current input, track, or settings.

Button	Function
REPEAT	Controls playback repeat modes (e.g., repeat one, repeat all).
Navigation Pad (Up, Down, Left, Right, Center)	Used for menu navigation and selection.
Playback Controls (Rewind, Stop, Play/Pause, Fast Forward)	Standard controls for media playback.
SOUND EFFECT	Cycles through various pre-set sound effects or equalization modes.
3D SOUND	Activates or deactivates the 3D sound processing mode.
WOOFER LEVEL	Adjusts the output level of the connected subwoofer.
Number Buttons (0-9)	Used for direct track selection or other numerical inputs.
DOLBY DRC	Activates or deactivates Dolby Dynamic Range Control for optimized listening at low volumes.
SLEEP	Sets a sleep timer for the sound bar.
TV Power (red button, bottom section)	Turns the connected TV ON or OFF.
TV MUTE	Mutes or unmutes the TV's audio output.
TV VOL + / -	Adjusts the volume level of the connected TV.
TV PR/CH ^ / v	Changes the channel on the connected TV.
TV AV/INPUT	Cycles through the input sources of the connected TV.

6. MAINTENANCE

Cleaning the Remote Control

- Wipe the remote control with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.

Battery Replacement

When the remote control's range decreases or it becomes unresponsive, it is time to replace the batteries. Follow the battery installation steps outlined in Section 3.

7. TROUBLESHOOTING

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Remote control does not work.	• Check if the batteries are inserted correctly with the correct polarity. • Replace old or depleted batteries with new ones. • Ensure there are no obstructions between the remote control and the sound bar's IR receiver. • Make sure the remote is pointed directly at the sound bar. • Verify the sound bar is powered on.
Short operating range.	• Batteries may be low; replace them. • Ensure no strong light sources (e.g., direct sunlight, fluorescent lights) are interfering with the IR signal.
Specific buttons do not respond.	• The button may be stuck or damaged. • Ensure the remote is compatible with the specific function you are trying to use (e.g., some buttons are for TV control).

8. SPECIFICATIONS

- **Model Number:** AKB73575401
- **Brand:** LG
- **Compatible Devices:** LG Home Theater Sound Bar Speaker Systems
- **Connectivity Technology:** Infrared (IR)
- **Maximum Range:** Approximately 10 meters (33 feet)
- **Battery Type:** 2 x AAA (Alkaline recommended)
- **Controller Type:** Remote Control
- **Special Feature:** Ergonomic design

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your LG Home Theater Sound Bar Speaker system or visit the official LG website. As an OEM part, the remote control's warranty is typically covered under the main product's warranty.

You can also visit the [LG Store on Amazon](#) for additional product information and support resources.