

Unique Sparkle Deluxe Favor Bag

Unique Disney Princess Sparkle Deluxe Favor Bag User Manual

Model: Sparkle Deluxe Favor Bag

[Product Overview](#)

[Intended Use](#)

[Setup & Operating](#)

[Care & Handling](#)

[Safety](#)

[Information](#)

[Specifications](#)

[Warranty & Support](#)

1. PRODUCT OVERVIEW

The Unique Disney Princess Sparkle Deluxe Favor Bag is designed for holding party favors. It features illustrations of Disney Princesses Belle, Ariel, and Aurora. This bag is suitable for various party themes and can be coordinated with other party supplies.

- **Dimensions:** Approximately 13 inches (H) x 11 inches (W).
- **Design:** Features Belle, Ariel, and Princess Aurora.
- **Quantity:** One (1) favor bag per pack.



Image 1.1: Front view of the Disney Princess Sparkle Deluxe Favor Bag. The bag displays colorful illustrations of Princess Belle, Ariel, and Aurora on a sparkling background.

2. INTENDED USE

This favor bag is intended for packaging and distributing small party favors, treats, or pinata fillers at themed events and celebrations. It is designed for light-duty use and is not intended for heavy or sharp objects.

3. SETUP & OPERATING

3.1. Filling the Bag

1. **Open the Bag:** Gently open the top of the favor bag.
2. **Insert Items:** Place desired party favors, candies, or small gifts inside the bag. Ensure items are not excessively heavy or have sharp edges that could puncture the bag.
3. **Distribute:** Hand out the filled favor bags to guests as intended.

Note: Avoid overfilling the bag to prevent tearing or damage to the handles.

4. CARE & HANDLING

To maintain the appearance and integrity of the favor bag:

- **Storage:** Store in a cool, dry place away from direct sunlight to prevent fading of the design.
- **Cleaning:** If necessary, gently wipe the exterior with a dry or slightly damp cloth. Do not immerse in water or use harsh cleaning agents.
- **Avoid:** Do not expose to extreme temperatures, open flames, or sharp objects.

5. SAFETY INFORMATION

- This product is not a toy. Keep out of reach of small children to prevent suffocation hazards from plastic bags.
- Dispose of the bag properly after use to avoid environmental litter.
- Do not place hot items or liquids directly into the bag.

6. SPECIFICATIONS

Feature	Detail
Brand	Unique
Model	Sparkle Deluxe Favor Bag
Theme	Princess
Cartoon Character	Princess (Belle, Ariel, Aurora)
Dimensions (H x W)	13 inches x 11 inches (approximate)
Number of Items	1
Item Form	Bag
UPC	011179433414
ASIN	B00C59AL8K

7. WARRANTY & SUPPORT

7.1. Warranty Information

This product is provided without a manufacturer's warranty. Please inspect the item upon receipt for any defects.

7.2. Customer Support

For questions or concerns regarding this product, please contact the retailer or the manufacturer, Unique Party Favors, through their official customer service channels.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question