

Memorex 02980

Memorex 02980 Rechargeable Bluetooth Travel Speaker Instruction Manual

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Memorex 02980 Rechargeable Bluetooth Travel Speaker. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your listening experience. The speaker features a compact, folding design, Bluetooth wireless audio streaming, a four-speaker stereo system, a rechargeable battery, and an integrated microphone for hands-free calling.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Memorex 02980 Rechargeable Bluetooth Travel Speaker
- Charging Cord (for NiMH rechargeable battery)

PRODUCT FEATURES

The Memorex 02980 speaker offers the following key features:

- Bluetooth-enabled wireless audio streaming
- Four-speaker stereo performance
- NiMH rechargeable battery (charging cord included)
- Integrated microphone for hands-free calling
- Downloadable Memorex Voice Changing app compatibility

SETUP

1. Charging the Speaker

Before initial use, fully charge the speaker's internal NiMH rechargeable battery. Connect the provided charging cord to the speaker's charging port and to a compatible USB power source. The charging indicator light will illuminate during

charging and turn off or change color when fully charged. A full charge provides up to six hours of playback time.

2. Powering On/Off

To power on the speaker, press and hold the **Power button** (usually marked with a power symbol) located on the control panel until the indicator light illuminates. To power off, press and hold the **Power button** again until the indicator light turns off.



Image: Front view of the Memorex 02980 speaker with its protective cover open, revealing the speaker grille and control panel. The power button is visible on the right side of the control panel.

3. Bluetooth Pairing

1. Ensure the speaker is powered on and within 1 meter (3 feet) of your Bluetooth-enabled device (smartphone, tablet, laptop, etc.).
2. The speaker will automatically enter pairing mode when powered on for the first time, or if no device is connected. The Bluetooth indicator light will flash rapidly.
3. On your device, navigate to the Bluetooth settings and enable Bluetooth.
4. Search for available devices. The speaker will appear as "Memorex 02980" or similar.
5. Select the speaker from the list to initiate pairing.
6. Once paired, the Bluetooth indicator light on the speaker will become solid, indicating a successful connection.

Note: If prompted for a password, enter "0000".

4. Hands-Free Calling

When connected to a smartphone via Bluetooth, the integrated microphone allows for hands-free calling. When a call comes in, the speaker will ring. Press the **Call button** (often marked with a phone icon) on the speaker to answer. Press it again to end the call.

OPERATING THE SPEAKER

1. Audio Playback

After successful Bluetooth pairing, you can play audio from your connected device. Use the volume controls on the speaker (usually '+' and '-' buttons) or on your device to adjust the playback volume. The speaker's four-speaker design delivers stereo sound.



Image: Angled view of the Memorex 02980 speaker, showcasing its compact, folding design and the side panel where charging and auxiliary ports may be located.

2. Memorex Voice Changing App

The Memorex Voice Changing App can be downloaded to apply various effects to your voice recordings. Refer to the app's specific instructions for details on its features and usage. This app is compatible with your Memorex 02980 speaker.

MAINTENANCE

1. Cleaning

To clean the speaker, use a soft, dry cloth. Do not use liquid cleaners, aerosols, or solvents, as these may damage the surface or internal components. Ensure the speaker is powered off and disconnected from any power source before cleaning.

2. Battery Care

To prolong the life of the NiMH rechargeable battery:

- Avoid fully discharging the battery frequently.
- Store the speaker in a cool, dry place when not in use for extended periods.
- Recharge the battery at least once every three months if stored for a long time.
- Do not expose the speaker to extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Memorex 02980 speaker, refer to the following common solutions:

Problem	Solution
Speaker does not power on.	Ensure the battery is charged. Connect the speaker to a power source using the charging cord and try again.
Cannot pair via Bluetooth.	• Ensure the speaker is in pairing mode (flashing Bluetooth indicator). • Make sure Bluetooth is enabled on your device. • Move the speaker closer to your device (within 1 meter). • Turn off and on both the speaker and your device's Bluetooth. • Forget the device from your phone's Bluetooth settings and try pairing again.
No sound during playback.	• Check that the speaker is successfully paired with your device. • Increase the volume on both the speaker and your connected device. • Ensure the audio source is playing on your device.
Poor audio quality or disconnections.	• Move the speaker closer to your device. • Remove any obstacles between the speaker and your device. • Avoid interference from other wireless devices.

SPECIFICATIONS

Feature	Detail
Model Name	02980
Brand	Memorex
Connectivity Technology	Bluetooth
Wireless Communication Technology	Wireless
Audio Output Mode	Stereo
Surround Sound Channel Configuration	4.0
Special Feature	Built-in Microphone

Feature	Detail
Power Source	Battery Powered (NiMH rechargeable)
Recommended Uses	Music, Portable/Mobile Use
Compatible Devices	Desktop, Laptop, Smartphone, Tablet
Control Method	App (Memorex Voice Changing App)
Color	Black
Product Dimensions	3.25 x 9.75 x 4.6 inches
Item Weight	1.4 pounds
Manufacturer	Imation Enterprises Corp
UPC / GTIN	749720029808
Date First Available	March 1, 2013

WARRANTY AND SUPPORT

The Memorex 02980 Rechargeable Bluetooth Travel Speaker comes with a**Limited Warranty**. For specific warranty terms, conditions, and duration, please refer to the warranty card included with your product or contact Memorex customer support directly. For technical assistance or further inquiries, please visit the official Memorex website or contact their customer service department.

© 2023 Memorex. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question