

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GEORGE KOVACS](#) /

› [GEORGE KOVACS P5040-084-L Tube LED Wall Sconce Instruction Manual](#)

GEORGE KOVACS P5040-084-L

GEORGE KOVACS P5040-084-L Tube LED Wall Sconce Instruction Manual

Model: P5040-084-L



1. INTRODUCTION

This manual provides detailed instructions for the safe installation, operation, and maintenance of your GEORGE KOVACS P5040-084-L Tube LED Wall Sconce. Please read all instructions carefully before beginning installation and retain this manual for future reference.

Important Safety Information: Always turn off the main power supply at the circuit breaker before installing or servicing the fixture. Consult a qualified electrician if you are unsure about the installation process.

2. PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- LED Wall Sconce Fixture (1)
- Mounting Hardware (1 set)
- Instruction Manual (1)





Figure 2.1: The GEORGE KOVACS P5040-084-L Tube LED Wall Sconce, featuring a brushed nickel finish and an etched opal glass shade.

3. SPECIFICATIONS

Feature	Detail
Model Number	P5040-084-L
Dimensions (H x W)	13.25 inches x 4.75 inches
Weight	Approximately 3.68 lbs
Material	Aluminum Casting, Steel, Glass
Finish	Brushed Nickel
Shade Material	Etched Opal Glass
Light Source	Integrated LED Module
Wattage	12 Total Watts
Lumen Output	633 Lumens
Color Temperature	3000K (Warm White)
CRI	92
Dimmable	Yes
Voltage	120 Volts
Certifications	ETL Certified, Title 24, ADA Compliant
Location Use	Damp Rated (Indoor)





Figure 3.1: Dimensional view of the wall sconce, illustrating its height and width for installation planning.

4. SETUP AND INSTALLATION

Before you begin: Ensure the power is OFF at the circuit breaker. This fixture is designed for wall mount installation to an existing junction box (junction box not included).

1. **Prepare the Area:** Turn off power at the main electrical panel. Clear the installation area.
2. **Mount the Mounting Plate:** Attach the mounting plate (included in hardware) to the junction box using the provided screws. Ensure it is securely fastened.
3. **Make Electrical Connections:**
 - Connect the **green or bare copper** ground wire from the fixture to the **green or bare copper** ground wire from the junction box.
 - Connect the **white** wire from the fixture to the **white** (neutral) wire from the junction box.

- Connect the **black** wire from the fixture to the**black** (hot) wire from the junction box.
- Secure all connections with wire nuts (provided).

4. **Secure the Fixture:** Carefully tuck all wires into the junction box. Align the fixture with the mounting plate and secure it using the provided screws.

5. **Install the Glass Shade:** Gently slide the etched opal glass shade onto the fixture, ensuring it is properly seated and secured according to the design.

6. **Restore Power:** Turn the power back ON at the main electrical panel.



Figure 4.1: Detailed view of the sconce's base and glass shade, illustrating the aesthetic and potential attachment points.

5. OPERATING INSTRUCTIONS

The GEORGE KOVACS P5040-084-L Tube LED Wall Sconce is designed for simple operation.

- **Power On/Off:** Operate the fixture using a standard wall switch connected to the electrical circuit.
- **Dimming Functionality:** This fixture is dimmable. To utilize the dimming feature, ensure you have a compatible LED dimmer switch installed on the circuit. Follow the dimmer switch manufacturer's instructions for proper operation.

6. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your wall sconce.

- **Cleaning:**
 - Ensure the power is OFF before cleaning.
 - Wipe the fixture with a soft, dry cloth.
 - For the glass shade, use a mild glass cleaner applied to a cloth, then wipe the shade. Avoid spraying cleaner directly onto the fixture.
 - Do not use abrasive cleaners or solvents, as these may damage the finish.
- **LED Module:** The LED module is integrated and designed for long-term use. It is not user-replaceable. If the LED module fails, contact customer support for assistance.

7. TROUBLESHOOTING

If you experience issues with your wall sconce, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fixture does not light up.	<ul style="list-style-type: none">• Power is off at the circuit breaker or wall switch.• Loose or incorrect wiring connections.• Faulty LED module (unlikely for new product).	<ul style="list-style-type: none">• Ensure power is ON at the circuit breaker and wall switch.• Turn off power, check all wiring connections for security and correctness.• Contact customer support if wiring is correct and power is supplied.
Light flickers or dims inconsistently.	<ul style="list-style-type: none">• Incompatible dimmer switch.• Loose wiring connection.	<ul style="list-style-type: none">• Ensure an LED-compatible dimmer switch is used.• Turn off power, check wiring connections.
Fixture makes humming noise.	<ul style="list-style-type: none">• Incompatible dimmer switch.	<ul style="list-style-type: none">• Replace with a high-quality, LED-compatible dimmer switch.

8. WARRANTY AND SUPPORT

Warranty: This GEORGE KOVACS fixture comes with a one-year limited warranty from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from improper installation, accident, misuse, abuse, or unauthorized modifications.

For warranty claims or technical support, please contact GEORGE KOVACS customer service. Please have your model number (P5040-084-L) and proof of purchase available.

Manufacturer: Minka Lighting LLC.

For more information, visit the official [GEORGE KOVACS Store](#).

© 2023 GEORGE KOVACS. All rights reserved.