

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Casio](#) /
- › [Casio DB-360G-9A Gold Digital Watch User Manual](#)

## Casio DB-360G-9A

# Casio DB-360G-9A Gold Digital Watch User Manual

Model: DB-360G-9A

## INTRODUCTION

This manual provides detailed instructions for the proper use and maintenance of your Casio DB-360G-9A Gold Digital Watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece. Keep this manual for future reference.



**Figure 1:** Casio DB-360G-9A Gold Digital Watch. The watch features a digital display showing time, day, and date, surrounded by function buttons for adjustment, mode selection, setting, light activation, and 12/24-hour format. The display also highlights its multi-lingual data bank, water resistance, and 10-year battery life, along with indicators for five alarms.

## SETUP

---

Before using your watch, perform the initial setup steps to configure time, date, and other basic settings.

### 1. Time Setting:

- Press the **MODE** button repeatedly until the time setting screen appears (usually indicated by flashing digits).
- Use the **ADJUST** button to select the digit you wish to change.
- Use the **FORWARD** and **REVERSE** buttons to change the value of the selected digit.
- Press **SET** to confirm and exit the time setting mode.

### 2. Date Setting:

- Similar to time setting, navigate to the date setting screen using the **MODE** button.
- Adjust the year, month, and day using the **ADJUST**, **FORWARD**, and **REVERSE** buttons.
- Confirm with **SET**.

### 3. 12/24-Hour Format:

- In the regular timekeeping mode, press the **12/24H** button to toggle between 12-hour and 24-hour display formats.

## OPERATING INSTRUCTIONS

---

Your Casio DB-360G-9A watch offers several functions accessible via the **MODE** button.

- **Timekeeping Mode:** Displays the current time, day of the week, and date. This is the default mode.
- **Data Bank Mode:**
  - Press **MODE** until "DATA BANK" appears on the display.
  - This feature allows you to store names and telephone numbers. Refer to the full Casio module manual for detailed data entry and retrieval instructions.
  - Use **FORWARD** and **REVERSE** to scroll through entries.
- **Alarm Mode:**
  - Press **MODE** until "ALARM" appears. The watch supports up to five independent alarms (ALARM 1-5).
  - Use **FORWARD** or **REVERSE** to select the desired alarm number.
  - Press **ADJUST** to enter alarm setting mode, then use **FORWARD** and **REVERSE** to set the alarm time.
  - Press **SET** to activate/deactivate the alarm and exit setting mode.
- **LED Backlight:**
  - Press the **LIGHT** button to illuminate the display for easy viewing in low-light conditions.

## MAINTENANCE

---

- **Cleaning:** Wipe the watch case and band with a soft, dry cloth. For stubborn dirt, use a soft cloth dampened with water and a mild neutral detergent, then wipe dry. Avoid harsh chemicals.

- **Water Resistance:** This watch is marked "WATER RESIST". This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is not suitable for swimming, diving, or hot water activities. Do not operate buttons while the watch is wet.
- **Battery Replacement:** The watch features a "10 YEAR BATTERY". When the display becomes dim or functions become erratic, it indicates a low battery. Battery replacement should be performed by a qualified watch technician to ensure water resistance is maintained.
- **Storage:** When not in use for extended periods, store the watch in a cool, dry place away from direct sunlight and extreme temperatures.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery. Consult a qualified technician.
Time is incorrect.	Time not set correctly or accidental adjustment.	Refer to the "Time Setting" section under Setup to reset the time.
Buttons do not respond.	Watch may be in a locked mode or internal malfunction.	Try pressing all buttons firmly. If unresponsive, a battery replacement or service may be required.
Water inside the display.	Water resistance compromised.	Immediately take the watch to a qualified service center. Do not attempt to dry it yourself.

## SPECIFICATIONS

- **Model Number:** DB-360G-9A
- **Brand:** Casio
- **Display Type:** Digital
- **Case Material:** Resin with gold-tone finish
- **Band Material:** Stainless steel with gold-tone finish
- **Clasp Type:** Jewelry Clasp
- **Water Resistance:** Water Resist (suitable for splashes, not swimming)
- **Battery Life:** Approximately 10 years
- **Functions:** Timekeeping, Data Bank, Alarm (5), LED Backlight, 12/24-hour format
- **Product Dimensions:** 1.48 x 0.41 x 1.7 inches (37.6 x 10.4 x 43.2 mm)
- **Item Width:** 10.4 millimeters
- **Weight:** 4.8 ounces (136 grams)


## WARRANTY AND SUPPORT


Your Casio DB-360G-9A watch is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty period and coverage details.

For technical support, service, or further inquiries, please visit the official Casio website or contact their customer service department. Contact information can typically be found on the warranty card or Casio's official support pages.

*Note: Unauthorized repairs or modifications may void your warranty.*

Related Documents - DB-360G-9A

	<p><a href="#">Casio 3578 Watch User Manual</a></p> <p>Comprehensive user manual for the Casio 3578 watch, covering setup, features, functions, and troubleshooting. Learn how to use your Casio watch with detailed instructions and explanations.</p>
	<p><a href="#">Casio 2488 User's Guide: Features and Operation</a></p> <p>Comprehensive user's guide for the Casio 2488 watch, detailing its Timekeeping, Data Bank, Day Counter, Alarm, Stopwatch, and Dual Time modes. Learn how to set time, dates, manage data, and use advanced functions.</p>
	<p><a href="#">Casio Operation Guide 3410: Comprehensive Features and Usage</a></p> <p>Detailed operation guide for the Casio 3410 watch, covering its advanced features such as altimeter, barometer, thermometer, digital compass, radio-controlled atomic timekeeping, stopwatch, countdown timer, alarms, and illumination. Includes setup, usage instructions, troubleshooting, and specifications.</p>
	<p><a href="#">Casio 3228 Operation Guide</a></p> <p>Comprehensive operation guide for the Casio 3228 digital watch, covering timekeeping, data bank, calculator, alarms, stopwatch, dual time, and illumination features.</p>
	<p><a href="#">Casio G-200 Watch Module 2387 User Manual</a></p> <p>Comprehensive user manual for the Casio G-200 digital watch, module 2387. Learn about timekeeping, alarm functions, stopwatch operations, water resistance, and specifications.</p>

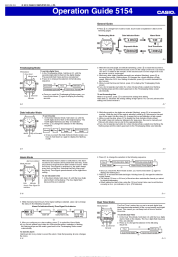

### [Casio 5154 Operation Guide: Timekeeping, Alarms, and Dual Time](#)

Detailed operation guide for the Casio 5154 watch, covering timekeeping, date setting, alarms, dual time, and stopwatch functions. Includes specifications and mode explanations.