

Lincat J559

Lincat BR15 Wall Brackets Instruction Manual

Model: J559

1. INTRODUCTION

The Lincat BR15 Wall Brackets are designed to provide secure and stable mounting for various Lincat catering equipment models, including the GR3, LSC, LPC, and LGT series. These brackets ensure your equipment is safely elevated, optimizing kitchen space and operational efficiency. This manual provides essential information for the correct installation, usage, and maintenance of your BR15 Wall Brackets.

2. SAFETY INFORMATION

Read all instructions carefully before installation and use. Failure to follow these instructions may result in property damage or personal injury.

- **Qualified Installation:** Installation should only be performed by a qualified and competent person.
- **Wall Structure:** Ensure the wall or mounting surface is structurally sound and capable of supporting the combined weight of the brackets and the equipment to be mounted. Consult a structural engineer if unsure.
- **Correct Fasteners:** Use only appropriate fasteners (screws, anchors, etc.) suitable for your specific wall material (e.g., brick, concrete, stud wall).
- **Weight Capacity:** Do not exceed the maximum weight capacity of the brackets. Refer to the specifications section for details.
- **Secure Mounting:** Ensure all fasteners are tightened securely before placing any equipment on the brackets.
- **Regular Inspection:** Periodically inspect the brackets and mounting points for any signs of wear, damage, or loosening.

3. PACKAGE CONTENTS

Verify that all components are present and undamaged upon unpacking.

- 1 set of Lincat BR15 Wall Brackets
- Mounting hardware (screws, wall plugs - specific types and quantities may vary based on region and supplier)

4. SETUP AND INSTALLATION

Follow these steps for proper installation of your Lincat BR15 Wall Brackets.

1. **Choose Location:** Select a suitable wall location that is clear of electrical wiring, plumbing, and other obstructions. Ensure there is adequate space around the mounted equipment for ventilation and operation.
2. **Mark Drilling Points:** Hold one bracket against the wall at the desired height and use a pencil to mark the positions for the mounting holes. Ensure the marks are level. Repeat for the second bracket, ensuring correct spacing for your Lincat equipment.
3. **Drill Holes:** Using an appropriate drill bit for your wall type and fasteners, drill holes at the marked positions. If using wall plugs, insert them flush with the wall surface.
4. **Secure Brackets:** Align the brackets with the drilled holes and secure them firmly to the wall using the provided or appropriate mounting hardware. Ensure both brackets are level and securely fastened.
5. **Mount Equipment:** Carefully lift your Lincat GR3, LSC, LPC, or LGT series equipment and place it onto the installed BR15 Wall Brackets. Ensure the equipment is stable and properly seated on both brackets.



Image: Lincat BR15 Wall Brackets. This image illustrates the general appearance of the wall brackets.

5. USAGE GUIDELINES

Once installed, the Lincat BR15 Wall Brackets provide a stable platform for your Lincat catering equipment. Adhere

to the following guidelines for safe and effective use:

- **Secure Placement:** Always ensure the equipment is correctly and securely positioned on both brackets.
- **Weight Limits:** Do not overload the brackets. Always refer to the weight specifications of both the brackets and the equipment being mounted.
- **Stability Check:** Periodically check the stability of the mounted equipment and the brackets, especially after moving or adjusting the equipment.

6. MAINTENANCE

Proper maintenance ensures the longevity and continued safety of your Lincat BR15 Wall Brackets.

- **Cleaning:** Clean the brackets regularly with a damp cloth and mild detergent. Avoid abrasive cleaners or solvents that could damage the finish.
- **Inspection:** Routinely inspect all mounting points, screws, and the brackets themselves for any signs of corrosion, bending, cracks, or loosening. Address any issues immediately.
- **Tighten Fasteners:** If any fasteners appear loose, carefully re-tighten them. Do not overtighten.

7. TROUBLESHOOTING

This section addresses common issues you might encounter with your wall brackets.

- **Issue: Brackets feel loose after installation.**
Solution: Ensure all mounting screws are fully tightened. If the issue persists, the wall anchors may be insufficient for the wall material or weight. Consult a professional for assessment and re-installation with appropriate hardware.
- **Issue: Equipment is not level on the brackets.**
Solution: Re-check the installation of both brackets using a spirit level. Adjust as necessary. Ensure the equipment itself is placed evenly on the brackets.
- **Issue: Visible damage or bending on the brackets.**
Solution: Immediately remove the equipment from the damaged brackets. Do not use damaged brackets. Contact Lincat customer support for replacement parts or advice.

8. SPECIFICATIONS

Feature	Detail
Model Number	J559
Compatible Equipment	Lincat GR3, LSC, LPC, LGT series
Package Dimensions	19.92 x 12.76 x 4.57 inches
Package Weight	3.35 Pounds
Manufacturer	Lincat

9. WARRANTY AND SUPPORT

For detailed warranty information, product support, or to inquire about replacement parts, please contact Lincat

customer service directly. Keep your purchase receipt as proof of purchase.

Lincat Contact Information: Please refer to the official Lincat website or your product packaging for the most current contact details.

© 2023 Lincat. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question