

Nokia 114

Nokia 114 Dual SIM Mobile Phone User Manual

Model: 114

INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Nokia 114 Dual SIM mobile phone. Please read these instructions carefully to ensure proper use and to maximize the device's performance and longevity.

SETUP

1. SIM Card Installation

The Nokia 114 supports two Mini SIM cards. Follow these steps to install your SIM cards:

1. Turn off the phone and remove the back cover.
2. Locate the SIM card slots. The phone features an Easy Swap function for convenient SIM management.
3. Insert your Mini SIM cards into the designated slots, ensuring the gold contacts face downwards and the cut corner aligns correctly.
4. Replace the back cover.



Image: Nokia 114 with two Mini SIM cards being inserted.

2. Battery Installation

To install the battery:

1. With the back cover removed, align the Nokia BL-5C 1020 mAh Lithium-Ion battery with the battery compartment.
2. Gently press the battery into place until it is securely seated.
3. Replace the back cover.

3. Charging the Battery

Before first use, fully charge the battery using the provided Nokia Charger AC-11.

1. Connect the charger to the phone's charging port.
2. Plug the charger into a wall outlet.
3. The battery indicator on the screen will show charging progress.
4. Once fully charged, disconnect the charger.

OPERATING INSTRUCTIONS

1. Power On/Off

- To power on, press and hold the Power key until the phone vibrates and the screen lights up.
- To power off, press and hold the Power key, then select 'Power off' from the options.

2. Making Calls and Sending Messages

- Use the keypad to dial a number and press the Call key to initiate a call.
- To send a message, navigate to the 'Messages' menu, select 'Create message', type your text using the keypad, and send it to the desired recipient.

3. Display and Navigation

The Nokia 114 features a 1.8-inch portrait QVGA LCD transmissive display with 128 x 160 pixels resolution. Navigation is primarily done using the physical keypad.



Image: Front view of the Nokia 114 mobile phone.

4. Camera Usage

The phone is equipped with a 0.3 MP rear camera. It supports basic photography features:

- **Image Editor:** Basic editing functions for captured photos.
- **4x Digital Zoom:** Magnify subjects before capturing.
- **Exposure Compensation:** Adjust brightness levels.
- **Landscape Orientation:** Capture photos in a wider format.
- The screen acts as a full-screen viewfinder.

5. Memory and Storage

The Nokia 114 has 16 MB of internal memory and supports expandable memory up to 32 GB via a microSD card (not included). This allows for storage of photos, music, and other files.

6. Connectivity

The device supports 2G networks for calls and basic internet access. It does not support 3G or Wi-Fi connectivity.

7. Special Features

- **E-mail:** Access your email accounts on the go.
- **FM Radio:** Listen to your favorite radio stations.
- **Video Player & Music Player:** Enjoy multimedia content.
- **Internet & Facebook:** Basic web browsing and social media access.
- **Games:** Pre-installed games for entertainment.

MAINTENANCE

1. General Care

- Keep the phone dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will corrode electronic circuits.
- Do not use or store the phone in dusty or dirty areas.
- Do not store the phone in high temperatures. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the phone in cold temperatures. When the phone returns to its normal temperature, moisture can form inside the phone and damage electronic circuit boards.
- Do not attempt to open the phone other than as instructed in this manual.
- Do not drop, knock, or shake the phone. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.

2. Battery Care

- Only use original Nokia batteries and chargers.
- Do not short-circuit the battery.
- Do not expose the battery to extreme temperatures.

TROUBLESHOOTING

If you encounter issues with your Nokia 114, try the following basic troubleshooting steps:

- **Phone not turning on:** Ensure the battery is correctly installed and charged. Try charging the phone for at least 30 minutes before attempting to power it on again.
- **Poor call quality:** Check your network signal strength. Move to an area with better reception. Ensure the earpiece/speaker is not obstructed.
- **Keypad auto-locks:** This is a standard feature. To unlock, follow the on-screen instructions, usually by pressing a specific key combination.
- **Dual SIM not functioning:** Verify both SIM cards are correctly inserted and activated by your service provider. Check SIM settings in the phone menu.
- **Phone freezing or unresponsive:** Remove the battery, wait a few seconds, and then reinsert it and power on the phone.

For more complex issues, refer to the visual user guide included in the box or contact Nokia customer support.

SPECIFICATIONS

Feature	Detail
Brand	Nokia
Model	114
Display	1.8-inch QVGA LCD (128 x 160 pixels)
Camera	0.3 MP Rear Camera
Memory (Internal)	16 MB
Expandable Memory	Up to 32 GB (microSD)
SIM Card Slot Count	Dual SIM (Mini)
Cellular Technology	2G (GSM)
Operating System	Nokia Series 40 Asha
Battery Capacity	1020 mAh Lithium-Ion
Talk Time	Up to 10.5 hours (630 minutes)
Dimensions (L x W x H)	11 x 4.6 x 1.5 cm
Weight	80 Grams
Human Interface	Keypad
Material	Plastic

WHAT'S IN THE BOX

Your Nokia 114 package includes the following items:

- Nokia 114 Mobile Phone

- Nokia Charger AC-11
- Nokia Battery BL-5C 1020 mAh
- Nokia Stereo Headset WH-102
- Visual User Guide

PRODUCT OVERVIEW VIDEO

Watch this video for a quick overview of the Nokia 114's features and contents.

Your browser does not support the video tag.

Video: A brief overview of the Nokia 114 mobile phone, highlighting its display, camera, memory, connectivity, operating system, special features, and included accessories.

WARRANTY AND SUPPORT

The Nokia 114 comes with a 1-year manufacturer warranty for the device and a 6-month manufacturer warranty for in-box accessories, including batteries, from the date of purchase. For warranty claims or technical support, please refer to the contact information provided in your visual user guide or visit the official Nokia support website.