

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [STANLEY](#) /

› [Stanley 31181 Outdoor Remote Control System User Manual](#)

STANLEY 31181

Stanley 31181 Outdoor Remote Control System User Manual

Model: 31181

INTRODUCTION

This manual provides instructions for the safe and efficient operation of your Stanley 31181 Outdoor Remote Control System. This system includes two grounded outdoor receivers and one handheld wireless remote control, designed to manage electrical appliances from a distance.

SAFETY INFORMATION

- **Outdoor Use Only:** Ensure receivers are used in appropriate outdoor, weather-protected locations.
- **Electrical Rating:** Do not exceed the maximum electrical rating of 8A/125V/1000W 60Hz Tungsten. Overloading can cause damage or fire.
- **Grounded Outlets:** Always plug the receivers into a grounded outlet.
- **Water Exposure:** While designed for outdoor use, avoid direct submersion or excessive water exposure. Ensure connections are secure and protected.
- **Children and Pets:** Keep the remote control and receivers out of reach of children and pets.
- **Inspection:** Regularly inspect the cords and units for any signs of damage. Discontinue use if damage is found.

PACKAGE CONTENTS

- 2 x Stanley Outdoor Remote Control Receivers
- 1 x Stanley Wireless Handheld Remote Control
- 1 x Lithium Ion Battery (pre-installed in remote)



Image: Stanley 31181 Outdoor Remote Control System components, including two grounded outdoor receivers and one handheld remote control.

SETUP

1. **Unpack Components:** Carefully remove all items from the packaging.
2. **Remote Battery:** The remote control comes with a pre-installed Lithium Ion battery. Ensure the battery tab (if present) is removed before first use.

3. Receiver Placement:

- Select a suitable outdoor location for each receiver, ensuring it is protected from direct heavy rain or standing water.
- Plug each receiver into a standard 3-prong grounded outdoor electrical outlet.

4. **Connect Appliances:** Plug the electrical appliance(s) you wish to control into the grounded outlet(s) on the receiver unit. Ensure the appliance is switched to the "ON" position if it has its own power switch.

5. **Pairing (if necessary):** The units are typically pre-paired. If pairing is required or you wish to re-pair:

- Ensure the receiver is plugged in.
- Press and hold the "ON" button on the remote for the desired channel (e.g., "ON 1" for receiver 1) while simultaneously plugging in the receiver. Hold for approximately 5 seconds until the receiver's indicator light flashes or confirms pairing.
- Repeat for the second receiver using its corresponding remote channel.

OPERATING INSTRUCTIONS

The Stanley 31181 system allows you to control two separate outdoor appliances wirelessly.

- **Turning On/Off:** Use the "ON" and "OFF" buttons on the handheld remote control to power your connected devices. Each receiver corresponds to a specific channel on the remote (e.g., "ON 1" for receiver 1, "ON 2" for receiver 2).
- **Wireless Range:** The transmitter operates through walls and windows with an effective range of up to 80 feet (approximately 24 meters).
- **Photocell Feature:** The receivers include a built-in photocell option. If activated, this feature will automatically turn the connected device off at dawn, even if you forget to manually switch it off. Consult the receiver unit for specific photocell activation instructions (often a switch or button on the receiver itself).
- **Expandability (Command1 System):** This system is part of the Command1 series. You can pair additional Command1 remotes and receivers. Select different channels for different areas around your home to avoid interference and manage multiple devices.

MAINTENANCE

- **Cleaning:** Wipe the units with a dry, soft cloth. Do not use abrasive cleaners or immerse in water.
- **Battery Replacement:** When the remote control's range decreases or it stops responding, replace the Lithium Ion battery. Refer to the remote's battery compartment for specific battery type and replacement instructions.
- **Storage:** If storing the units for an extended period, especially during off-season, disconnect them from power and store in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device does not turn ON/OFF.	<ul style="list-style-type: none"> Remote battery is dead. Receiver is not plugged in. Appliance is not plugged into receiver or is switched OFF. Receiver is out of range. Interference from other devices. Receiver and remote are not paired. 	<ul style="list-style-type: none"> Replace remote battery. Ensure receiver is securely plugged into a live outlet. Verify appliance connection and power switch. Move closer to the receiver. Try a different channel if using multiple Command1 devices, or move receiver/remote. Refer to "Setup" section for pairing instructions.
Reduced remote range.	<ul style="list-style-type: none"> Low remote battery. Obstructions (thick walls, metal structures). Environmental interference. 	<ul style="list-style-type: none"> Replace remote battery. Adjust position of remote or receiver. Minimize other wireless device usage nearby.
Photocell not working.	<ul style="list-style-type: none"> Photocell is obstructed or dirty. Photocell feature is not activated. 	<ul style="list-style-type: none"> Clean the photocell sensor. Ensure the photocell option on the receiver is enabled.

SPECIFICATIONS

Model Number	31181
Brand	STANLEY
Manufacturer	Stanley timers
Electrical Rating	8A/125V/1000W 60Hz Tungsten (UL/CUL)
Cord Length	8 inches
Wire Gauge	AWG 14/3 SJTW
Wireless Range	Up to 80 feet (24 meters)
Remote Battery Type	1 Lithium Ion battery (included)
Product Dimensions	6 x 5 x 2 inches (approximate, for entire package)
Item Weight	13.6 ounces

WARRANTY INFORMATION

For specific warranty details, please refer to the warranty card included with your product or visit the official STANLEY website. Generally, products are covered against defects in materials and workmanship for a specified period from the date of purchase.

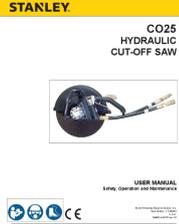
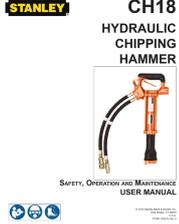
SUPPORT

If you encounter any issues or have questions regarding your Stanley 31181 Outdoor Remote Control System, please contact STANLEY customer support. Contact information can typically be found on the product packaging or the official STANLEY website.

You can also visit the [STANLEY Store on Amazon](#) for more product information.

© 2023 STANLEY. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - 31181

 <p>STANLEY QUICK START GUIDE GUÍA DE INICIO RÁPIDO GUIDE DE DÉMARRAGE RAPIDE</p> <p>2-Outlet Indoor Remote Control Remote par 2 Intérieurs avec 2 Entrées Télécommande pour intérieur avec 2 prises</p> <p>Customer Service / Servicio al Cliente / Client Service 1-800-735-3107 • 1-604-694-1511 Monday to Friday / Lunes a Viernes / Lundi au Vendredi Model / Modelo / Modèles PK303</p>	<p>Stanley PK303 2-Outlet Indoor Remote Quick Start Guide</p> <p>This guide provides instructions for installing and pairing the Stanley PK303 2-Outlet Indoor Remote Control. It covers pairing new transmitters and resetting existing pairings.</p>
 <p>STANLEY SRP 4960 COMPACTION REVERSIBLE PLATE</p> <p>SRP 4960 PARTS MANUAL</p> <p>CE</p>	<p>Stanley SRP 4960 Compaction Reversible Plate Parts Manual</p> <p>Comprehensive parts manual for the Stanley SRP 4960 Compaction Reversible Plate, detailing all components, part numbers, quantities, and assembly kits. Includes technical specifications, adhesive torque conversions, and maintenance information.</p>
 <p>STANLEY CO25 HYDRAULIC CUT-OFF SAW</p> <p>CO25 USER MANUAL Safety, Operation and Maintenance</p> <p>CE</p>	<p>STANLEY CO25 Hydraulic Cut-Off Saw User Manual</p> <p>This user manual provides comprehensive safety, operation, and maintenance instructions for the STANLEY CO25 Hydraulic Cut-Off Saw. It includes specifications, troubleshooting, and parts information.</p>
 <p>STANLEY CH18 HYDRAULIC CHIPPING HAMMER</p> <p>CH18 SAFETY, OPERATION AND MAINTENANCE USER MANUAL</p> <p>CE</p>	<p>Stanley CH18 Hydraulic Chipping Hammer User Manual: Safety, Operation, and Maintenance</p> <p>Comprehensive user manual for the Stanley CH18 Hydraulic Chipping Hammer, covering safety precautions, operating procedures, maintenance guidelines, troubleshooting, and specifications. Essential reading for safe and effective use.</p>
 <p>STANLEY</p> <p>STANLEY</p> <p>STANLEY</p> <p>STANLEY</p>	<p>Stanley Vacuum Bottle and Food Jar Care and Use Guide</p> <p>Comprehensive guide on how to properly use, clean, and maintain your Stanley vacuum bottles and food jars for optimal performance and longevity. Includes important safety warnings and care instructions.</p>

STANLEY

PP10
HYDRAULIC
POST PULLER



Safety and
Operation
Manual

Focused on performance™



[Stanley PP10 Hydraulic Post Puller: Safety and Operation Manual](#)

This manual provides essential safety, operation, and maintenance instructions for the Stanley PP10 Hydraulic Post Puller. Learn about proper usage, hydraulic requirements, troubleshooting, and warranty information to ensure safe and effective operation.