



Manuals.plus /

- › LEGO /
- › LEGO DUPLO Never Land Hideout 10513 Instruction Manual

LEGO 10513

LEGO DUPLO Never Land Hideout 10513 Instruction Manual

Model: 10513

INTRODUCTION

This manual provides detailed instructions for assembling and enjoying your LEGO DUPLO Never Land Hideout 10513 building set. Designed for young builders, this set allows children to create a pirate-themed hideout featuring characters Izzy and Cubby from Disney's Jake and the Never Land Pirates. Follow these guidelines for a safe and engaging play experience.



Image: The complete LEGO DUPLO Never Land Hideout 10513 set, as depicted on its packaging. It showcases the main structure with a slide, a lookout tower, and the Izzy and Cubby figures.

SETUP AND ASSEMBLY

The LEGO DUPLO Never Land Hideout set is designed for easy assembly by young children with adult supervision. The set includes 37 pieces, featuring large, colorful DUPLO bricks that are simple to connect.

- 1. Unpack Components:** Carefully open the packaging and lay out all the DUPLO bricks and figures on a clean, flat surface. Ensure all pieces are present according to the packaging contents.
- 2. Build the Base:** Begin by connecting the larger base plates and foundational bricks to establish the main structure of the hideout.
- 3. Construct the Tower and Archway:** Assemble the green and brown bricks to form the archway and the base for the rotating lookout tower. Attach the flagpole with the pirate flag.
- 4. Add the Slide:** Securely attach the yellow slide piece to the main structure, ensuring it is stable for figures to slide down.
- 5. Assemble the Palm Tree Platform:** Use the brown cylindrical bricks for the palm tree trunk and attach the green palm frond pieces. Build the elevated platform for Izzy.
- 6. Integrate Transparent Bricks:** Place the transparent and rounded DUPLO bricks to create water features or decorative elements around the hideout.
- 7. Place Accessories and Figures:** Position the gold doubloon, Tiki-decorated brick, and the Izzy and Cubby figures within the hideout.



Image: The fully assembled LEGO DUPLO Never Land Hideout, showcasing the slide, lookout tower, pirate flag, and the Izzy and Cubby figures ready for play.

OPERATING AND PLAY FEATURES

Once assembled, the Never Land Hideout offers several interactive elements for imaginative play:

- **Slide Fun:** Place Cubby or Izzy at the top of the yellow slide and let them slide down into adventure.
- **Rotating Lookout Tower:** The lookout tower can be rotated to scan the horizon for Captain Hook or other pirates.
- **Flagpole and Flag:** The pirate flag can be raised or lowered on the flagpole, signaling danger or celebration.
- **Treasure Protection:** Use the gold doubloon and the Tiki-decorated brick as treasure elements to hide and protect within the hideout.
- **Character Interaction:** Izzy and Cubby figures can be placed on various platforms and interact with the hideout's features, encouraging storytelling and role-play.



Image: A detailed view of the Izzy figure positioned on an elevated platform, next to a palm tree, highlighting the vertical play possibilities within the hideout.

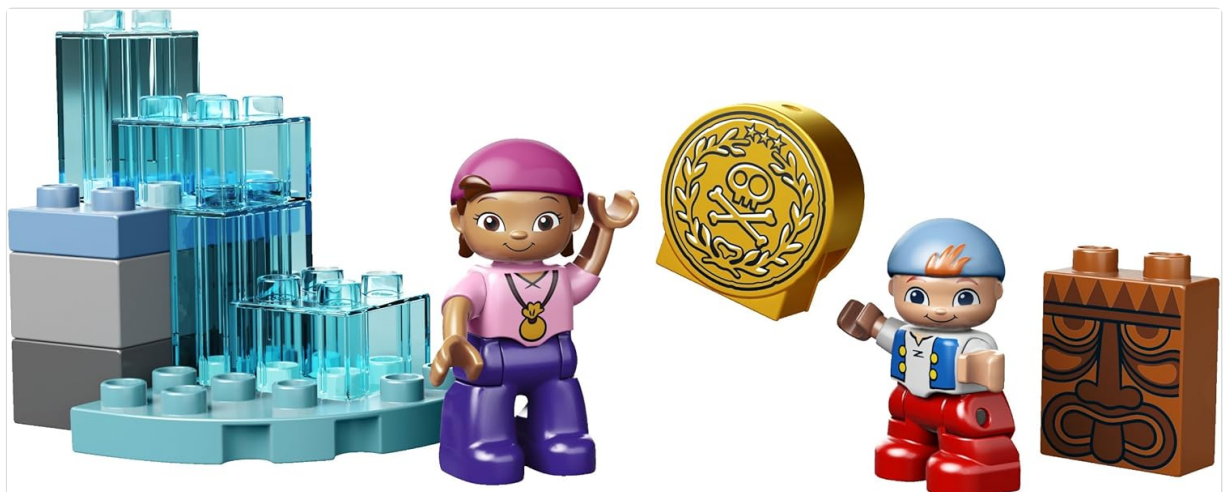


Image: A close-up of the Izzy and Cubby figures, along with key accessory pieces like the gold doubloon and the unique Tiki-decorated block, emphasizing the set's thematic elements.

MAINTENANCE

To ensure the longevity and hygiene of your LEGO DUPLO set, follow these simple maintenance guidelines:

- **Cleaning:** DUPLO bricks can be cleaned with lukewarm water (up to 40°C or 104°F) and a mild detergent. Rinse thoroughly with clear water and allow to air dry at room temperature. Do not use hot water, harsh chemicals, or abrasive cleaners, as these can damage the plastic.
- **Storage:** Store the bricks in a clean, dry place away from direct sunlight and extreme temperatures to prevent discoloration and warping.
- **Inspection:** Periodically inspect all pieces for any signs of wear, damage, or breakage. Discard any broken pieces to prevent potential hazards.

TROUBLESHOOTING

If you encounter any issues with your LEGO DUPLO Never Land Hideout set, consider the following:

- **Missing Pieces:** If you believe a piece is missing, first double-check the packaging and play area. For genuinely missing parts, please contact LEGO Customer Service.
- **Bricks Not Connecting:** Ensure that the bricks are aligned correctly and that there is no debris obstructing the studs. Apply gentle, even pressure to connect. DUPLO bricks are designed to fit together easily.
- **Damaged Pieces:** If any pieces are damaged, discontinue use of those specific pieces and contact LEGO Customer Service for assistance.

SPECIFICATIONS

Feature	Detail
Model Number	10513
Brand	LEGO DUPLO
Product Dimensions	13.94 x 7.52 x 3.58 inches (packaging)
Item Weight	1.2 pounds
Recommended Age	24 months and up
Number of Pieces	37
Main Features	Slide, flagpole, rotating lookout tower, palm tree, Izzy and Cubby figures, gold doubloon, Tiki-decorated brick

WARRANTY AND SUPPORT

For detailed warranty information regarding your LEGO DUPLO set, please refer to the documentation included with your product packaging or visit the official LEGO website. LEGO provides customer support for missing parts, assembly questions, and product inquiries.

LEGO Customer Service: www.lego.com/service

