

[Manuals.plus](#) /

› [Fujifilm](#) /

› Fujifilm FinePix S8300 Digital Camera User Manual

Fujifilm S8300

Fujifilm FinePix S8300 Digital Camera User Manual

Model: S8300

INTRODUCTION

This manual provides detailed instructions for the safe and effective operation of your Fujifilm FinePix S8300 Digital Camera. Please read this manual thoroughly before using the camera and keep it in a safe place for future reference. The Fujifilm FinePix S8300 is a 16.2MP digital camera featuring a powerful 42x optical zoom lens, designed for capturing high-quality still images and Full HD videos. Its advanced features and user-friendly interface make it suitable for a wide range of photographic needs.

WHAT'S IN THE BOX

Upon opening the package, please verify that all the following items are included:

- Fujifilm FinePix S8300 Digital Camera Body
- Lens Cap
- Shoulder Strap
- USB Cable
- AA Batteries (x4)
- Software CD-ROM
- User Manual (Printed)



Image: All components included in the Fujifilm FinePix S8300 package, laid out for inspection. This includes the camera, four AA batteries, a shoulder strap, a USB cable, a software CD, and the printed user manual.

SETUP

1. Installing Batteries

The Fujifilm FinePix S8300 uses four AA batteries. Ensure the camera is turned off before installing or removing batteries.

1. Locate the battery compartment cover on the bottom of the camera.
2. Slide the latch to open the cover.
3. Insert four AA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely until it clicks into place.

2. Inserting a Memory Card (Sold Separately)

The camera supports SD, SDHC, and SDXC memory cards. A memory card is required to save photos and videos.

1. Open the battery/memory card compartment cover.
2. Insert the memory card into the slot with the label facing the correct direction, as shown in the diagram inside the compartment, until it clicks.
3. Close the cover.

3. Attaching the Shoulder Strap

Attach the provided shoulder strap to the camera's strap lugs for secure carrying.

1. Thread one end of the strap through a strap lug on the camera.
2. Pass the strap through the buckle to secure it.
3. Repeat for the other side.

OPERATING THE CAMERA

Camera Controls Overview



Image: Top view of the Fujifilm FinePix S8300, highlighting the main controls such as the power switch, mode dial, shutter button, and zoom lever around the shutter button.

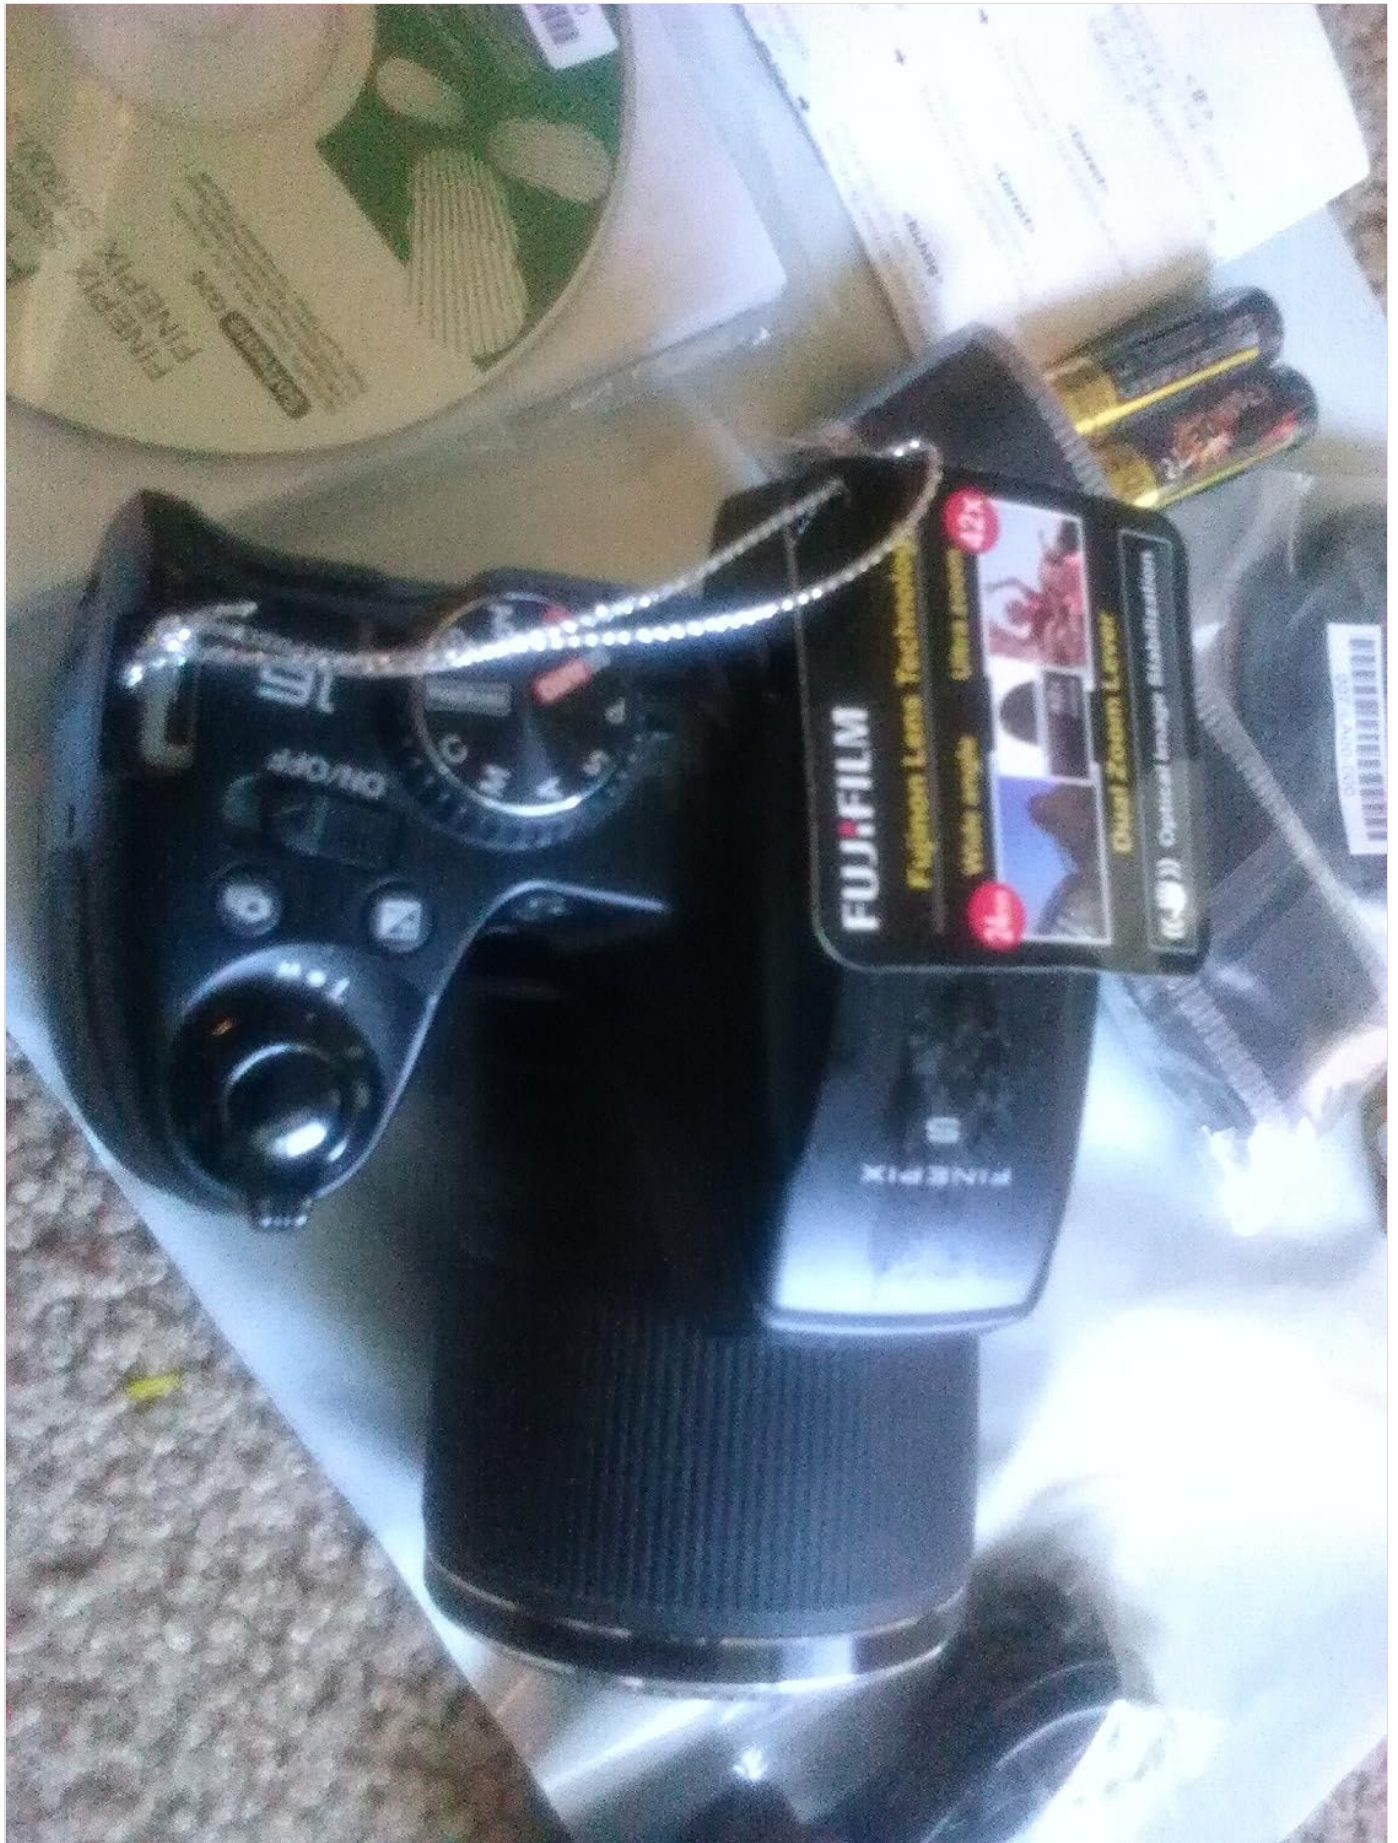


Image: Rear view of the Fujifilm FinePix S8300, displaying the LCD monitor, electronic viewfinder, and control buttons including the directional pad, menu button, and playback button.

- **Power Button:** Located on the top of the camera, used to turn the camera on or off.
- **Shutter Button:** Press halfway to focus, press fully to take a picture.

- **Zoom Lever:** Surrounds the shutter button, used to zoom in (Telephoto) or out (Wide-angle).
- **Mode Dial:** Selects shooting modes such as Program (P), Shutter-priority (S), Aperture-priority (A), Manual (M), Scene Position (SP), and Movie.
- **LCD Monitor:** Displays live view, menus, and playback images.
- **Electronic Viewfinder (EVF):** Provides an alternative view for composing shots, especially in bright conditions.
- **Directional Pad:** Used for navigating menus and selecting options.
- **MENU/OK Button:** Accesses the camera menu and confirms selections.
- **Playback Button:** Switches the camera to playback mode to view captured images and videos.

Basic Photography

1. **Turn On the Camera:** Slide the power switch to the ON position. The lens will extend.
2. **Select a Shooting Mode:** Rotate the mode dial to your desired shooting mode (e.g., AUTO for automatic settings, P for Program AE).
3. **Compose Your Shot:** Use the LCD monitor or EVF to frame your subject. Use the zoom lever to adjust the focal length.
4. **Focus:** Press the shutter button halfway down. The camera will autofocus, and the focus indicator will light up.
5. **Capture:** Press the shutter button fully down to take the picture.

Recording Videos

1. **Select Movie Mode:** Rotate the mode dial to the movie camera icon.
2. **Start Recording:** Press the dedicated movie recording button (usually marked with a red dot) to begin recording.
3. **Stop Recording:** Press the movie recording button again to stop.

The camera supports Full HD movie recording with stereo sound (1080i/60fps).

MAINTENANCE

- **Cleaning the Lens:** Use a soft, lint-free cloth or a lens brush to gently remove dust and smudges. Do not use abrasive cleaners.
- **Cleaning the Camera Body:** Wipe the camera body with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water.
- **Battery Care:** Remove batteries when the camera will not be used for an extended period. Store batteries in a cool, dry place.
- **Storage:** Store the camera in a dry, well-ventilated area, away from direct sunlight and extreme temperatures. Use a camera bag for protection during transport.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Batteries are dead or incorrectly inserted.	Replace batteries with new ones or ensure correct polarity.
Cannot take pictures.	Memory card is full, locked, or not inserted.	Delete some images, unlock the card, or insert a memory card.

Problem	Possible Cause	Solution
Images are blurry.	Camera shake, subject movement, or out of focus.	Hold camera steady, use a tripod, or ensure proper focus before shooting.
Flash does not fire.	Flash mode is off or subject is too far.	Check flash settings; ensure subject is within flash range.
Loud noise when zooming.	Normal operation for the zoom mechanism.	This is a characteristic of the camera's zoom lens.

SPECIFICATIONS

Feature	Detail
Model Name	FinePix S8300
Effective Still Resolution	16.2 MP
Photo Sensor Technology	CMOS
Optical Zoom	42x
Digital Zoom	2x
Minimum Focal Length	24 Millimeters
Maximum Focal Length	960 Millimeters
Image Stabilization	Optical, Digital
Video Resolution	FHD 1080p (1080i/60fps)
Supported File Format	RAW, JPEG, MP4 (Video), AAC (Audio)
Display Type	LCD
Viewfinder	Electronic
Battery Type	AA (Alkaline or Ni-MH recommended)
Connectivity Technology	USB, HDMI
Item Weight	2 Pounds (approx. 907g)

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Fujifilm website. Keep your proof of purchase for warranty claims.

Online Resources: For the latest drivers, software updates, and frequently asked questions, please visit the Fujifilm support page.

Contact Support: If you require further assistance, please contact Fujifilm customer service through the contact details provided on their official website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question