

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER dustbuster FLEX Cordless Handheld Vacuum, Home, Pet and Car Vacuum (BDH2020FL) User Manual

BLACK+DECKER BDH2020FL

BLACK+DECKER dustbuster FLEX Cordless Handheld Vacuum User Manual

Model: BDH2020FL | Brand: BLACK+DECKER

PRODUCT OVERVIEW

The BLACK+DECKER dustbuster FLEX Cordless Handheld Vacuum (BDH2020FL) is designed for versatile cleaning around your home, car, and for pet messes. Its compact and lightweight design, combined with a flexible hose and powerful suction, makes it an efficient tool for everyday cleanups.



Image: The BLACK+DECKER dustbuster FLEX Cordless Handheld Vacuum, showcasing its compact design and flexible hose, resting on its charging base.

INCLUDED COMPONENTS

Your BLACK+DECKER dustbuster FLEX vacuum comes with the following components:

- Main Vacuum Unit with Flexible Hose
- Charging Dock
- Washable Plastic Pre-filter
- Washable Filter (PVF110)
- 2-in-1 Nozzle/Flip-up Brush
- Crevice Tool
- Pet Hair Brush (BDH200FVPH)

Includes:



Image: A visual representation of all components included with the vacuum, such as the main unit, charging base, and various attachments.

SETUP AND CHARGING

1. **Initial Charge:** Before first use, fully charge the vacuum. Place the main vacuum unit onto the

Charging Dock. Ensure the unit is properly seated. The indicator light on the base will illuminate to show it is charging. A full charge takes approximately 4 hours.

2. **Accessory Storage:** The charging base also provides convenient storage for your accessories, keeping them organized and ready for use.



Image: The vacuum securely placed on its charging base, demonstrating convenient storage and charging.

OPERATING INSTRUCTIONS

Basic Operation

To turn the vacuum on or off, simply press the power button located on the handle. The cordless design allows for portable and lightweight use around your home and in your vehicle.



*Source: Circana Group/Retail Tracking Service, U.S. unit sales, 12 months ending October 2023

dustbuster®

Image: The vacuum highlighting its flexible hose and 2-in-1 nozzle, ideal for reaching various areas.

Using Attachments

- **Flexible Hose:** The 4-foot flexible hose allows you to reach high areas like ceilings or low areas under furniture, providing floor-to-ceiling cleaning capability.
- **2-in-1 Nozzle/Flip-up Brush:** This versatile attachment can be used as a narrow nozzle for tight spaces or with the brush flipped out for dusting and general surface cleaning.
- **Crevice Tool:** Ideal for cleaning in narrow gaps, corners, and hard-to-reach areas in your car or home.
- **Pet Hair Brush:** Attach the pet hair brush to effectively clean stubborn pet hair from carpets, stairs, and other upholstery.



Image: A user demonstrating the extended reach of the 4-foot flexible hose for high-level cleaning.



Pet brush for stubborn pet hair

Image: Close-up of the pet brush attachment effectively removing pet hair from a cushion.

MAINTENANCE

Emptying the Dustbowl

The translucent dustbowl is designed for easy emptying. To empty, simply detach the dustbowl from the main unit and dispose of the collected debris into a trash can. Regularly emptying the dustbowl helps maintain optimal suction power.



Easy-to-empty dustbowl

Image: A hand demonstrating the easy emptying process of the vacuum's dustbowl directly into a waste bin.

Cleaning the Filter

The vacuum features a washable plastic pre-filter and a washable filter (PVF110). For best performance, clean the filters regularly. Remove the filters from the dustbowl and tap off any loose debris. You can also rinse them under running water. Ensure filters are completely dry before reinserting them into the vacuum.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Reduced Suction	Full dustbowl or clogged filter.	Empty dustbowl and clean/wash filters. Ensure filters are dry before reassembly.
Vacuum Not Turning On	Battery is depleted or unit not properly charged.	Place the vacuum on the charging dock and allow it to fully charge (approx. 4 hours).
Unusual Noise	Obstruction in the hose or nozzle.	Turn off the vacuum and check the hose and all attachments for blockages. Remove any obstructions.

SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model Name	BDH2020FL
Product Dimensions	14.88"L x 10.68"W x 6.5"H
Item Weight	3.2 pounds
Battery Type	Lithium-Ion (20V MAX nominal voltage 18V)
Runtime	Up to 15 minutes
Charging Time	Approx. 4 Hours
Wattage	20 watts
Capacity	1.1 Pounds (dustbowl)
Filter Type	Cartridge (Washable)
Special Features	Portable, Compact, Washable Filter, 4ft Flexible Hose

WARRANTY AND SUPPORT

The BLACK+DECKER dustbuster FLEX Cordless Handheld Vacuum (BDH2020FL) comes with a **2-year limited warranty**. For warranty claims, technical support, or additional product information, please refer to the official BLACK+DECKER website or contact their customer service directly.

An official User Manual (PDF) is also available for download: [Download User Manual](#)
