

## Altec Lansing ACS340

# Altec Lansing ACS340 Computer Speakers User Manual

Model: ACS340

Brand: Altec Lansing

## INTRODUCTION

The Altec Lansing ACS340 is a 2.0 channel computer speaker system designed to provide enhanced audio for desktop and laptop computers. This manual provides detailed instructions for setting up, operating, maintaining, and troubleshooting your ACS340 speaker system.

## PACKAGE CONTENTS

Please verify that all items are present in the package:

- Speakers (2 satellite speakers and 1 subwoofer)



Image: The Altec Lansing ACS340 speaker system, showing the two satellite speakers and the subwoofer unit.

## SETUP

---

Follow these steps to set up your Altec Lansing ACS340 speaker system:

1. **Positioning the Speakers:** Place the subwoofer on the floor near your computer. Position the two satellite speakers on either side of your computer monitor for optimal stereo separation.
2. **Connecting Satellite Speakers to Subwoofer:** Connect the cables from the satellite speakers to the corresponding audio output ports on the back of the subwoofer unit. Ensure a secure connection.
3. **Connecting to Computer:** Connect the audio input cable from the subwoofer to the audio output (headphone or line-out) jack on your computer.
4. **Connecting Power:** Plug the power adapter into the power input on the subwoofer. Then, plug the power adapter into a standard electrical outlet.



Image: The Altec Lansing ACS340 speaker system, including the external power adapter, illustrating the components involved in the power connection.

## OPERATING

---

The Altec Lansing ACS340 features intuitive controls for adjusting your audio experience:

- **Power Knob:** Located on one of the satellite speakers, this knob controls the system's power and overall volume. Rotate clockwise to turn on and increase volume, counter-clockwise to decrease volume and turn off.
- **Bass Knob:** Adjusts the level of low-frequency sound (bass). Rotate clockwise for more bass, counter-clockwise for less.
- **Treble Knob:** Adjusts the level of high-frequency sound (treble). Rotate clockwise for brighter highs, counter-clockwise for softer highs.





- **No Sound:**
  - Ensure the speakers are powered on and the volume knob is turned up.
  - Check all cable connections between the speakers, subwoofer, and computer.
  - Verify that the audio output on your computer is not muted and the volume is turned up.
  - Test with another audio source or device to rule out computer-related issues.
- **Distorted Sound:**
  - Reduce the volume on both the speakers and your computer.
  - Adjust the Bass and Treble knobs to see if the distortion improves.
  - Ensure cables are securely connected and not damaged.
- **Humming or Buzzing Noise:**
  - Ensure all connections are secure.
  - Try plugging the power adapter into a different electrical outlet.
  - Move the speakers away from other electronic devices that might cause interference.

## SPECIFICATIONS

Feature	Description
Model Name	ACS340
Speaker Type	Computer
Recommended Uses	For Computers
Compatible Devices	Desktop, Laptop
Surround Sound Channel Configuration	2.0
Color	Grey
Included Components	Speakers
Control Method	Touch (referring to knobs)
Power Source	AC
Audio Driver Type	Dynamic Driver
Subwoofer Connectivity Technology	Wired
Connectivity Technology	Wired
Speaker Maximum Output Power	120 Watts
Item Weight	17.51 pounds
Manufacturer	Altec Lansing Technologies

## WARRANTY AND SUPPORT






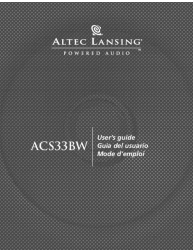
The Altec Lansing ACS340 Computer Speakers come with a Limited Warranty. For specific details regarding warranty coverage,

duration, and terms, please refer to the documentation provided at the time of purchase or contact Altec Lansing customer support.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please visit the official Altec Lansing website or contact their customer service department. Contact information can typically be found on the manufacturer's website or on the product packaging.



### Related Documents - ACS340

	<p><a href="#">Altec Lansing ACS65i Amplified Speaker System User Guide</a></p> <p>User guide for the Altec Lansing ACS65i amplified speaker system. This document provides detailed instructions on setup, operation, safety precautions, specifications, and warranty information for multimedia computer audio applications.</p>
	<p><a href="#">Altec Lansing ATP3 Computer Speaker System User Guide and Setup</a></p> <p>Comprehensive user guide for the Altec Lansing ATP3 computer speaker system, covering specifications, setup instructions, safety precautions, and control usage.</p>
	<p><a href="#">Altec Lansing ACS54 Computer Speaker System User Guide</a></p> <p>User guide for the Altec Lansing ACS54 amplified computer speaker system, detailing specifications, warranty, safety instructions, setup, controls, and speaker placement for an immersive 3D audio experience.</p>
	<p><a href="#">Altec Lansing ACS56 Computer Speaker System User Guide and Warranty</a></p> <p>Comprehensive guide to the Altec Lansing ACS56 computer speaker system, covering specifications, setup, operation, safety instructions, and a one-year limited warranty.</p>
	<p><a href="#">Altec Lansing ACS495 User Guide</a></p> <p>User guide for the Altec Lansing ACS495 computer speaker system, detailing setup, operation, and specifications.</p>
	<p><a href="#">Altec Lansing ACS33BW Three-Piece Powered Audio System User Guide</a></p> <p>Comprehensive user guide for the Altec Lansing ACS33BW three-piece powered audio system, covering setup, connections, specifications, and troubleshooting. Includes safety information and warranty details.</p>