

Swan B00CDL7DVS

Swan Bread Maker Paddle Instruction Manual

Model: B00CDL7DVS

1. INTRODUCTION

This manual provides instructions for the installation, use, and maintenance of your Swan Bread Maker Replacement Paddle. This paddle is designed as a direct replacement part to ensure the continued optimal performance of your compatible Swan bread maker.

2. COMPATIBILITY

This replacement paddle is compatible with the following Swan bread maker models:

- **SB010**
- **SB1030**
- **SWBBA7**

Please verify your bread maker's model number before installation to ensure compatibility.

3. SETUP AND INSTALLATION

Follow these steps to correctly install the replacement paddle in your bread maker:

1. **Ensure Safety:** Before beginning, unplug your bread maker from the power outlet and allow it to cool completely if it has been recently used.
2. **Remove Bread Pan:** Open the lid of your bread maker and carefully remove the bread pan.
3. **Remove Old Paddle (if present):** If an old paddle is still in the bread pan, gently pull it upwards to detach it from the drive shaft. If it is stuck, try rotating it slightly while pulling.
4. **Clean Drive Shaft:** Inspect the drive shaft inside the bread pan for any dough residue or debris. Clean it thoroughly to ensure a secure fit for the new paddle.
5. **Install New Paddle:** Align the opening at the bottom of the new Swan replacement paddle with the drive shaft inside the bread pan. Push the paddle down firmly until it clicks securely into place. Ensure it sits flush and can rotate freely.
6. **Reinsert Bread Pan:** Place the bread pan back into the bread maker, ensuring it is properly seated and locked.

7. **Power On:** Plug the bread maker back into the power outlet.



Image 1: The Swan bread maker replacement paddle, showing its shape and attachment point for the drive shaft.

4. OPERATING INSTRUCTIONS

Once the replacement paddle is installed, operate your bread maker as per its original instruction manual. Ensure the paddle is correctly seated before adding ingredients. The paddle will knead the dough during the initial cycles of the bread-making process.

For best results, always follow the recipes and ingredient measurements provided with your bread maker or trusted baking resources.

5. MAINTENANCE

Proper maintenance will extend the life of your replacement paddle:

- **Cleaning:** After each use, remove the paddle from the bread pan and wash it with warm, soapy water. Use a soft brush or sponge to remove any stuck-on dough. Rinse thoroughly and dry completely before storing or reusing.
- **Avoid Abrasives:** Do not use abrasive cleaners or scouring pads, as these can damage the non-stick coating (if applicable) or the material of the paddle.
- **Storage:** Store the paddle in a dry place.

6. TROUBLESHOOTING

If you encounter issues with your new paddle, consider the following:

- **Paddle Not Kneading:**
 - Ensure the paddle is fully pushed down onto the drive shaft.
 - Check if the drive shaft itself is rotating. If not, the issue may be with the bread maker's motor,

not the paddle.

- **Dough Sticking to Paddle:**

- Ensure the paddle is clean and free of old residue.
- Adjust dough consistency if it is excessively sticky.

- **Paddle Comes Off During Kneading:**

- Verify the paddle is securely attached to the drive shaft.
- Ensure the bread pan is correctly seated in the bread maker.

If problems persist, refer to your bread maker's main instruction manual or contact Swan customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Swan
Model Number (ASIN)	B00CDL7DVS
Compatible Models	SB010, SB1030, SWBBA7
Item Weight	18.1 grams
Color	Grey

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your original Swan bread maker or visit the official Swan website. Keep your purchase receipt as proof of purchase.