

Beyution TZZ00000008A

Beyution TZZ00000008A Replacement Remote Control User Manual

For Panasonic LCD TV Models: TC-L42U5, TC-L32C5, TC-32LC54, TC-L3252C, TC-L32C5X, TC-L422U5X

INTRODUCTION

This manual provides instructions for the Beyution TZZ00000008A Replacement Remote Control. This remote is designed to function as a direct replacement for original Panasonic LCD TV remote controls, offering immediate usability without complex setup procedures.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.





Image: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

2. Initial Use

This replacement remote control is designed for immediate use with compatible Panasonic LCD TV models. No programming or complex setup is required. Once batteries are installed, point the remote control towards your television and begin operation.

OPERATING INSTRUCTIONS

The Beyution TZZ00000008A remote control provides full functionality for your compatible Panasonic LCD TV. Below is a general overview of common button functions.





Image: Front view of the remote control, highlighting the layout of all operational buttons.

- **POWER:** Turns the television on or off.
- **SAP:** Switches between audio programs (e.g., stereo, mono, secondary audio program).
- **Number Buttons (0-9):** Directly select channels.
- **LAST:** Returns to the previously viewed channel.
- **CC (Closed Caption):** Toggles closed captions on or off.
- **STILL:** Pauses the current image on screen.
- **SLEEP:** Sets a timer for the TV to turn off automatically.
- **FAVORITE (F):** Accesses favorite channels.
- **VOL (+/-):** Adjusts the volume level.
- **CH (Channel Up/Down):** Changes channels sequentially.
- **MUTE:** Silences the television audio.
- **INPUT:** Selects the video input source (e.g., HDMI, AV).
- **USB:** Accesses media from a connected USB device.
- **FORMAT:** Changes the screen aspect ratio or display format.
- **INFO:** Displays information about the current program or input.
- **EXIT:** Exits menus or on-screen displays.
- **MENU:** Opens the main menu of the television.
- **Navigation Buttons (Up, Down, Left, Right, OK):** Navigate through menus and confirm selections.
- **RETURN:** Goes back to the previous menu or screen.
- **Color Buttons (R, G, B, Y):** Used for specific functions within certain menus or applications.
- **Media Control Buttons (Play, Pause, Stop, Fast Forward, Rewind):** Control playback of media content.

For detailed functionality of specific buttons, refer to your Panasonic TV's original user manual.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials, as they may damage the surface or internal components.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage. Store in a cool, dry place.
- **Handling:** Avoid dropping the remote control or exposing it to extreme temperatures or moisture.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the remote is pointed directly at the TV's infrared sensor.
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Remove any obstructions between the remote and the TV.
- **Intermittent response:**
 - This may indicate low battery power. Replace batteries.
 - Ensure there are no strong light sources (like direct sunlight or fluorescent lights) interfering with the infrared signal.
- **Specific buttons not working:**
 - Verify that the button is applicable to your TV model's functions. Some buttons may be specific to certain TV features.
 - Clean the remote control, especially around the non-working buttons, to remove any debris.
- **Remote does not control TV:**
 - Confirm your TV model is listed as compatible. Refer to the "Compatible Models" section.
 - If your TV model is not listed, contact customer support for assistance.

SPECIFICATIONS

Model Number	TZZ00000008A
Brand	Beyution
Compatible Devices	Panasonic LCD Televisions (Specific models listed below)
Connectivity Technology	Infrared
Maximum Operating Distance	Up to 10 meters (approximately 33 feet)
Material	ABS Plastic
Color	Black
Power Source	2 x AAA Batteries (not included)
Product Dimensions	7 x 2 x 0.7 inches (approximate)

Item Weight	2.39 ounces (approximate)
-------------	---------------------------

Compatible Panasonic LCD TV Models:

- TC-L42U5
- TC-L32C5
- TC-32LC54
- TC-L3252C
- TC-L32C5X
- TC-L422U5X
- TC32LC54
- TCL32C5
- TCL32C5X
- TCL42U5
- TCL42U5X
- TCL3252C

This list is not exhaustive. If your specific model is not listed, please contact customer support for compatibility verification.

WARRANTY INFORMATION

This Beyution remote control comes with a **6-month warranty period** from the date of purchase. This warranty covers manufacturing defects and ensures the product functions as intended under normal use. Additionally, a **1-year return policy** is offered. Please retain your proof of purchase for any warranty or return claims.

CUSTOMER SUPPORT

If you encounter any issues with your Beyution TZZ00000008A Replacement Remote Control, or if you have questions regarding compatibility or functionality, please contact our customer support team.

We are committed to providing a satisfactory solution within 24 hours for any damaged or non-working remote controls received.

For support inquiries, please refer to the contact information provided by your retailer or on the product packaging.

© 2026 Beyution. All rights reserved.

This manual is for informational purposes only. Beyution is not affiliated with Panasonic.