



Manuals.plus /

› Crock-Pot /

› Crock-Pot 20-Ounce Electric Lunch Box Food Warmer Instruction Manual (Model SCCPLC200)

Crock-Pot SCCPLC200

Crock-Pot 20-Ounce Electric Lunch Box Food Warmer Instruction Manual

Model: SCCPLC200

1. INTRODUCTION AND OVERVIEW

The Crock-Pot 20-Ounce Electric Lunch Box Food Warmer is designed to provide warm, hearty meals on the go. This portable unit allows you to heat food conveniently, ensuring your meals are ready when and wherever you are. Its compact design and integrated features make it ideal for personal use in various settings.



Figure 1: Crock-Pot 20-Ounce Electric Lunch Box Food Warmer.

Key Features:

- **20-Ounce Capacity:** Perfectly sized for individual meal portions or dips.
- **Portable Design:** Features an easy-carry handle and integrated cord storage for convenient transport.
- **Removable Container:** Dishwasher-safe inner container with a spill-proof lid for easy filling, transport, and cleaning.
- **Safe Operation:** Exterior remains cool to the touch during use.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or injury.

- **Household Use Only:** This appliance is intended for household use only. Do not use outdoors.
- **Electrical Safety:** Do not immerse the heating base in water or other liquids. Ensure hands are dry before plugging in or unplugging the unit.
- **Hot Surfaces:** While the exterior remains cool, the internal heating element and food container will become hot during operation. Use caution when handling the inner container and its contents.
- **Supervision:** Close supervision is necessary when any appliance is used by or near children.
- **Cord Safety:** Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces.
- **Product Materials:** This product contains Aluminum, Stainless Steel (Iron, Chromium, Nickel, Manganese, Copper, Phosphorus), Titanium Dioxide, Carbon black, Octamethylcyclotetrasiloxane.

3. PRODUCT COMPONENTS

Familiarize yourself with the parts of your Crock-Pot Electric Lunch Box:

1. **Heating Base:** The main unit containing the heating element and power cord storage.
2. **Removable Food Container:** A 20-ounce stainless steel container for your food.
3. **Spill-Proof Inner Lid:** A flexible lid for the food container, designed to prevent spills.
4. **Outer Lid:** Secures the food container within the heating base and features a carrying handle.
5. **Power Cord:** Integrated into the base for convenient storage.

TAKE IT TO GO

Outer lid prevents spills during transport



Figure 2: The outer lid with integrated handle for easy transport.



Figure 3: The 20-ounce capacity is suitable for various meals.

4. SETUP

Before first use, wash the removable food container and inner lid in warm, soapy water. Rinse thoroughly and dry. The heating base should be wiped clean with a damp cloth.

Assembly:

1. Place your prepared food into the removable food container.
2. Secure the spill-proof inner lid onto the food container.
3. Insert the filled food container into the heating base.
4. Place the outer lid onto the heating base and twist to secure it. Ensure the handle is in the upright position for carrying.

5. OPERATING INSTRUCTIONS

The Crock-Pot Electric Lunch Box is designed for simple, one-touch operation.

1. **Prepare Food:** Place your desired meal into the removable food container and secure the inner lid.

2. **Assemble Unit:** Place the container into the heating base and secure the outer lid.
3. **Plug In:** Unwind the integrated power cord from the base and plug the unit into a standard 110V electrical outlet. The indicator light on the front of the unit will illuminate, signaling that heating has begun.
4. **Heating Time:** Heating times may vary depending on the type and quantity of food, as well as its initial temperature. Generally, allow 30-60 minutes for food to reach a warm, ready-to-eat temperature. For refrigerated food, longer heating times may be required.
5. **Serving:** Once heated, unplug the unit. Carefully remove the outer lid, then the inner lid, and enjoy your warm meal.



EXTERIOR STAYS COOL TO THE TOUCH

Figure 4: The exterior remains cool, allowing safe use on various surfaces.

Product Demonstration Video:

Your browser does not support the video tag.

Video 1: A brief demonstration of the Crock-Pot Electric Lunch Box in use, showing its components and operation.

6. CLEANING AND MAINTENANCE

Proper cleaning ensures the longevity and hygiene of your appliance.

- **Removable Container & Lids:** The removable food container and spill-proof inner lid are dishwasher safe. They can also be washed by hand with warm, soapy water.
- **Heating Base:** The exterior of the heating base should be wiped clean with a damp cloth. Do not immerse the heating base in water or any other liquid.
- **Storage:** Ensure all parts are dry before storing. Wrap the power cord neatly around the base for compact storage.

DISHWASHER-SAFE FOOD CONTAINER AND LID



Figure 5: The removable container and lid are dishwasher-safe for easy cleaning.

7. TROUBLESHOOTING

If you encounter issues with your Crock-Pot Electric Lunch Box, please refer to the following common solutions:

- **Unit Not Heating:** Ensure the power cord is securely plugged into both the unit and a functional electrical outlet. Check if the indicator light is on. If not, try a different outlet.
- **Food Not Warm Enough:** Allow sufficient heating time. Denser foods or larger portions may require more time. Ensure the lids are properly sealed to retain heat.
- **Lid Popping Up:** Ensure the inner lid is properly sealed around the edges of the food container. For the outer lid, twist it firmly to secure it to the heating base.

8. SPECIFICATIONS

Specification	Detail
Brand	Crock-Pot
Model Number	SCCPLC200
Capacity	20 Ounce (0.57 Liters)
Material	Aluminum, Stainless Steel
Product Dimensions	8"D x 8"W x 6.8"H
Item Weight	1.6 Pounds
Wattage	1500 watts
Voltage	110 Volts
Dishwasher Safe	Yes (removable container and inner lid)

9. WARRANTY AND SUPPORT

This Crock-Pot Electric Lunch Box is covered by the manufacturer's standard warranty. For detailed warranty information, product support, or to register your product, please visit the official Crock-Pot website or contact their customer service. Keep your purchase receipt as proof of purchase.

For further assistance, please refer to the contact information provided in your product packaging or on the official Crock-Pot website.