



Manuals.plus /

› Breil /

› Tribe Ghost Digital Blue/Blue User Manual

Breil 6809771505

Tribe Ghost Digital Blue/Blue User Manual

Brand: Breil
Model: 6809771505

1. INTRODUCTION

Welcome to the user manual for your new Breil Tribe Ghost Digital Blue/Blue watch. This guide provides detailed instructions on how to set up, operate, and maintain your watch, ensuring optimal performance and longevity. Please read this manual thoroughly before using your watch.

2. WATCH COMPONENTS AND DISPLAY

Familiarize yourself with the various parts of your Tribe Ghost Digital watch.



Figure 2.1: Front view of the Tribe Ghost Digital Blue/Blue watch. The watch features a silver-colored case with a blue silicone strap. The digital display shows time, day, and date. Four buttons are visible around the case: 'EL' on the top left, 'MODE' on the bottom left, 'ADV/ST/SPL' on the top right, and 'SET/RES' on the bottom right.

2.1 Button Functions

- **MODE Button (Bottom Left):** Used to cycle through different modes: Time Display, Alarm, Stopwatch.
- **ADV/ST/SPL Button (Top Right):** Used to advance settings, start/stop the stopwatch, or record split times.
- **SET/RES Button (Bottom Right):** Used to set values in setting mode or reset the stopwatch.
- **EL Button (Top Left):** Activates the Electro-Luminescent backlight for illumination of the display.

2.2 Digital Display Indicators

- **Time:** Displays hours, minutes, and seconds.
- **Date:** Displays month and day.
- **Day of Week:** Indicates the current day (e.g., SU for Sunday).
- **AM/PM Indicator:** For 12-hour format.
- **Alarm Indicator:** Appears when the alarm is set.
- **Hourly Chime Indicator:** Appears when the hourly chime is active.

3. INITIAL SETUP

3.1 Setting Time and Date

1. From the normal time display mode, press the **MODE** button three times to enter the time setting mode. The seconds digits will begin to flash.
2. Press the **SET/RES** button to reset the seconds to 00.
3. Press the **ADV/ST/SPL** button to move the flashing selection to the hour digits.
4. Press the **SET/RES** button to adjust the hour. Press repeatedly to cycle through hours (including AM/PM for 12-hour format).
5. Press the **ADV/ST/SPL** button to move the flashing selection to the minute digits.
6. Press the **SET/RES** button to adjust the minutes.
7. Continue pressing **ADV/ST/SPL** to select and **SET/RES** to adjust the month, date, and day of the week in sequence.
8. Once all settings are complete, press the **MODE** button to exit the setting mode and return to the normal time display.

3.2 12/24 Hour Format Selection

While in the time setting mode (seconds flashing), press the **ADV/ST/SPL** button until the hour digits are flashing. Press the **SET/RES** button to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

4. OPERATING YOUR WATCH

4.1 Time Display Mode

This is the default mode, displaying the current time, day, and date. Press the **EL** button at any time to illuminate the display for a few seconds.

4.2 Alarm Function

1. From the normal time display, press the **MODE** button once to enter the Alarm mode. The alarm time will be displayed.
2. Press the **SET/RES** button to toggle the alarm ON/OFF. An alarm icon will appear when the alarm is active.
3. To set the alarm time, press the **ADV/ST/SPL** button. The hour digits will flash.
4. Press the **SET/RES** button to adjust the hour.
5. Press the **ADV/ST/SPL** button to move to the minute digits.
6. Press the **SET/RES** button to adjust the minutes.
7. Press the **MODE** button to exit alarm setting mode.
8. To activate/deactivate the hourly chime, press the **ADV/ST/SPL** button while in Alarm mode (without flashing digits). An hourly chime icon will appear when active.

4.3 Stopwatch Function

1. From the normal time display, press the **MODE** button twice to enter the Stopwatch mode. The display will show 00:00:00.
2. Press the **ADV/ST/SPL** button to start the stopwatch.
3. Press the **ADV/ST/SPL** button again to pause the stopwatch.
4. To resume, press **ADV/ST/SPL** again.
5. To reset the stopwatch to zero, press the **SET/RES** button while the stopwatch is paused.
6. To record split times, press the **SET/RES** button while the stopwatch is running. The display will freeze to show the split time, but the stopwatch continues to run in the background. Press **SET/RES** again to return to the running time.

7. Press the **MODE** button to exit Stopwatch mode.

5. CARE AND MAINTENANCE

5.1 Cleaning Your Watch

To clean your watch, wipe it gently with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by a dry cloth. Avoid using chemical cleaners, solvents, or abrasive materials, as these can damage the watch's finish and components.

5.2 Water Resistance

This watch is designed with a certain level of water resistance. Refer to the specifications section for details. Avoid operating buttons underwater. Exposure to hot water, steam, or sudden temperature changes can compromise water resistance.

5.3 Battery Replacement

When the display becomes dim or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and water resistance. Refer to the specifications for the battery type.

6. TROUBLESHOOTING

If you encounter any issues with your watch, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Display is blank or dim.	Low battery.	Replace the battery.
Time is incorrect.	Time not set correctly or accidental button press.	Re-set the time and date following Section 3.1.
Buttons are unresponsive.	Temporary software glitch or low battery.	Try pressing all buttons firmly. If issue persists, consider battery replacement.
Alarm does not sound.	Alarm is not activated or set incorrectly.	Ensure the alarm icon is displayed and the alarm time is set correctly (Section 4.2).

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

- **Model Name:** Tribe Ghost Digital Blue/Blue
- **Model Number:** 6809771505
- **Brand:** Breil Tribe
- **ASIN:** B00CFO0BLC
- **Display Type:** Digital LCD
- **Functions:** Time (Hour/Minute/Second, AM/PM), Date (Month/Day), Day of Week, Alarm, Hourly Chime, Stopwatch (1/100 second), EL Backlight.
- **Water Resistance:** Typically 3 ATM (30 meters) - suitable for daily use, splash/rain resistant. Not suitable for showering, bathing, swimming, snorkeling, or water-related work.

- **Battery Type:** Lithium Coin Cell (e.g., CR2016 or similar)
- **Case Material:** Plastic/Metal Alloy
- **Strap Material:** Silicone
- **First Available Date:** April 19, 2013

8. WARRANTY INFORMATION

This Breil Tribe Ghost Digital watch is covered by a manufacturer's warranty against defects in materials and workmanship. The duration and terms of the warranty may vary by region and retailer. Please retain your proof of purchase for warranty claims.

The warranty typically does not cover:

- Damage resulting from improper use, accidents, or unauthorized repairs.
- Normal wear and tear of the case, strap, or crystal.
- Battery life.
- Water damage if the watch was exposed to conditions beyond its specified water resistance.

For specific warranty details, please refer to the warranty card included with your purchase or contact the retailer where the watch was purchased.

9. CUSTOMER SUPPORT

If you require further assistance or have questions not covered in this manual, please contact:

- **Your Retailer:** For immediate assistance regarding purchase, returns, or initial setup.
- **Breil Customer Service:** Visit the official Breil website for contact information, FAQs, and service center locations.

When contacting support, please have your watch model number (6809771505) and proof of purchase readily available.