

## Tescoma 630046

# Tescoma Doughnut Maker Delicia User Manual

Model: 630046

## INTRODUCTION

This manual provides essential information for the proper use, care, and maintenance of your Tescoma Doughnut Maker Delicia. Please read these instructions carefully before first use and retain them for future reference.

The Tescoma Doughnut Maker Delicia is designed to simplify the process of creating homemade doughnuts. It is a manual tool for cutting dough into the classic doughnut shape.

## PRODUCT OVERVIEW



The Tescoma Doughnut Maker Delicia is a compact and easy-to-use kitchen tool. It consists of a main body with a cutting edge designed to create the outer ring of a doughnut, and a central plunger to create the hole. Its ergonomic design ensures comfortable handling during use.

The set contains: 1 x Doughnut Maker "Delicia".

Dimensions: Approximately 17.5 cm (height) x 10 cm (width) x 7.2 cm (depth).


## Setup

- Unpacking:** Carefully remove the Doughnut Maker from its packaging. Inspect for any signs of damage.
- Initial Cleaning:** Before first use, wash the Doughnut Maker thoroughly with warm soapy water. Rinse well and dry completely. This ensures hygiene and removes any manufacturing residues.

## Operating Instructions

Follow these steps to use your Tescoma Doughnut Maker Delicia:

- Prepare Dough:** Prepare your favorite doughnut dough according to your recipe. Ensure the dough is rolled out to the desired thickness on a floured surface.
- Flour the Maker:** Lightly flour the cutting edges of the Doughnut Maker to prevent sticking.
- Cut Doughnuts:** Place the Doughnut Maker firmly onto the rolled-out dough. Press down to cut the outer ring.
- Create Hole:** The central plunger will simultaneously create the hole in the center of the doughnut.
- Remove Doughnut:** Carefully lift the Doughnut Maker. The cut doughnut and its center piece should be released. If the dough sticks, gently tap the maker or use a small utensil to dislodge it.
- Repeat:** Continue cutting doughnuts until all dough is used.

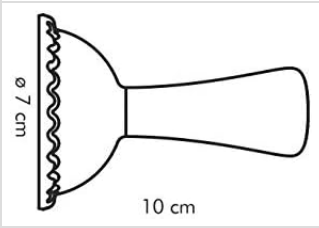

This diagram illustrates the approximate dimensions of the doughnut maker, showing a base diameter of approximately 7 cm and a total height of approximately 10 cm, which aids in understanding its size and how it interacts with dough.

## Maintenance and Cleaning

Proper maintenance ensures the longevity and hygiene of your Doughnut Maker:

- After Each Use:** Wash the Doughnut Maker immediately after each use to prevent dough from drying and sticking to the surfaces.
- Washing:** Hand wash with warm water and a mild dish soap. Use a soft sponge or brush to clean all surfaces, especially the cutting edges and the central plunger.
- Rinsing:** Rinse thoroughly under running water to remove all soap residue.
- Drying:** Dry completely with a clean cloth or allow to air dry before storing. Ensure no moisture remains to prevent potential bacterial growth.
- Storage:** Store the Doughnut Maker in a clean, dry place, away from direct sunlight and extreme temperatures.

*Note:* The product is made of plastic. Avoid using abrasive cleaners or scouring pads, as these can scratch the surface.

## Troubleshooting

While the Tescoma Doughnut Maker Delicia is a simple tool, here are some common issues and their solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dough sticks to the maker.	Insufficient flouring; dough too sticky.	Lightly flour the maker's cutting edges before each cut. Adjust dough consistency if it's excessively sticky.
Doughnuts are not cleanly cut.	Not enough pressure applied; dull edges (unlikely for new product).	Apply firm, even pressure when pressing down. Ensure the dough is on a flat, stable surface.

## SPECIFICATIONS


- Brand:** Tescoma
- Model Number:** 630046
- ASIN:** B00CFYR6TM
- Product Dimensions:** 6.89 x 3.94 x 2.83 inches (17.5 x 10 x 7.2 cm)
- Item Weight:** 0.95 ounces (0.03 Kilograms)
- Material:** Plastic
- Color:** Assorted
- Special Feature:** Doughnut Making Functionality
- Included Components:** Doughnut Maker, Brush (as per specifications)
- Style:** Modern
- Manufacturer:** Tescoma
- Date First Available:** June 24, 2013





## WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your Tescoma Doughnut Maker Delicia, please contact Tescoma customer service or visit their official website.

While specific warranty details are not provided in this manual, Tescoma products are generally designed for durability and quality. Please refer to the packaging or the official Tescoma website for the most up-to-date warranty information. You can find more information about Tescoma products and support at the [Tescoma Store on Amazon](#).

### Related Documents - 630046

	<p><a href="#">Tescoma Delícia Biscuit Maker &amp; Cake Decorator: Instructions &amp; Recipes</a></p> <p>Comprehensive guide to the Tescoma Delícia biscuit maker and cake decorator. Learn how to use it for cookies, meringues, and decorating cakes, with included recipes and maintenance tips.</p>
-------------------------------------------------------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

 <p>tescoma. GrandChef</p> <p>Instructions for use / Manual d'usage / Bedienungsanleitung / Istruzioni d'uso / Instrucciones de uso / Instrucțiuni de utilizare / Návod na použití / Benutzingaanwijzingen</p>	<p><a href="#">Tescoma GrandChef Sandwich Maker Instructions</a></p> <p>Comprehensive instructions for the Tescoma GrandChef sandwich maker, covering safety, usage, cleaning, and storage. Learn how to make perfect toasted sandwiches with this easy-to-use appliance.</p>
 <p>tescoma. presto</p>	<p><a href="#">Tescoma Presto Ham Maker with Thermometer Instructions and Recipes</a></p> <p>Discover how to make delicious homemade ham with the Tescoma Presto Ham Maker. This guide provides instructions, a parts legend, and recipes for creating various types of ham, including chicken ham, pork ham, and turkey ham.</p>
 <p>Ultima</p> <p>7,5 l</p> <p>6 l</p> <p>4 l</p> <p>tescoma.</p> <p>Instructions for use / Manual d'usage / Bedienungsanleitung / Istruzioni d'uso / Instrucciones de uso / Instrucțiuni de utilizare / Návod na použití / Benutzingaanwijzingen</p>	<p><a href="#">TESCOMA ULTIMA Pressure Cooker: Instructions for Use</a></p> <p>Comprehensive instructions for use, maintenance, and safety for the TESCOOMA ULTIMA pressure cooker. Learn about its features, operation, cooking guidelines, and safety precautions for optimal results.</p>
	<p><a href="#">Tescoma Delícia Baking Dishes - Durable Stoneware Bakeware</a></p> <p>Discover the Tescoma Delícia range of high-quality baking dishes. Available in multiple sizes (43x27cm, 34x22cm, 28x18cm, 22x13cm), these stoneware dishes are oven-safe up to 240°C and freezer-safe down to -18°C, perfect for all your baking and roasting needs.</p>