

Wilton 414-1012

Wilton Bag Cutter and Brush Set Instruction Manual

Model: **414-1012**

Brand: **Wilton**

PRODUCT OVERVIEW

Wilton's Tip Tool Set is an essential collection designed to simplify decorating tasks. It includes a specialized decorating bag cutter for precise bag preparation and two sizes of brushes for efficient cleaning of decorating tips.

Key Features

- Complete tool set for use with Wilton Decorating tips includes a bag cutter and two brushes for cleaning tips.
- Bag cutter slides over the Quick Release coupler and cuts the bag in the perfect place for using with a tip.
- Two brush sizes are designed to fit into standard and large tips for easier cleaning.
- All three tools connect onto a loop for convenient storage.
- Hand washing is recommended for all components.

PRODUCT COMPONENTS

The Wilton Bag Cutter and Brush Set includes the following components:

- 1. Decorating Bag Cutter:** Designed for precise cutting of decorating bags when used with a coupler.
- 2. Small Cleaning Brush:** Ideal for cleaning standard-sized decorating tips.
- 3. Large Cleaning Brush:** Suitable for cleaning larger decorating tips and couplers.
- 4. Storage Loop:** A convenient ring to keep all three tools together.



Bag Cutter and Brush Set

Juego de cortador de bolsa y de pinceles

Ensemble coupe-sac et brosses

3 tools
utensilio
outils

Includes large and small brushes and new bag cutter!

¡Incluye cepillos grandes y pequeños y un nuevo cortador para mangas!

Comprend une petite brosse, une grosse brosse et le tout nouveau coupe-sac!

Decorating bag and coupler not included.

Manga para decorar y acoplador no incluidos.

Sac à douille et adaptateur non compris.



Cuts bags with a quick turn!

¡Corta mangas con un rápido giro!

Coupe le sac sur simple rotation!

2 BRUSHES/PINCELES/BROSSES; 1 BAG CUTTER/CORTADOR DE BOLSA/COUPE-SAC

Image: The Wilton Bag Cutter and Brush Set displayed in its original packaging, showing the bag cutter, two brushes, and the storage loop. A hand demonstrates the use of the bag cutter with a decorating bag and coupler.



Image: All components of the Wilton Bag Cutter and Brush Set laid out. This includes the purple and white bag cutter, the two cleaning brushes (one small, one large) with purple handles, and the white storage loop.

SETUP

The Wilton Bag Cutter and Brush Set requires minimal setup before use.

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, wash the bag cutter and both cleaning brushes thoroughly with warm, soapy water. Rinse well and allow to air dry completely.
3. **Assemble for Storage:** Once dry, you may connect all three tools onto the provided storage loop for convenient organization.

OPERATING INSTRUCTIONS

Using the Decorating Bag Cutter

The bag cutter is designed to create a perfectly sized opening in your decorating bag for use with a standard coupler.

1. **Insert Coupler:** Place the narrow end of your decorating coupler (not included) into the decorating bag, pushing it down towards the tip of the bag.
2. **Position Cutter:** Slide the bag cutter over the threaded portion of the coupler, ensuring the bag material is positioned between the cutter and the coupler.
3. **Cut Bag:** Gently squeeze the sides of the bag cutter and twist it around the coupler. The cutter will precisely trim the bag, creating an opening that allows the coupler to fit snugly without excess bag material interfering with the tip.
4. **Attach Tip:** Once cut, attach your desired decorating tip and screw on the coupler ring to secure it.

Using the Cleaning Brushes

The two brushes are specifically sized to clean various decorating tips and couplers effectively.

1. **Prepare for Cleaning:** After use, remove any excess icing or food residue from your decorating tips and couplers.
2. **Select Brush:** Use the smaller brush for standard-sized decorating tips and the larger brush for wider tips or the inside of couplers.
3. **Clean:** Insert the appropriate brush into the tip or coupler opening. Use warm, soapy water and gently scrub the interior to remove all residue. The bristles are designed to reach into small crevices.
4. **Rinse and Dry:** Rinse the tips, couplers, and brushes thoroughly under clean water. Allow them to air dry completely before storage.

MAINTENANCE AND CARE

Cleaning

To ensure the longevity and hygiene of your Wilton Bag Cutter and Brush Set, follow these cleaning guidelines:

- **Hand Washing:** All components of this set are recommended for hand washing only. Do not wash in a dishwasher.
- **Warm Soapy Water:** Use warm water and a mild dish soap to clean the bag cutter and brushes after each use.
- **Thorough Rinse:** Rinse all parts thoroughly under running water to remove all soap residue.
- **Air Dry:** Allow all components to air dry completely before storing to prevent water spots or mildew.

Storage

Proper storage helps maintain the condition of your tools.

- **Use Storage Loop:** The included white storage loop is designed to keep the bag cutter and both brushes together. Simply snap the tools onto the loop.
- **Dry Environment:** Store the set in a clean, dry place away from direct sunlight or extreme temperatures.

TROUBLESHOOTING

This section addresses common issues you might encounter with your Wilton Bag Cutter and Brush Set.

Problem	Possible Cause	Solution
Bag cutter not cutting cleanly.	Incorrect positioning of bag/coupler; insufficient twisting motion.	Ensure the bag is taut and properly seated around the coupler. Apply firm but gentle pressure and twist the cutter fully around the coupler for a complete cut.
Brushes not effectively cleaning tips.	Dried icing/food residue; incorrect brush size used.	Soak tips in warm, soapy water before cleaning to soften dried residue. Ensure you are using the appropriate brush size for the tip being cleaned (small brush for small tips, large brush for larger tips).
Tools not staying on storage loop.	Improper attachment to the loop.	Ensure the tools are securely snapped onto the loop. The loop is designed to hold them firmly.

SPECIFICATIONS

Attribute	Detail
Brand	Wilton
Model Number	414-1012
Material	Polycarbonate
Color	White (with purple accents)
Product Dimensions	5"W x 1.5"H (approximate, for the set)
Number of Pieces	1 (set includes 3 tools: 1 cutter, 2 brushes, plus 1 storage loop)
Item Weight	1.6 ounces
UPC	787543869461, 885997490634, 070896010124, 885108374136, 885804343986, 885669762250
First Available Date	April 21, 2013

WARRANTY AND SUPPORT

For specific warranty information regarding the Wilton Bag Cutter and Brush Set, please refer to the official Wilton website or contact Wilton customer service directly. Warranty terms and conditions may vary.

For product support, questions, or assistance, please visit the official Wilton website or contact their customer support channels. Contact information can typically be found on the product packaging or the manufacturer's website.

Brand: Wilton

Website: www.wilton.com

© 2024 Wilton. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.