

[manuals.plus](#) /

› [GRUNDIG](#) /

› [Grundig 72847 Azerty USB Keyboard User Manual](#)

GRUNDIG 72847

Grundig 72847 Azerty USB Keyboard User Manual

Model: 72847

1. INTRODUCTION

This manual provides detailed instructions for the proper setup, operation, and maintenance of your Grundig 72847 Azerty USB Keyboard. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

The Grundig 72847 keyboard features an Azerty layout, a wired USB connection, and an ergonomic design. It includes dedicated multimedia and office direct keys for enhanced functionality and supports both Windows and Mac operating systems.

2. PRODUCT OVERVIEW

The Grundig 72847 keyboard is designed for comfortable and efficient typing. It features a standard Azerty key layout, along with additional function keys.

2.1 Key Features

- Azerty Layout:** Standard key arrangement primarily used in French-speaking regions.
- Wired USB Connection:** Ensures stable and reliable connectivity.
- Ergonomic Design:** Contoured shape for comfortable use and reduced strain.
- Multimedia Keys:** 8 dedicated keys for quick access to media controls (volume, play/pause, etc.).
- Office Direct Keys:** 17 additional keys for common office functions, enhancing productivity.
- Blue LED Indicators:** Signal illumination for various functions.
- Wide Compatibility:** Supports Windows and Mac operating systems.

2.2 Keyboard Components

Familiarize yourself with the main components of your Grundig 72847 keyboard:



Image 1: Top view of the Grundig 72847 Azerty USB Keyboard, showing the full key layout and integrated wrist rest. The purple USB cable is visible at the top right.

- **Standard Azerty Keys:** Alphanumeric, symbol, and function keys (F1-F12).
- **Numeric Keypad:** Located on the right side for data entry.
- **Multimedia Control Keys:** Located above the function keys and on the left/right sides.
- **Office Direct Keys:** Additional shortcut keys for common office applications.
- **USB Cable:** For connecting the keyboard to your computer.



Image 2: Close-up view of the left side of the keyboard, highlighting the Azerty key layout (e.g., 'A' key, 'Z' key) and the dedicated shortcut buttons on the left bezel.



Image 3: Detailed view of the left-front section, showing the ergonomic wrist rest and additional function keys on the left side, including keys for common computer functions like 'My Computer' or 'Email'.



Image 4: Close-up of the right-front section, displaying the numeric keypad and additional multimedia control keys on the right bezel, such as play/pause, stop, and track navigation.

3. SETUP

Follow these steps to connect your Grundig 72847 keyboard to your computer.

- 1. Unpack the Keyboard:** Carefully remove the keyboard from its packaging.
- 2. Locate a USB Port:** Identify an available USB port on your computer (PC or Mac).
- 3. Connect the USB Cable:** Insert the USB connector of the keyboard cable into the USB port on your computer.
- 4. Driver Installation (Automatic):** Your operating system (Windows or Mac) should automatically detect and install the necessary drivers. This process may take a few moments.
- 5. Verify Functionality:** Once installed, test the keyboard by typing in a text editor or browser to ensure all keys are responsive.

No additional software or drivers are typically required for basic functionality.

4. OPERATING INSTRUCTIONS

The Grundig 72847 keyboard offers standard typing functionality along with convenient multimedia and office shortcut keys.

4.1 Standard Typing

Use the alphanumeric and symbol keys for text input. The Azerty layout is standard for regions like France and Belgium.

4.2 Multimedia Keys

The keyboard includes 8 dedicated multimedia keys for quick control of media playback and volume. These are typically located above the function keys (F1-F12) or on the side bezels.

- **Volume Up/Down/Mute:** Adjust audio levels.
- **Play/Pause:** Control media playback.
- **Previous/Next Track:** Navigate through media files.
- **Stop:** Halt media playback.

4.3 Office Direct Keys

The 17 office direct keys provide shortcuts to frequently used functions, improving workflow efficiency. Refer to the key labels for specific functions, which may include:

- **Email:** Open your default email client.
- **Web Browser:** Launch your default web browser.
- **My Computer:** Open file explorer.
- **Search:** Activate the system search function.
- **Calculator:** Open the calculator application.
- **Sleep:** Put the computer into sleep mode.

The exact functionality of these keys may depend on your operating system and installed software.

5. MAINTENANCE

Proper care and maintenance will help extend the life of your keyboard.

- **Cleaning:**
 - Disconnect the keyboard from your computer before cleaning.
 - Use a soft, lint-free cloth slightly dampened with water or a mild cleaning solution to wipe the surface.
 - Avoid using harsh chemicals, abrasive cleaners, or solvents.
 - Use compressed air to remove dust and debris from between the keys.
- **Storage:** Store the keyboard in a clean, dry environment away from extreme temperatures and direct sunlight.
- **Avoid Spills:** Keep liquids away from the keyboard to prevent damage to internal components.

6. TROUBLESHOOTING

If you encounter issues with your Grundig 72847 keyboard, try the following solutions:

- **Keyboard Not Responding:**
 - Ensure the USB cable is securely connected to both the keyboard and the computer.
 - Try connecting the keyboard to a different USB port on your computer.
 - Restart your computer.
 - Test the keyboard on another computer to determine if the issue is with the keyboard or the original computer.

- **Specific Keys Not Working:**

- Check for any physical obstructions or debris under the key.
- Clean the keyboard as described in the Maintenance section.

- **Multimedia/Office Keys Not Functioning:**

- Ensure your operating system and applications are up to date.
- Some functions may require specific software or settings within your operating system.

If the problem persists after trying these steps, please contact customer support.

7. SPECIFICATIONS

| Feature | Detail |
|------------------------------|------------------------------------|
| Model Number | 72847 |
| Design | Azerty |
| Color | Matte Black |
| Connection Type | USB (Wired) |
| Cable Length | Approx. 1.4 m |
| Dimensions (W x D x H) | Approx. 47.5 x 19.5 x 2.7 / 3.8 cm |
| Weight | Approx. 910 g |
| Key Life | 8,000,000 actuations |
| Switch Life | 8,000,000 actuations |
| Operating Temperature | -5 to 40 °C |
| Operating Humidity | 20% to 90% |
| LED Indicators | Blue |
| Compatible Systems | Windows, Mac |
| Number of Multimedia Keys | 8 |
| Number of Office Direct Keys | 17 |

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided with your purchase or contact your retailer. You may also visit the official Grundig website for further assistance.

Please retain your proof of purchase for warranty claims.

