



Manuals.plus /

- › **BLACK+DECKER** /
- › BLACK+DECKER Steam-Mop Delta Accessory User Manual

## BLACK+DECKER FSMHDA

# BLACK+DECKER Steam-Mop Delta Accessory User Manual

Model: FSMHDA | Brand: BLACK+DECKER

## INTRODUCTION

This manual provides instructions for the BLACK+DECKER Delta Steam Accessory, designed to enhance the cleaning capabilities of your compatible BLACK+DECKER steam-mop.

The Delta Steam Accessory is specifically engineered for use with BLACK+DECKER steam-mop models FSMH1621 and FSS1600. It is ideal for cleaning and sanitizing large surface areas, particularly tiles and other hard floors.

### Package Contents:

- 1 x Delta Steam Accessory (Model: FSMHDA)
- 2 x Washable Microfiber Pads



Image: The BLACK+DECKER Delta Steam Accessory, shown with its two included microfiber pads.

## SETUP

Follow these steps to properly attach the Delta Steam Accessory and its microfiber pads to your compatible BLACK+DECKER steam-mop.

### 1. Attaching the Delta Accessory to the Steam-Mop:

1. Ensure your steam-mop is unplugged and cool before attaching any accessories.
2. Align the connection point of the Delta Steam Accessory with the corresponding port on your steam-mop (typically the hand-held unit or flexible hose).
3. Push the accessory firmly onto the port and rotate it approximately 90 degrees until you hear an audible "click." This indicates a secure connection.



Image: Side view of the Delta Steam Accessory, highlighting the connection mechanism for the steam-mop.

## 2. Attaching the Microfiber Pads:

1. Place one of the washable microfiber pads on a flat surface with the white mesh side facing up.
2. Align the Delta Steam Accessory over the pad, ensuring the hook-and-loop fasteners on the accessory match the corresponding areas on the pad.
3. Press the accessory firmly onto the pad to secure it. The "easy on/off" design allows for quick attachment and removal.



Image: The underside of the Delta Steam Accessory, showing how the microfiber pad attaches via hook-and-loop fasteners.

## OPERATING INSTRUCTIONS

Once the Delta Steam Accessory and microfiber pad are securely attached, you can begin using your steam-mop for cleaning.

1. Ensure your steam-mop is filled with water according to its specific instructions.
2. Plug in the steam-mop and allow it to heat up until steam is ready.
3. Hold the steam-mop with the Delta Accessory against the surface you wish to clean.
4. Move the accessory slowly and steadily over the surface to allow the steam and microfiber pad to effectively clean and sanitize.
5. For stubborn spots, hold the accessory over the area for a few extra seconds to allow the steam to penetrate.



Image: A hand demonstrating the grip and handling of the Delta Steam Accessory with an attached microfiber pad, ready for use.

## MAINTENANCE

Proper maintenance of your microfiber pads will ensure optimal cleaning performance and extend their lifespan.

### Cleaning the Microfiber Pads:

1. After each use, remove the microfiber pad from the Delta Steam Accessory.
2. The pads are machine washable. Wash them at a maximum temperature of 140°F (60°C).
3. **Do not use fabric softener**, as it can clog the microfiber and reduce its cleaning effectiveness.
4. **Do not use bleach.**
5. Allow pads to air dry. **Do not tumble dry, iron, or dry clean**



Image: Detailed view of the care label on a BLACK+DECKER microfiber pad, showing washing instructions and warnings against fabric softener, bleach, tumble drying, ironing, and dry cleaning.

### Care for the Delta Accessory:

- Wipe the accessory with a damp cloth after use to remove any residue.
- Store the accessory in a clean, dry place when not in use.

## TROUBLESHOOTING

If you encounter issues with your Delta Steam Accessory, consider the following common solutions:

Problem	Possible Cause / Solution
Accessory falls off during use.	The accessory may not be securely attached. Ensure it is pushed firmly onto the steam-mop's port and rotated approximately 90 degrees until it clicks into place.
Pads do not stick to the accessory.	The hook-and-loop fasteners on the pad or accessory may be dirty or worn. Clean the fasteners. If worn, replace the microfiber pad.
Reduced cleaning effectiveness.	Microfiber pads may be dirty or have residue from fabric softener. Wash pads according to maintenance instructions. Replace if heavily soiled or worn.

## SPECIFICATIONS

Feature	Detail
Brand	BLACK+DECKER
Model Name	FSMHDA
Included Components	1 x Delta Steam Accessory, 2 x washable microfibre pads
Item Weight	1.76 ounces (approx. 50 grams)
Product Dimensions	0.39 x 0.79 x 0.91 inches (approx. 1 x 2 x 2.3 cm)
Surface Recommendation	Tile (Fliese)
UPC	787162501629, 791456109330, 616268329342

## WARRANTY AND SUPPORT

Warranty information for your BLACK+DECKER steam-mop and its accessories is typically provided with the main steam-mop unit at the time of purchase. Please refer to the documentation included with your steam-mop for specific warranty terms and conditions.

For further support, product registration, or to explore other BLACK+DECKER products, please visit the official BLACK+DECKER store or website:

**Visit the Official BLACK+DECKER Store**