

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ESPRIT](#) /

› [ESPRIT Chronograph Analog Watch - Model Eros Chrono \(EL101741F03\) Instruction Manual](#)

ESPRIT Eros Chrono

ESPRIT Chronograph Analog Watch - Model Eros Chrono (EL101741F03) Instruction Manual

Comprehensive guide for setup, operation, and maintenance of your Esprit Chronograph Watch.

1. INTRODUCTION

Thank you for choosing the Esprit Chronograph Analog Watch, Model Eros Chrono. This manual provides detailed instructions to help you understand and operate your watch effectively. Please read this manual carefully to ensure proper use and to maximize the lifespan of your timepiece.



Image 1.1: Front view of the Esprit Chronograph Analog Watch, Model Eros Chrono, featuring a white dial, silver-tone case, and brown leather strap.

2. WATCH COMPONENTS

Familiarize yourself with the main components of your Esprit Chronograph watch:

- **Crown:** Used for setting time and date.
- **Pushers (A & B):** Used to operate the chronograph functions.
- **Main Dial:** Displays hours, minutes, and seconds.
- **Sub-dials:** Chronograph minute counter, chronograph second counter, and 24-hour indicator (specific functions may vary slightly).
- **Date Window:** Displays the current date.
- **Leather Strap:** Secures the watch to your wrist.

3. SETUP AND INITIAL ADJUSTMENT

3.1. Setting the Time

1. Pull the crown out to the second click position.
2. Turn the crown clockwise or counter-clockwise to set the hour and minute hands to the desired time. Ensure the AM/PM is correctly set if your watch has a 24-hour indicator or date changes at midnight.
3. Push the crown back to the normal position.

3.2. Setting the Date

1. Pull the crown out to the first click position.
2. Turn the crown clockwise or counter-clockwise to set the date. Avoid setting the date between 9 PM and 3 AM, as this can interfere with the automatic date change mechanism.
3. Push the crown back to the normal position.

4. OPERATING THE CHRONOGRAPH FUNCTION

Your Esprit Chronograph watch features a stopwatch function for measuring elapsed time.

1. **Start:** Press pusher A (top pusher) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press pusher A again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** After stopping, press pusher B (bottom pusher) to reset all chronograph hands to their zero positions.
4. **Split Time (if applicable):** Some models allow for split time measurement. Consult specific model documentation if this feature is present.

5. MAINTENANCE AND CARE

5.1. General Care

- Avoid exposing your watch to extreme temperatures, direct sunlight for prolonged periods, or strong magnetic fields.
- Clean the watch case and metal bracelet (if applicable) with a soft, dry cloth. For leather straps, wipe

gently with a slightly damp cloth and allow to air dry.

- Avoid contact with chemicals such as solvents, detergents, perfumes, and cosmetics, as they can damage the case, strap, or gaskets.

5.2. Water Resistance

Your watch has a specific water resistance rating. Refer to the case back for details. Generally, watches are rated as follows:

- **3 ATM (30 meters/100 feet):** Suitable for daily use, splash/rain resistant. Not suitable for showering, bathing, swimming, snorkeling, or water-related work.
- **5 ATM (50 meters/165 feet):** Suitable for showering or swimming in shallow water. Not suitable for diving or snorkeling.
- **10 ATM (100 meters/330 feet):** Suitable for swimming and snorkeling.

Note: Do not operate the crown or pushers when the watch is wet or submerged, as this can compromise water resistance.

5.3. Automatic Movement

This watch features an automatic movement, meaning it is powered by the motion of your wrist. If the watch stops, it may need to be wound manually or worn for a period to build up power reserve. To manually wind, gently turn the crown clockwise in its normal (pushed-in) position for about 20-30 rotations.

6. TROUBLESHOOTING

- **Watch not running:** Ensure the watch is fully wound (for automatic movements, wear it or manually wind it). If it's a quartz watch (not this model), check the battery.
- **Date not changing:** Check if the time is set correctly (AM/PM). Avoid setting the date between 9 PM and 3 AM.
- **Chronograph hands not resetting to zero:** This may require a specific reset procedure. Consult a qualified watch technician if the standard reset (Pusher B) does not work.
- **Water ingress:** If moisture appears inside the watch, take it to a service center immediately to prevent further damage.

7. SPECIFICATIONS

Feature	Detail
Brand	ESPRIT
Model Number	Eros Chrono (EL101741F03)
Movement Type	Automatic
Display Type	Analog
Dial Color	White
Case Material	Stainless Steel
Case Diameter	44 Millimetres
Band Material	Leather

Band Color	Brown
Item Weight	90.5 Grams
Product Dimensions	13.49 x 13 x 13.49 cm





Image 7.1: The Esprit Chronograph watch presented in its open box (left) and the closed watch box (right).

8. WARRANTY AND SUPPORT

 
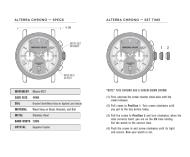
Your Esprit Chronograph watch comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions, including warranty duration and coverage details.

For technical support, service, or warranty claims, please contact your authorized Esprit retailer or visit the official Esprit website for contact information for your region. Ensure you retain your proof of purchase for any warranty-related inquiries.

Warranty Type: Manufacturer

© 2023 ESPRIT. All rights reserved. Information in this manual is subject to change without notice.

Related Documents - Eros Chrono

 <small>MR6011 REV A MARCH 1984</small>	<p><u>ESPRIT ESP 6310 Video Display Terminal: Reference Manual</u></p> <p>This reference manual provides comprehensive details on the ESPRIT ESP 6310 Video Display Terminal, covering installation, setup, operation, emulation modes, interface specifications, remote commands, and troubleshooting. Includes technical characteristics and safety information.</p>
	<p><u>Esprit V1 Wall Mirror - Limited Edition</u></p> <p>Detailed information about the Esprit V1 wall mirror, featuring a resin frame, specific dimensions, and limited edition details. Part of the Edizione Limitata Collection.</p>
	<p><u>Esprit V2 Wall Mirror - Limited Edition by ARTEM</u></p> <p>Discover the Esprit V2 wall mirror, a limited edition piece from ARTEM. Crafted from hand-molded plaster and mirror, it measures 86x19.5x123 cm and is available as 150 numbered and signed units with a 7-week lead time.</p>
	<p><u>Alterra Chrono Watch Specifications and Time Setting Guide Original Grain</u></p> <p>Detailed specifications and step-by-step instructions for setting the time on the Original Grain Alterra Chrono watch. Learn about its Miyota 6S21 movement, 44mm case, wood inlay dial, and chronograph features.</p>
	<p><u>Hamilton Khaki Navy Frogman Auto Chrono Instruction Manual</u></p> <p>This document provides instructions for the Hamilton Khaki Navy Frogman Auto Chrono watch, including features, recommendations for water-resistance, and how to adjust the time and date, and use the chronograph functions.</p>
	<p><u>Adidas Originals Timepieces: Care Instructions & User Manuals</u></p> <p>Comprehensive care instructions and user manuals for Adidas Originals Timepieces, covering watch care, strap adjustment, and setting various watch functions like analog, chronograph, digital, world time, and analog-digital models.</p>