

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [iCES](#) /

› [iCES ISCD-33 Portable Retro Radio User Manual](#)

iCES ISCD-33

iCES ISCD-33 Portable Retro Radio User Manual

Model: ISCD-33

1. INTRODUCTION

Thank you for purchasing the iCES ISCD-33 Portable Retro Radio. This manual provides essential information for the safe and efficient operation of your device. Please read it thoroughly before use and retain it for future reference.

Safety Information

- Do not expose the unit to rain or moisture to prevent fire or electric shock.
- Ensure proper ventilation; do not block any ventilation openings.
- Use only the power adapter specified for this device.
- Do not open the casing. Refer all servicing to qualified personnel.
- Dispose of batteries responsibly according to local regulations.

2. PACKAGE CONTENTS

Please check that all items are present:

- iCES ISCD-33 Portable Retro Radio
- AC Power Adapter
- User Manual (this document)

3. PRODUCT OVERVIEW

Familiarize yourself with the main components and controls of your iCES ISCD-33 radio.



Figure 3.1: Front View of the iCES ISCD-33 Radio. This image displays the front of the red iCES ISCD-33 radio, featuring the central CD/MP3 player compartment, the LCD display on the left, and the FM radio tuner dial on the right. The telescopic antenna is extended upwards.



Figure 3.2: Top Controls. This image shows a close-up of the top panel of the iCES ISCD-33 radio. Visible controls include the volume knob, repeat button, memory button, CD/USB source selector, mute button, folder navigation buttons, and tuning knob.

Control Panel Layout

- Volume Knob:** Adjusts the audio output level.
- Repeat Button:** Repeats current track or all tracks (CD/USB mode).
- Memory Button:** Stores FM radio presets or CD program sequence.
- Tuner/CD/USB Selector:** Switches between FM radio, CD/MP3, and USB playback modes.
- Mute Button:** Temporarily silences audio output.
- Folder Up/Down Buttons:** Navigates folders on USB or MP3 CDs.
- Play/Pause Button:** Starts or pauses playback.
- Stop Button:** Stops playback.
- Skip/Search Buttons:** Skips tracks or fast forwards/rewinds.
- Tuning Knob:** Manually tunes FM radio frequencies.
- LCD Display:** Shows track number, time, radio frequency, and mode.
- CD Compartment:** Front-loading tray for CDs and MP3 CDs.
- USB Port:** For connecting USB storage devices.
- Headphone Jack (3.5mm):** For private listening.
- Telescopic Antenna:** For FM radio reception.
- AC Power Input:** Connects to the AC adapter.
- Battery Compartment:** Located on the bottom for optional battery power.

4. POWER SUPPLY

AC Power Operation

To power the unit using AC electricity:

1. Ensure the voltage of your power outlet matches the rating on the AC adapter (230V).
2. Plug the small end of the AC adapter into the AC power input jack on the back of the radio.
3. Plug the other end of the AC adapter into a standard wall outlet.

Battery Operation

For portable use, the unit can be powered by batteries (not included).

1. Open the battery compartment cover located on the bottom of the unit.
2. Insert the required number of C-size batteries (refer to the compartment for polarity).
3. Close the battery compartment cover securely.

Note: When the AC adapter is connected, battery power is automatically disconnected.

5. FM RADIO OPERATION

1. Extend the telescopic antenna for optimal reception.
2. Set the Tuner/CD/USB selector to 'Tuner' or 'FM'.
3. Rotate the Tuning Knob to select your desired FM radio station. The frequency will be displayed on the LCD.
4. Adjust the Volume Knob to your preferred listening level.

Storing Radio Presets

The unit allows for storing up to 20 FM radio presets.

1. Tune to the desired station using the Tuning Knob.
2. Press the **Memory** button. The display will show a preset number (e.g., 'P01').
3. Use the Skip/Search buttons to select the desired preset number.
4. Press the **Memory** button again to confirm and save the station.
5. To recall a preset, press the **Memory** button repeatedly to cycle through stored stations, or use the Skip/Search buttons to navigate to the desired preset number and then press **Memory**.

6. CD/MP3 DISC OPERATION

This unit can play standard audio CDs and MP3 CDs.

1. Set the Tuner/CD/USB selector to 'CD'.
2. Gently open the CD compartment door.
3. Place a CD or MP3 CD onto the spindle with the label side facing up.
4. Close the CD compartment door. The unit will read the disc, and the total number of tracks/folders will appear on the LCD.

5. Press the **Play/Pause** button to start playback.
6. Use the **Skip/Search** buttons to navigate between tracks. Hold them down to fast forward or rewind within a track.
7. For MP3 CDs with folders, use the **Folder Up/Down** buttons to navigate between folders.
8. Press the **Stop** button to stop playback.

Program Playback (CD/MP3)

You can program up to 20 tracks to play in a specific order.

1. In Stop mode, press the **Memory** button. 'P01' will flash on the display.
2. Use the **Skip/Search** buttons to select the first desired track.
3. Press the **Memory** button again to store the track. 'P02' will flash.
4. Repeat steps 2 and 3 to add up to 20 tracks to your program.
5. After programming, press the **Play/Pause** button to start programmed playback.

7. USB PLAYBACK

The unit supports playing MP3 files from a USB flash drive.



Figure 7.1: USB Port with USB Drive. This image provides a close-up view of the USB port located on the front-bottom of the iCES ISCD-33 radio, with a silver USB flash drive securely inserted, indicating readiness for MP3 playback.

1. Insert your USB flash drive into the USB port on the front of the unit.
2. Set the Tuner/CD/USB selector to 'USB'. The unit will automatically scan and display the number of tracks/folders.

3. Press the **Play/Pause** button to start playback.
4. Use the **Skip/Search** buttons to navigate between tracks. Hold them down to fast forward or rewind within a track.
5. Use the **Folder Up/Down** buttons to navigate between folders on the USB drive.
6. Press the **Stop** button to stop playback.

Note: Ensure your USB drive is formatted to FAT32 and contains only supported MP3 audio files.

8. AUX INPUT

Connect external audio devices (e.g., smartphones, MP3 players) to the unit using the 3.5mm AUX input.

1. Connect one end of a 3.5mm audio cable (not included) to the headphone jack or line-out of your external device.
2. Connect the other end of the cable to the 3.5mm AUX input jack on the front of the iCES ISCD-33.
3. Set the Tuner/CD/USB selector to 'AUX' (if available, otherwise ensure no other source is playing).
4. Start playback on your external device.
5. Adjust the volume on both the external device and the iCES ISCD-33 for optimal sound.

9. MAINTENANCE

Cleaning

- Wipe the exterior of the unit with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.
- For the CD lens, use a specialized CD lens cleaner disc.

Storage

If storing the unit for an extended period, remove the batteries to prevent leakage and damage.

10. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	AC adapter not connected; Batteries depleted or incorrectly inserted.	Check AC adapter connection; Replace batteries or ensure correct polarity.
No sound	Volume too low; Mute function active; Incorrect source selected.	Increase volume; Press Mute button; Select correct source (Tuner, CD, USB, AUX).
CD/MP3 disc not playing	Disc inserted incorrectly; Disc is dirty or scratched; Disc format not supported.	Re-insert disc correctly; Clean or replace disc; Ensure disc is standard audio CD or MP3 CD.
USB not playing	USB drive not inserted correctly; USB drive not formatted to FAT32; Files not MP3 format.	Re-insert USB drive; Format USB drive to FAT32; Ensure files are MP3.

Problem	Possible Cause	Solution
Poor FM reception	Antenna not extended; Weak signal; Interference.	Fully extend and adjust antenna; Try moving the unit to a different location.

11. SPECIFICATIONS

- **Model:** iCES ISCD-33
- **Power Supply:** AC 230V, 50Hz / Battery (C-size, quantity specified in compartment)
- **Output Power:** 2 Watts (RMS)
- **Speakers:** 2 built-in stereo speakers
- **Supported Media:** Audio CD, MP3 CD, USB (MP3 files)
- **Radio Tuner:** FM
- **Display:** LCD
- **Connectivity:** USB port, 3.5mm Headphone Jack, 3.5mm AUX Input
- **Dimensions (L x W x H):** 36 x 12 x 19.3 cm (approximately)
- **Weight:** 2.58 kg (approximately)

12. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or contact your local retailer. Keep your proof of purchase for any warranty claims.