

[Manuals.plus](#) /

> [Nixon](#) /

> Nixon Wire In-Ear Headphones User Manual

Nixon H0171188-00

Nixon Wire In-Ear Headphones User Manual

Model: H0171188-00

INTRODUCTION

Thank you for choosing the Nixon Wire In-Ear Headphones. These headphones are designed to provide a high-quality audio experience with convenient controls and a built-in microphone for communication. This manual provides essential information on setting up, operating, maintaining, and troubleshooting your new headphones.

SETUP

Package Contents

- Nixon Wire In-Ear Headphones
- 3 pairs of interchangeable silicone ear tips (various sizes)
- Transport box

Connecting Your Headphones

The Nixon Wire In-Ear Headphones connect via a standard 3.5 mm stereo analog jack.

1. Identify the 3.5 mm audio jack on your audio device (smartphone, tablet, laptop, etc.).
2. Insert the 3.5 mm plug of the headphones firmly into the audio jack until it clicks into place.
3. Ensure the connection is secure to prevent audio interruptions.



Image: The Nixon Wire In-Ear Headphones, showcasing the earbud design, the circular Nixon logo on one earbud, and the in-line control module with a microphone. The 3.5mm jack is not explicitly visible in this crop but is implied by the wired connection.

OPERATING

Basic Functions

Your headphones feature an in-line control module with 3 buttons and a built-in microphone.

- **Center Button:**
 - Press once to play/pause music or answer/end a call.
 - Press twice to skip to the next track.
 - Press three times to go to the previous track.
 - Press and hold to activate voice assistant (e.g., Siri, Google Assistant).
- **Volume Up (+) Button:** Press to increase volume.
- **Volume Down (-) Button:** Press to decrease volume.

Wearing the Headphones

Select the ear tips that provide the most comfortable and secure fit. Insert the earbuds gently into your ears. The correct fit is crucial for optimal sound quality and bass response.

Using the Microphone

The integrated microphone allows for hands-free calls. Position the microphone close to your mouth for clear voice transmission during calls.

MAINTENANCE

Cleaning

- Wipe the headphones and cable with a soft, dry, lint-free cloth.

- For ear tips, remove them from the earbuds and clean with a mild soap solution if necessary, then rinse thoroughly and allow to dry completely before reattaching.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Avoid getting moisture into any openings.

Storage

When not in use, store your headphones in the provided transport box to protect them from dust, dirt, and physical damage. Avoid extreme temperatures.

Replacing Ear Tips

The silicone ear tips are removable and replaceable. Gently pull to remove and push to attach new ear tips. Ensure they are securely fastened.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No sound or low volume	Headphone plug not fully inserted. Device volume is too low or muted. Incorrect audio output selected on device. Damaged cable or plug.	Ensure the 3.5 mm plug is fully inserted into the device's audio jack. Increase the volume on your device and/or using the in-line controls. Check your device's audio settings to ensure the correct output is selected. Try with another device to confirm if the headphones are faulty.
Microphone not working	Microphone port on device is dirty or blocked. App permissions for microphone. Damaged microphone.	Ensure the microphone port on your device is clean. Check app permissions on your device to ensure the app has access to the microphone. Test the microphone with another device or application.
Poor sound quality (static, distorted)	Loose connection. Damaged cable. Dirty ear tips or speaker mesh. Audio source issue.	Ensure the plug is fully inserted and secure. Inspect the cable for any visible damage. Clean the ear tips and speaker mesh carefully. Try playing audio from a different source or device.

SPECIFICATIONS

Feature	Detail
Model Number	H0171188-00
Driver Type	8 mm Dynamic
Frequency Response	20 - 20,000 Hz

Feature	Detail
Sensitivity	106 dB/V @ 1 kHz
Impedance	16 Ω
Interface	3.5 mm Stereo Analog Jack
Connectivity Technology	Wired
Microphone	Integrated
Controls	3-button in-line remote
Material Type	Plastic
Included Components	Headphones, Transport box, 3 interchangeable silicone tips
Package Dimensions	10 x 10 x 4 cm
Weight	14 g

WARRANTY AND SUPPORT

Nixon products are manufactured to the highest quality standards. For information regarding warranty coverage and terms, please refer to the warranty card included with your purchase or visit the official Nixon website.

For technical support, troubleshooting assistance beyond this manual, or to inquire about replacement parts, please contact Nixon customer service through their official channels.

