



Manuals.plus /

› ARREGUI /

› ARREGUI C9235 Deposit Box Instruction Manual

## ARREGUI C9235

# ARREGUI C9235 Deposit Box Instruction Manual

Model: C9235

## INTRODUCTION

---

This manual provides instructions for the proper use and maintenance of your ARREGUI C9235 Deposit Box. Please read this manual thoroughly before operating the product to ensure safe and efficient use.

The ARREGUI C9235 is a portable cash box designed for securing money, bank cards, and small valuables. It is constructed from steel with an enamel coating for durability and features a cylinder lock for security.

## SAFETY INFORMATION

---

- Keep keys in a secure location, separate from the deposit box.
- Do not expose the deposit box to extreme temperatures or moisture.
- This product is designed for securing small valuables and cash; it is not a high-security safe.
- Ensure the lock mechanism is clean and free from debris for optimal function.

## PRODUCT COMPONENTS

---

The ARREGUI C9235 Deposit Box includes the following components:

- Deposit Box (main unit)
- Cylinder Lock with 2 Keys
- Removable Tray with Compartments
- Nickel-plated Steel Handle



Figure 1: ARREGUI C9235 Deposit Box (closed view). This image shows the blue deposit box with its integrated handle and the key inserted into the cylinder lock.



Figure 2: ARREGUI C9235 Deposit Box (open view with tray). The box is open, revealing the removable tray with multiple compartments for organizing coins and small items.



Figure 3: ARREGUI C9235 Deposit Box (open view without tray). This image displays the interior of the deposit box when the removable tray has been lifted out, showing the main storage compartment.



Figure 4: Removable Tray. A close-up view of the black plastic tray with various sized compartments, designed for organizing coins, bills, or other small items within the deposit box.

## SETUP

1. **Unpacking:** Carefully remove the deposit box and all accessories from its packaging. Retain packaging for future storage or transport if needed.
2. **Key Identification:** Locate the two keys provided with your deposit box. These keys are unique to your lock. Store one key in a safe, separate location as a spare.
3. **Initial Opening:** Insert one of the keys into the cylinder lock on the front of the box. Turn the key clockwise to unlock the box. Lift the lid to open.
4. **Tray Placement:** The C9235 model includes a removable tray. Place this tray inside the box for organizing contents. The tray can be easily lifted out to access the main compartment below.

## OPERATING INSTRUCTIONS

### Opening the Deposit Box

1. Insert the key into the lock.
2. Turn the key clockwise until the lock mechanism disengages.
3. Lift the lid of the deposit box.

### Closing and Locking the Deposit Box

1. Ensure the lid is fully closed and aligned with the base.
2. Insert the key into the lock (if not already there).
3. Turn the key counter-clockwise until it clicks into the locked position.
4. Remove the key and store it in a secure location. Always verify the box is securely locked by attempting to lift the lid without the key.

### Using the Removable Tray

The removable tray is designed for organizing smaller items such as coins, paper clips, or keys. Larger items like bills or documents can be stored in the main compartment underneath the tray.

- To access the main compartment, simply lift the tray by its edges.
- To replace the tray, carefully lower it back into the box, ensuring it sits flush.

## MAINTENANCE

- **Cleaning:** Wipe the exterior of the deposit box with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the enamel finish.
- **Lock Care:** Periodically, apply a small amount of graphite powder or a silicone-based lubricant to the keyhole to ensure smooth operation of the lock mechanism. Do not use oil-based lubricants as they can attract dust.
- **Storage:** When not in use, store the deposit box in a dry environment to prevent rust or corrosion.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Key does not turn in lock.	Debris in keyhole, incorrect key, or stiff mechanism.	Ensure you are using the correct key. Gently try to clear any visible debris. Apply graphite powder to the keyhole.
Lid does not close properly.	Obstruction inside the box, or misalignment.	Check for items blocking the lid. Ensure the removable tray is seated correctly. Gently align the lid with the base.
Lock feels stiff.	Lack of lubrication.	Apply a small amount of graphite powder or silicone-based lubricant to the keyhole.

## SPECIFICATIONS

Feature	Detail
Model Number	C9235
Brand	ARREGUI
External Dimensions (H x W x D)	9 x 25 x 18 cm (3.54" x 9.84" x 7.09")
Internal Dimensions (H x W x D)	5.5 x 24 x 14.5 cm (2.17" x 9.45" x 5.71")
Material	Alloy Steel with Enamel Coating
Lock Type	Cylinder Key Lock
Color	Blue
Capacity	Approximately 2 Liters
Weight	1.2 kg (2.65 lbs)
Special Features	Portable, Removable Tray with Compartments



Figure 5: Product Dimensions. This image illustrates the external measurements of the ARREGUI C9235 Deposit Box, showing its height (9 cm), width (25 cm), and depth (18 cm).

## WARRANTY INFORMATION

---

ARREGUI products are manufactured to high-quality standards. For specific warranty terms and conditions, please refer to the warranty card included with your purchase or visit the official ARREGUI website. Keep your proof of purchase for warranty claims.

## CUSTOMER SUPPORT

---

If you have any questions, require assistance, or need to report an issue with your ARREGUI C9235 Deposit Box, please contact ARREGUI customer support through their official website or the contact information provided in your product packaging. For more information, visit: [www.arregui.es](http://www.arregui.es)