

[Manuals.plus](#) /

› [Logitech G](#) /

› Logitech Extreme 3D Pro Precision Fightstick User Manual

Logitech G Extreme 3D Pro

Logitech Extreme 3D Pro Precision Fightstick User Manual

Model: Extreme 3D Pro (P/N: 942-000031)

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your Logitech Extreme 3D Pro Precision Fightstick. Please read this manual thoroughly to ensure optimal performance and longevity of your device.



Figure 1: Front view of the Logitech Extreme 3D Pro Precision Fightstick.

SETUP

System Requirements

- PC with available USB port
- Windows® 8, Windows® 7, or Windows Vista®
- macOS® 10.7 or later

Connecting the Fightstick

1. Unpack the Logitech Extreme 3D Pro Precision Fightstick from its packaging.
2. Locate an available USB port on your computer.
3. Insert the USB connector from the fightstick into the USB port.
4. Your operating system should automatically detect and install the necessary drivers. This process may take a few

moments.

5. Once drivers are installed, the fightstick is ready for use. You may need to calibrate it within your game's settings for optimal performance.



Figure 2: The fightstick's USB cable for connection to a computer.

OPERATING THE FIGHTSTICK

The Logitech Extreme 3D Pro features 12 programmable buttons, an 8-way hat switch, a rapid-fire trigger, and a twist-handle rudder control for precise command in various simulations and games.

Key Features and Controls

- **Precision Twist Rudder Control:** The joystick handle twists for rudder control, allowing for natural one-handed control.
- **12 Programmable Buttons:** Customize button assignments for complex commands and macros.
- **8-Way Hat Switch:** Quickly switch views or target enemies.
- **Rapid-Fire Trigger:** For quick and responsive actions.
- **Comfortable Hand Grip:** Ergonomically designed for extended play sessions.



Figure 3: Side view highlighting the ergonomic grip and trigger button.



Figure 4: Detail of the top-mounted buttons and 8-way hat switch for quick access.



Figure 5: The throttle control located on the base for precise speed adjustments.

Software Configuration (Optional)

For advanced customization, Logitech may offer software for button remapping and profile management. Refer to the Logitech support website for the latest software downloads and instructions specific to your operating system.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the fightstick. Avoid abrasive cleaners or solvents.
- **Storage:** Store the fightstick in a cool, dry place away from direct sunlight and extreme temperatures.
- **Cable Care:** Avoid sharply bending or twisting the USB cable to prevent internal damage.

TROUBLESHOOTING

Fightstick not recognized by computer:

Ensure the USB cable is securely connected to a working USB port. Try a different USB port or restart your computer. Check Device Manager (Windows) or System Information (macOS) to see if the device is listed.

Buttons or axes not responding correctly:

Calibrate the fightstick within your game's controller settings. If issues persist, check for updated drivers on the Logitech support website. Ensure no other conflicting input devices are connected.

Inaccurate control or drifting:

Recalibrate the joystick. Some games may have deadzone settings that can be adjusted to compensate for minor drifting.

Windows 10/11 compatibility issues:

While generally compatible, some users report issues. Ensure your operating system is fully updated. Refer to Logitech's support page for specific driver updates or compatibility notes. Disabling 'Core Isolation Protection' in Windows Security might resolve some issues for Windows 11 users, as reported by some users.

SPECIFICATIONS

Feature	Detail
Brand	Logitech G
Model Name	Extreme 3D Pro
Item Model Number	942-000031
Connectivity Technology	USB
Compatible Devices	PC, Mac
Controller Type	Joystick
Hardware Platform	PC
Operating System	Windows 8, 7, Vista; macOS 10.7+
Item Weight	2.2 pounds (approx. 1 kg)
Product Dimensions (LxWxH)	9.06 x 8.27 x 9.13 inches (approx. 23 x 21 x 23.2 cm)
Color	Black

SUPPORT AND WARRANTY

For technical support, driver downloads, and warranty information, please visit the official Logitech G support website:
[Logitech Support Website](#)
Product warranty details are typically provided with your purchase documentation or can be found on the Logitech support website. Please retain your proof of purchase for warranty claims.

© 2025 Logitech G. All rights reserved. Logitech, Logitech G, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00CJ5FPTA>

More documents and user manuals: <https://manuals.plus/>