

[Manuals.plus](#) /

› [Logitech G](#) /

› Logitech F710 Wireless Gamepad User Manual

Logitech G 940-000142

Logitech F710 Wireless Gamepad User Manual

Model: 940-000142

INTRODUCTION

The Logitech F710 Wireless Gamepad provides a console-like gaming experience on your PC. Featuring a 2.4 GHz wireless connection, dual vibration feedback motors, and a familiar button layout, it offers precise control and immersive gameplay. This manual will guide you through the setup, operation, and maintenance of your F710 Gamepad.



Image: Logitech F710 Wireless Gamepad, showing its silver and black design with dual analog sticks, D-pad, and colored action buttons.

SETUP

Package Contents

- Logitech F710 Wireless Gamepad
- USB Nano-receiver
- Range-extending USB cable
- 2 AAA batteries (pre-installed or included)
- User documentation (this manual)

Installing Batteries

1. Locate the battery compartment on the back of the gamepad.
2. Slide open the battery cover.
3. Insert two AAA batteries, ensuring correct polarity (+/-).
4. Close the battery cover securely.
5. **Note:** The USB nano-receiver is typically stored inside the battery compartment for safekeeping.

Connecting the Receiver

1. Plug the USB nano-receiver into an available USB port on your computer.
2. For optimal performance and range, especially if the computer is under a desk, use the included range-extending USB cable to position the receiver closer to the gamepad.
3. Your computer should automatically detect and install the necessary drivers. This may take a few moments.

OPERATING THE GAMEPAD

Mode Switch

The F710 features a mode switch on the back, allowing you to select between XInput and DirectInput modes. XInput is the standard for modern PC games, while DirectInput provides compatibility with older titles.

- **XInput Mode (X):** Recommended for most new games. The gamepad will be recognized as an Xbox 360 controller.
- **DirectInput Mode (D):** For older games that do not support XInput. You may need to configure controls manually in some games.

Button Layout

The F710 features a familiar console-style layout:

- **Dual Analog Sticks:** For precise 360-degree movement and camera control.
- **D-Pad:** For directional input, often used in fighting games or menus.
- **Action Buttons (A, B, X, Y):** Standard colored buttons for in-game actions.
- **Shoulder Buttons (LB, RB) & Triggers (LT, RT):** Located on the top of the gamepad for additional actions.
- **Back/Select & Start Buttons:** For in-game menu navigation and pausing.
- **Logitech Button:** May open game libraries or specific software depending on the game or system.
- **Vibration On/Off Switch:** Located on the top of the gamepad, allows you to enable or disable the dual vibration feedback motors.

MAINTENANCE

Cleaning

To clean your gamepad, use a soft, slightly damp cloth. Avoid using harsh chemicals or abrasive materials, as these can damage the surface. Ensure the gamepad is powered off and disconnected from the receiver before cleaning.

Storage

When not in use for extended periods, remove the batteries to prevent leakage. Store the gamepad and receiver in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Solution
Gamepad not recognized by computer.	Ensure the USB nano-receiver is securely plugged into a working USB port. Try a different USB port. Check if the gamepad has fresh batteries and is powered on. Restart your computer.
Poor wireless range or connection drops.	Use the included range-extending USB cable to position the receiver closer to the gamepad. Ensure there are no large metal objects or other wireless devices (e.g., Wi-Fi routers, cordless phones) causing interference between the gamepad and receiver. Replace batteries if low.
Vibration feedback not working.	Check the vibration on/off switch on the top of the gamepad. Ensure the game you are playing supports vibration feedback. Verify that the gamepad is in XInput mode for modern games. Install or update Logitech gaming software if available for advanced settings.
Buttons or sticks not responding correctly.	Check the mode switch (X/D) on the back of the gamepad to ensure it's set correctly for your game. Calibrate the gamepad through your operating system's game controller settings. Ensure no debris is lodged around buttons or sticks.

SPECIFICATIONS

- **Model Number:** 940-000142
- **Connectivity:** Wireless - Radio Frequency (2.4 GHz)
- **Interface:** USB
- **Compatibility:** PC (Windows), Mac, Xbox, PlayStation2, PlayStation, Nintendo Switch, PlayStation 4 (Note: Compatibility may vary by game and system configuration)
- **Power Source:** 2 AAA batteries
- **Dimensions (L x W x H):** 10.63 x 4.72 x 8.46 inches
- **Item Weight:** 11.6 ounces
- **Manufacturer:** Logitech
- **First Available Date:** April 30, 2013

WARRANTY AND SUPPORT

Logitech products are designed for reliability and performance. For information regarding warranty coverage, technical support, and driver downloads, please visit the official Logitech support website. You can typically find support resources by searching for "Logitech Support" and your product model number (F710 or 940-000142).

For additional assistance, you may also refer to the [Logitech G Store on Amazon](#).

