

[manuals.plus](#) /

› [tectake](#) /

› [tectake® Portable Mini Washing Machine and Spin Dryer Combination User Manual](#)

tectake 400777

tectake® Portable Mini Washing Machine and Spin Dryer Combination

Model: 400777

1. INTRODUCTION

Thank you for choosing the tectake® Portable Mini Washing Machine and Spin Dryer Combination. This compact and efficient appliance is designed for convenience, offering a practical solution for laundry in small apartments, dormitories, RVs, or during camping trips. Please read this manual thoroughly before operating the appliance to ensure safe and optimal performance.



Image 1.1: The tectake® portable mini washing machine and spin dryer combination, showing its compact design and included accessories like the drain hose and lint filter.

2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before use.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only on a stable, level surface.
- Ensure the drain hose is properly positioned to prevent water spillage.

- Do not overload the washing or spin-drying compartments.

3. PRODUCT OVERVIEW

The tectake® mini washing machine features a dual-tub design, allowing for simultaneous washing and spin-drying. It is constructed from durable plastic and designed for ease of use and portability.

3.1 Components

- **Wash Tub:** For washing clothes (capacity up to 4.5 kg).
- **Spin Tub:** For spin-drying clothes (capacity up to 3.5 kg).
- **Control Panel:** Includes Wash Timer, Wash/Drain Selector, and Spin Timer knobs.
- **Water Inlet:** For adding water to the wash tub.
- **Drain Hose:** For draining water from the machine.
- **Lint Filter:** Collects lint during washing.
- **Safety Cover:** To be placed over clothes in the spin tub during operation.

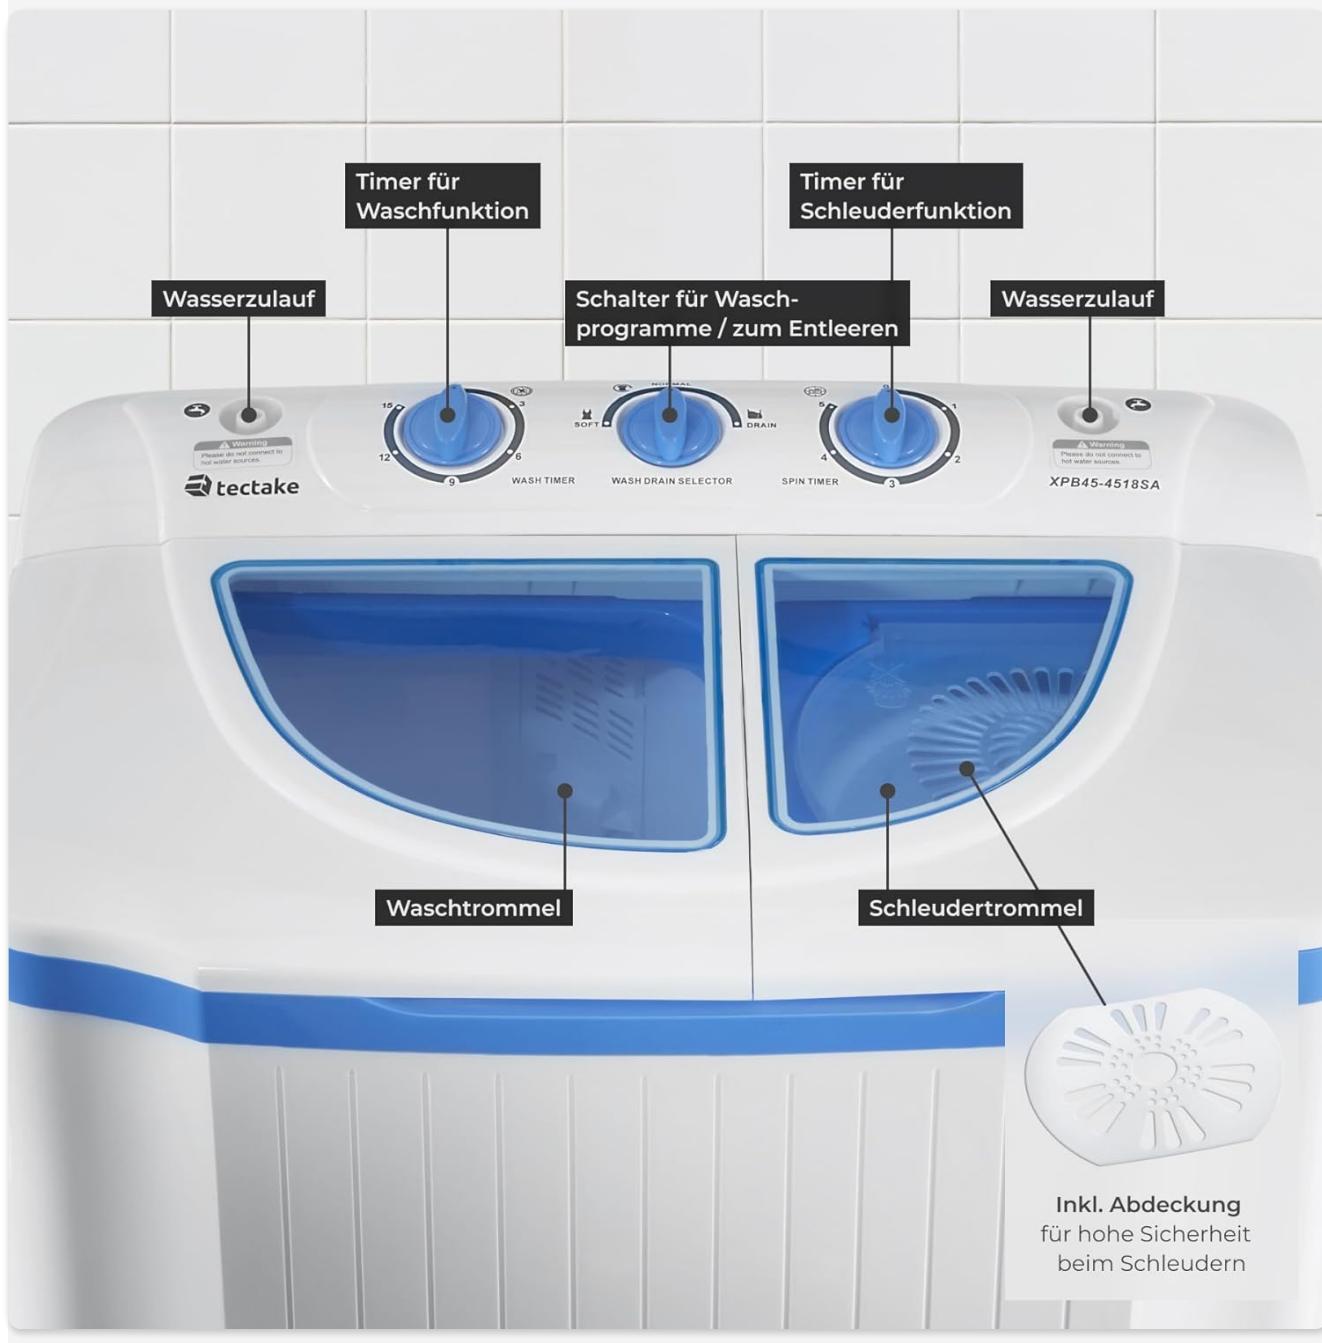


Image 3.1: Detailed view of the control panel, showing the Wash Timer, Wash/Drain Selector, Spin Timer, Water Inlet, Wash Drum, Spin Drum, and Safety Cover.



Image 3.2: Overview of key features, including dual chambers for simultaneous washing and spinning, economical water and power consumption, user-friendly controls, high capacity, compact size, and robust construction.

4. SETUP

Before first use, ensure the machine is placed on a firm, level surface. Due to gravity drainage, the machine should be positioned higher than the drain point (e.g., a sink or bucket) to allow water to flow out effectively.

4.1 Placement


- Choose a location with access to a water source and a suitable drain.
- Ensure there is enough space around the machine for ventilation and operation.

4.2 Connecting Hoses

- **Water Inlet Hose:** Connect one end of the inlet hose to a water tap and the other end to the water inlet on the

machine. Alternatively, water can be manually poured into the wash tub.

- **Drain Hose:** Position the drain hose into a sink, bucket, or floor drain. Ensure it is securely placed to prevent accidental dislodgement during drainage. The flexible drain hose can be hooked onto the side of the machine for easy transport when not in use.

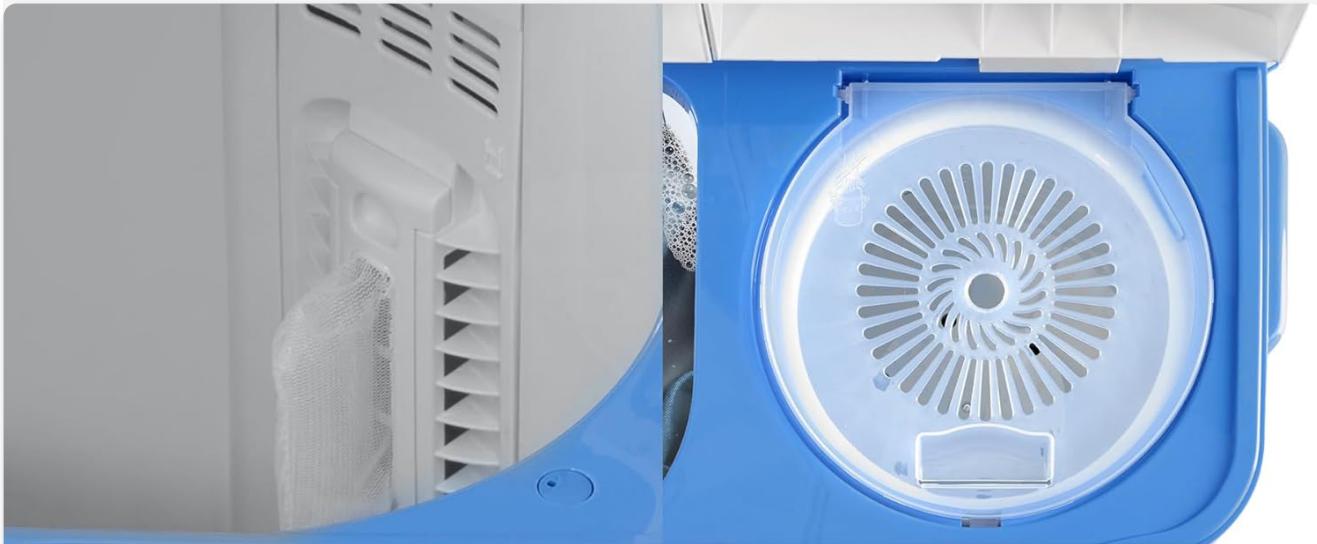

Der **effiziente Schmutzfilter** kann leicht entnommen & gereinigt werden, um ein Verstopfen zu verhindern.

Die **einsetzbare Sicherheitsabdeckung** der Trommel hält die Wäsche beim Schleudern zuverlässig unten.



Der **flexible Abwasserschlauch** kann für den leichten Transport per Haken an der Seite eingehängt werden.

2 große Sichtfenster, 2 Zuwasseranschlüsse und das **intuitive Bedienfeld** sorgen für ein leichtes Handling.

Image 4.1: Close-up view showing the efficient lint filter, the safety cover for the spin tub, and the flexible drain hose hooked for storage.

5. OPERATING INSTRUCTIONS

5.1 Washing Process

1. **Load Laundry:** Open the lid of the wash tub and place your laundry inside. Do not exceed the maximum washing capacity of 4.5 kg.
2. **Add Water:** Fill the wash tub with water to the desired level. You can use the inlet hose or manually pour water. For best results, use warm water as the machine does not heat water.
3. **Add Detergent:** Add the appropriate amount of laundry detergent directly into the wash tub.

- Select Program:** Turn the Wash/Drain Selector knob to either 'Soft' for delicate items or 'Normal' for regular laundry.
- Set Wash Timer:** Turn the Wash Timer knob to your desired wash time (up to 15 minutes). The machine will start washing.
- Drain Water:** Once the wash cycle is complete, turn the Wash/Drain Selector knob to 'Drain' to empty the water from the wash tub. Ensure the drain hose is positioned correctly.

5.2 Spin-Drying Process

- Transfer Laundry:** After washing and draining, transfer the wet laundry from the wash tub to the spin tub. Do not exceed the maximum spin capacity of 3.5 kg. Distribute clothes evenly to prevent imbalance.
- Place Safety Cover:** Place the provided safety cover firmly over the laundry in the spin tub. This prevents clothes from flying out during spinning.
- Set Spin Timer:** Close the spin tub lid and turn the Spin Timer knob to your desired spin time (up to 5 minutes). The spin cycle will begin. The spin function has a safety mechanism that stops the tub if the lid is opened during operation.
- Remove Laundry:** Once the spin cycle is complete, open the lid and carefully remove your spin-dried laundry. Clothes will be damp and require air drying.

6. MAINTENANCE

Regular maintenance ensures the longevity and efficient operation of your washing machine.

6.1 Cleaning the Lint Filter

The lint filter collects lint and debris during the wash cycle. It should be cleaned after every few washes, or as needed, to maintain optimal performance.

- Locate the lint filter inside the wash tub.
- Carefully remove the filter by sliding it out.
- Remove any accumulated lint and rinse the filter under running water.
- Reinsert the clean filter back into its slot in the wash tub.

6.2 General Cleaning

- Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure the interior of the tubs are clean and dry after use to prevent mold and odors.
- Store the machine in a dry, well-ventilated area when not in use.

7. TROUBLESHOOTING

If you encounter issues with your appliance, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not start	Not plugged in; Power outage; Timer not set.	Check power connection; Verify power supply; Set the timer knob.

Problem	Possible Cause	Solution
Water does not drain	Drain hose kinked or blocked; Machine not elevated enough; Drain selector not set to 'Drain'.	Straighten hose; Elevate machine above drain point; Turn selector to 'Drain'.
Excessive vibration during spin	Laundry unevenly distributed in spin tub; Machine not on a level surface.	Redistribute laundry evenly; Place machine on a stable, level surface.
Poor washing results	Too much or too little water/detergent; Overloaded tub; Lint filter clogged.	Adjust water/detergent amount; Reduce laundry load; Clean lint filter.

8. SPECIFICATIONS

Technical details for the tectake® Portable Mini Washing Machine and Spin Dryer Combination:

tectake
home

Produktinformationen

ABMESSUNGEN


Totalmaße
65 x 40 x 75 cm

Länge Zuwasserschlauch
117 cm

Länge Abwasserschlauch
51 cm


Kabellänge
140 cm

Alle Maße sind ca.-Angaben

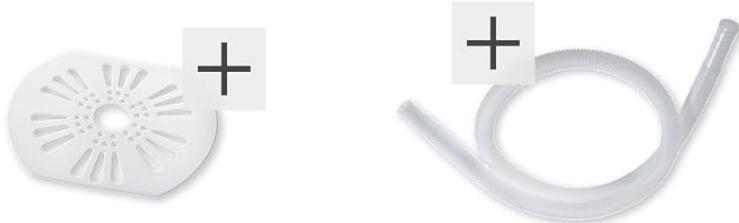

TECHNISCHE DATEN

Waschleistung 200 W
Trockenleistung 120 W
Spannung 220 - 240 V / 50 Hz
Waschkapazität 4,5 kg
Schleuderkapazität 3,5 kg
Gewicht ca. 14,5 kg
Material Polypropylen, Aluminium

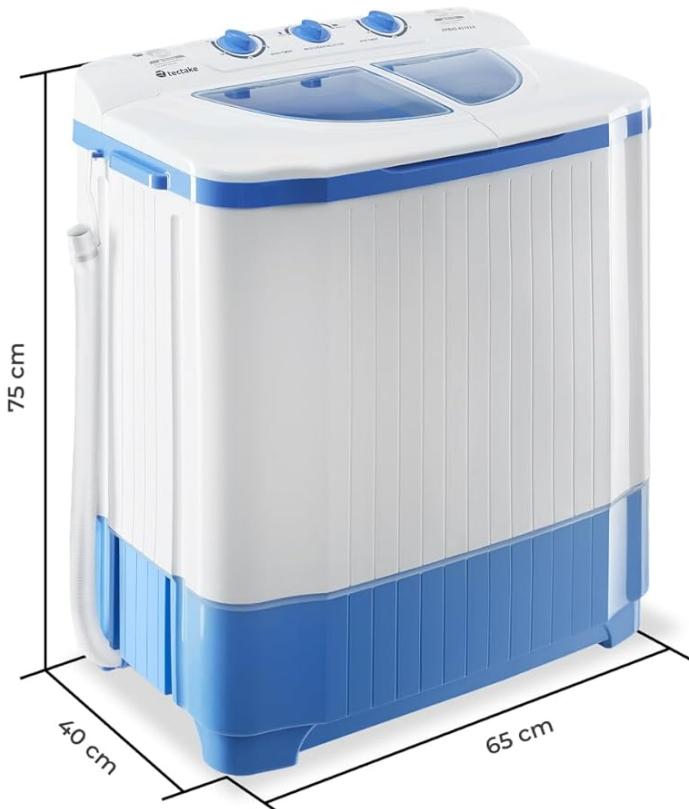

LIEFERUMFANG

Mini-Waschmaschine inkl.
Anschlussschläuche
Schmutzsieb
Bedienungsanleitung

Image 8.1: Diagram showing the dimensions and a summary of technical data for the appliance.

- **Brand:** tectake
- **Model Number:** 400777
- **Product Dimensions (L x W x H):** 65 x 40 x 75 cm
- **Weight:** 14.5 Kilograms
- **Washing Capacity:** 4.5 Kilograms
- **Spin Capacity:** 3.5 Kilograms
- **Max Spin Speed:** 1350 RPM
- **Washing Power:** 200 W
- **Spin Power:** 120 W
- **Voltage:** 220-240 V / 50 Hz
- **Installation Type:** Freestanding
- **Control Type:** Knob
- **Number of Programs:** 2 (Soft, Normal)
- **Material:** Plastic
- **Color:** White with Blue accents
- **Included in Delivery:** Washing machine, connection hoses, lint filter, user manual.


9. WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please contact tectake customer service. Refer to the contact details provided with your purchase documentation or visit the official tectake website. No official product videos were available from the seller for embedding in this manual.

© 2025 tectake. All rights reserved.


Related Documents - 400777

	<p><u>TecTake 400777 Semi-Automatic Washing Machine User Manual and Instructions</u></p> <p>This user manual provides comprehensive instructions for the TecTake 400777 semi-automatic washing machine, covering installation, operation, safety guidelines, and maintenance. Learn how to effectively wash and spin your clothes with this efficient appliance.</p>
	<p><u>Manuel d'Utilisation de la Machine à Laver Semi-Automatique tectake 400777</u></p> <p>Manuel complet pour la machine à laver semi-automatique tectake 400777, couvrant l'installation, le fonctionnement, l'entretien et les instructions de sécurité.</p>

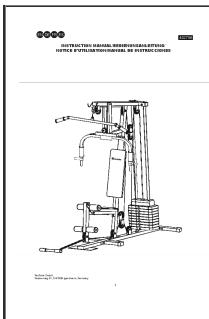

[TecTake 402756 Home Gym Assembly and Exercise Guide](#)

Instruction manual for the TecTake 402756 home gym, covering assembly, safety precautions, and exercise guidance. Includes preparation tips and warm-up/cool-down routines.

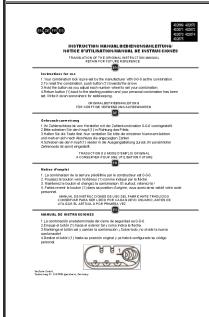


[TecTake Luggage Combination Lock Setup and Parts Guide](#)

Comprehensive guide for TecTake luggage, covering combination lock setup, parts identification (suitcase, wheels), and assembly instructions. Features model numbers 402669-402675.



[TecTake Travel Bed and Changing Unit: Assembly, Usage, and Safety Instructions](#)

Comprehensive instruction manual for the TecTake travel bed and changing unit, covering assembly, folding, usage, care, and safety guidelines. Includes model numbers 400466, 400467, 400533, 400534.

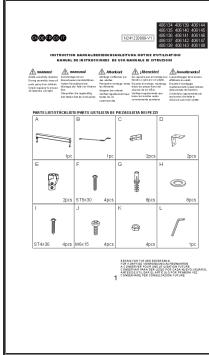

[Roller Blind Installation Manual](#)

Comprehensive instruction manual for the installation of a roller blind, including parts list, assembly steps, and contact information for tectake.