

DNP DS80

DNP DS80 8x12 Dyesub Printer Media Kit Instruction Manual

Model: DS80

INTRODUCTION

This manual provides essential instructions for the proper use, setup, and maintenance of your DNP DS80 8x12 Dyesub Printer Media Kit. This kit is designed to produce high-quality, glossy 8x12 inch prints with your DNP DS80 dye-sublimation printer. Each kit contains two rolls, yielding a total of 220 prints (110 prints per roll).

SAFETY INFORMATION

- Handle media rolls with clean hands to prevent smudges or damage to the print surface.
- Store media in its original packaging in a cool, dry place away from direct sunlight and extreme temperatures to maintain print quality and longevity.
- Do not expose media to dust or moisture, as this can affect print results and printer performance.
- Keep out of reach of children.

WHAT'S IN THE BOX

The DNP DS80 8x12 Dyesub Printer Media Kit includes:

- Two (2) rolls of 8x12 inch photo paper (110 prints per roll)
- One (1) ink ribbon cartridge (for 220 prints)

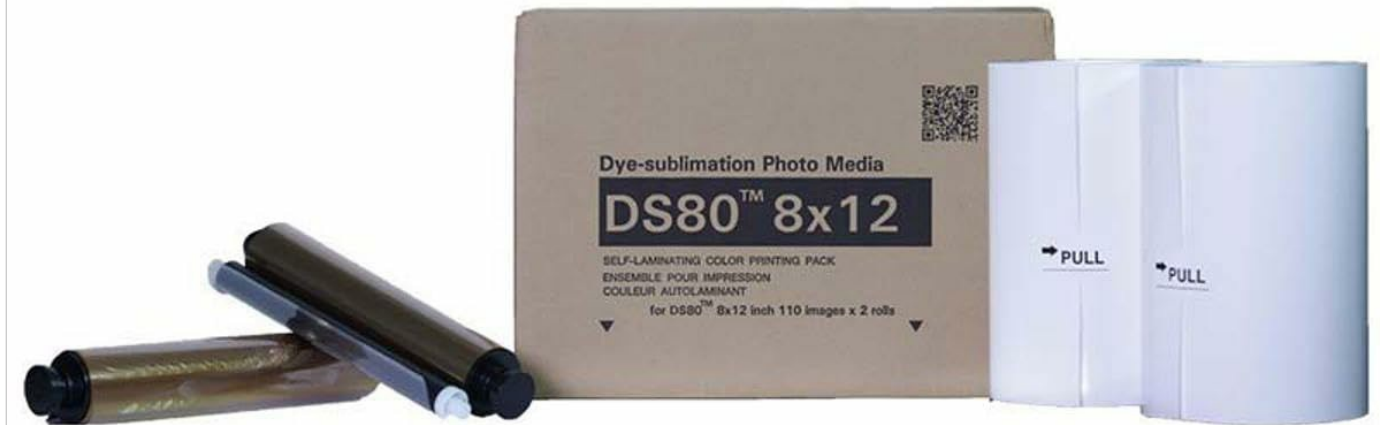


Image: The DNP DS80 8x12 Dyesub Printer Media Kit, showing the box containing two rolls of paper and an ink ribbon.

SETUP: LOADING MEDIA INTO THE DNP DS80 PRINTER

Follow these steps to correctly load the media kit into your DNP DS80 printer. Refer to your printer's specific manual for detailed instructions on opening and accessing the media bay.

1. **Power Off Printer:** Ensure your DNP DS80 printer is powered off and unplugged before loading or unloading media.
2. **Open Media Bay:** Open the front cover or media bay access panel of your DNP DS80 printer according to its manual.
3. **Remove Used Media (if applicable):** If replacing existing media, carefully remove the used paper roll and ink ribbon cartridge. Dispose of them properly.
4. **Install Paper Roll:** Unpack one new 8x12 inch paper roll. Locate the paper spindle within the printer. Carefully slide the paper roll onto the spindle, ensuring it is seated correctly and the paper feeds from the top.
5. **Install Ink Ribbon:** Unpack the new ink ribbon cartridge. Insert the cartridge into its designated slot, ensuring it clicks into place. The ribbon should be taut and properly aligned.

6. **Close Media Bay:** Close the printer's front cover or media bay access panel securely.
7. **Power On Printer:** Plug in and power on your DNP DS80 printer. The printer will typically perform a self-check and recognize the new media.



Image: A representation of the DNP DS80 8x12 Dyesub Printer Media Kit, illustrating the process of loading the paper roll and ink ribbon into the printer's media bay.

OPERATING INSTRUCTIONS

Once the media kit is loaded, your DNP DS80 printer is ready for operation. Refer to your DNP DS80 printer's software and driver manual for specific instructions on initiating print jobs.

- **Software Settings:** Ensure your printing software is configured for 8x12 inch prints and selects the DNP DS80 printer.
- **Print Quality:** For optimal results, use the recommended print quality settings for dye-sublimation printing as specified by DNP.
- **Handling Prints:** Allow prints to cool for a few seconds after ejection before handling to prevent smudging, although dye-

sublimation prints are generally dry immediately.

MAINTENANCE AND STORAGE

- **Media Storage:** Store unused media rolls in their original sealed packaging to protect them from dust, humidity, and light. Keep them in a cool, dry environment (e.g., 68-75°F / 20-24°C, 40-60% RH).
- **Printer Cleaning:** Regularly clean your DNP DS80 printer according to its maintenance schedule to ensure optimal print quality and prevent dust from affecting the media.
- **Ribbon Disposal:** Dispose of used ink ribbons and paper cores responsibly according to local regulations.

TROUBLESHOOTING

If you encounter issues, consider the following common troubleshooting steps related to media usage:

- **Poor Print Quality (streaks, faded colors):**
 - Ensure the ink ribbon is correctly installed and not damaged.
 - Check if the media roll is properly seated and feeding smoothly.
 - Verify that the media is not expired or stored improperly.
 - Clean the printer's print head and rollers as per the printer manual.
- **Paper Jams:**
 - Ensure the paper roll is loaded correctly and not skewed.
 - Check for any foreign objects inside the printer's paper path.
 - Remove any jammed paper carefully, following the printer's manual.
- **"No Media" Error:**
 - Confirm the paper roll and ink ribbon are fully installed and detected by the printer.
 - Restart the printer.

For further troubleshooting, consult your DNP DS80 printer's official user manual or DNP support resources.

SPECIFICATIONS

Model Number	DS80
Print Size	8 x 12 inches
Prints per Roll	110 prints
Rolls per Kit	2 rolls
Total Prints per Kit	220 prints
Finish	Glossy
Product Dimensions	13 x 9.5 x 8.25 inches (packaging)
Item Weight	0.01 ounces (packaging)
Manufacturer	DNP

WARRANTY AND SUPPORT

For information regarding warranty coverage for DNP products, please refer to the official DNP website or contact DNP customer support directly. This media kit is designed for use with DNP DS80 printers and is subject to DNP's standard terms and conditions.

DNP Official Website: www.dnpphoto.com

For technical assistance or product inquiries, please contact DNP customer service.

© 2024 DNP. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question