

[Manuals.plus](#) /

› [Lexibook](#) /

› Lexibook Disney Planes Portable Color Game Console JL2800PL User Manual

Lexibook JL2800PL

Lexibook Disney Planes Portable Color Game Console JL2800PL User Manual

Model: JL2800PL

INTRODUCTION

Thank you for purchasing the Lexibook Disney Planes Portable Color Game Console JL2800PL. This console offers a collection of 120 games, including 10 Disney Planes themed games and 110 classic titles, all displayed on a vibrant 2.4-inch (6.1 cm) color LCD screen. Designed for portability, it features a 16-bit processor and a rechargeable battery for extended playtime. This manual provides essential information for safe and effective use of your new device.

IMPORTANT SAFETY INFORMATION

Please read all safety warnings and instructions before using this product to ensure safe operation and prevent damage. Keep this manual for future reference.

- This device is not suitable for children under 3 years due to small parts that may present a choking hazard.
- Do not expose the console to extreme temperatures, direct sunlight, or moisture.
- Avoid dropping or subjecting the console to strong impacts.
- Only use the provided charging cable or a compatible charger specified by Lexibook.
- Do not attempt to open, disassemble, or modify the console. This will void the warranty and may cause damage or injury.
- If the console becomes hot, emits smoke, or produces unusual odors, immediately discontinue use and disconnect from any power source.
- Dispose of the battery and console responsibly according to local regulations.

PACKAGE CONTENTS

Please check that all items are present in the package:

- Lexibook Disney Planes Portable Color Game Console JL2800PL
- USB Charging Cable
- User Manual (this document)

SETUP

1. Charging the Console

Before first use, fully charge the console's built-in Lithium-ion battery. Connect the supplied USB charging cable to the console's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will typically show red while charging and turn off or change color when fully charged. A full charge may take approximately 2-3 hours.

2. Powering On/Off

To power on the console, press and hold the **Power** button for a few seconds until the screen illuminates. To power off, press and hold the **Power** button again until the screen turns off.

OPERATING INSTRUCTIONS

Console Layout and Controls



Figure 1: Front view of the Lexibook Disney Planes Portable Color Game Console, highlighting the screen and control buttons.

The console features a D-pad for movement, A/B/C/D action buttons, Start/Pause, Select, Reset, and Volume controls. Familiarize yourself with the button layout for optimal gameplay.

- **D-Pad (Directional Pad):** Used for moving characters or navigating menus (Up, Down, Left, Right).
- **Action Buttons (A, B, C, D):** Perform in-game actions such as jumping, shooting, or confirming selections. Functions vary by game.
- **Start/Pause Button:** Starts a game or pauses gameplay.
- **Select Button:** Used for various in-game options or menu selections.
- **Reset Button:** Resets the console to the main menu. Use a thin object like a paperclip to press the recessed reset button.
- **Volume Control:** Adjusts the sound level of the console.

Navigating Menus and Selecting Games

Once powered on, the console will display the main menu. Use the **D-Pad** to scroll through the available game categories or individual games. Press the **A** button (or equivalent action button) to select a game and begin playing.

Gameplay

Each game has its own specific controls and objectives. Refer to the on-screen instructions within each game, if available, to understand how to play. The console includes 10 Disney Planes games and 110 classic games covering action, sports, racing, and more.

MAINTENANCE

Cleaning the Console

To clean the console, gently wipe the surface with a soft, dry cloth. Do not use liquid cleaners, solvents, or abrasive materials, as these can damage the finish or internal components. Ensure no moisture enters the console's ports or openings.

Battery Care and Storage

To prolong battery life, avoid fully discharging the console frequently. If storing the console for an extended period, charge it to approximately 50% before storage and recharge it every few months. Store the console in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Console does not turn on.	Battery is depleted.	Charge the console using the provided USB cable. Ensure the charging indicator light is active.
Screen is blank or frozen.	Software glitch or temporary error.	Press the recessed Reset button using a thin object (e.g., paperclip). If the issue persists, ensure the battery is charged.
No sound or low volume.	Volume is turned down or muted.	Adjust the Volume control on the console.
Console not charging.	Faulty cable, power source, or charging port.	Try a different USB cable or power adapter. Ensure the charging cable is securely connected to both the console and the power source.

SPECIFICATIONS

Model Number: JL2800PL

Brand: Lexibook

Screen Size: 2.4 inches (6.1 cm)

Display Type: LCD Color

Processor: 16-bit

Number of Games: 120 (10 Disney Planes + 110 Classic)

Battery Type: 1 Lithium-ion (rechargeable)

Power Source: Battery Powered

Controller Type: Button Control

Product Dimensions: 12.1L x 6.1W x 1.3H centimeters

Material: Plastic

Recommended Age: 3+ years





Figure 2: Lexibook Disney Planes Portable Color Game Console in its retail packaging.

WARRANTY INFORMATION

This Lexibook product is covered by a manufacturer's warranty for a period of **2 years** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact Lexibook customer support. You can find contact information on the official Lexibook website or through your retailer. For more information, visit the official Lexibook website: www.lexibook.com