

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [KODAK](#) /

› [Kodak PIXPRO Astro Zoom AZ362 Digital Camera Instruction Manual](#)

KODAK AZ362

KODAK PIXPRO Astro Zoom AZ362 Digital Camera Instruction Manual

Model: AZ362

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective operation of your KODAK PIXPRO Astro Zoom AZ362 Digital Camera. Please read this manual thoroughly before using your camera and retain it for future reference.

The KODAK PIXPRO Astro Zoom AZ362 is a versatile digital camera featuring a 16 Megapixel CMOS sensor, 36X optical zoom, and Full HD video recording capabilities, designed for capturing high-quality images and videos.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your camera package:

- KODAK PIXPRO Astro Zoom AZ362 Digital Camera
- Rechargeable Li-ion Battery
- AC Adapter
- USB Cable
- Neck Strap
- Lens Cover
- CD-ROM (Software/Drivers)
- Service Card
- Quick Start Guide
- Warranty Card

3. CAMERA OVERVIEW



Figure 3.1: Front view of the KODAK PIXPRO Astro Zoom AZ362 camera. This image displays the camera's front, highlighting the large zoom lens, built-in flash, and ergonomic grip. The KODAK logo is visible above the lens.



Figure 3.2: Top view of the KODAK PIXPRO Astro Zoom AZ362 camera. This image shows the top panel, including the mode dial for selecting shooting modes, the power on/off switch, and the zoom control lever.

3.1. Key Components

- **Lens:** 36X Optical Zoom, 24-864mm (equivalent) wide-angle zoom lens.
- **Flash:** Built-in pop-up flash for low-light conditions.
- **LCD Display:** 3-inch LCD for framing shots, reviewing images, and navigating menus.
- **Mode Dial:** Selects various shooting modes (Auto, Program, Manual, Scene, Panorama, etc.).
- **Shutter Button:** Activates autofocus and captures images.
- **Zoom Lever:** Controls optical and digital zoom.
- **Battery Compartment:** Houses the rechargeable Li-ion battery.
- **Memory Card Slot:** For SD/SDHC/SDXC memory cards.

4. SETUP

4.1. Charging the Battery

1. Insert the rechargeable Li-ion battery into the camera's battery compartment.
2. Connect the AC adapter to the camera using the supplied USB cable.
3. Plug the AC adapter into a power outlet. The charging indicator light will illuminate.
4. Charging is complete when the indicator light turns off or changes color (refer to camera display for status).

4.2. Inserting a Memory Card

The camera supports SD, SDHC, and SDXC memory cards.

1. Open the memory card slot cover.
2. Insert the memory card with the metal contacts facing the correct direction (usually towards the front of the camera) until it clicks into place.
3. Close the memory card slot cover securely.

4.3. Initial Settings

Upon first power-on or after a battery change, you may need to set the date, time, and language. Follow the on-screen prompts using the camera's navigation buttons.

5. OPERATING THE CAMERA

5.1. Powering On/Off

Slide the **ON/OFF** switch (refer to Figure 3.2) to power the camera on or off.

5.2. Selecting a Shooting Mode

Rotate the **Mode Dial** (refer to Figure 3.2) to select your desired shooting mode:

- **AUTO:** Camera automatically optimizes settings for most situations.
- **P (Program AE):** Camera sets aperture and shutter speed, but allows user control over other settings.
- **M (Manual):** Full manual control over aperture, shutter speed, and ISO.
- **SCN (Scene):** Choose from various scene modes (e.g., Portrait, Landscape, Sport) for optimized settings.
- **Panorama:** Capture wide panoramic images by panning the camera.
- **Video:** Record Full HD video.

5.3. Taking Photos

1. Turn on the camera and select a shooting mode.
2. Frame your shot using the 3-inch LCD display.
3. Use the **Zoom Lever** to adjust the focal length.
4. Press the **Shutter Button** halfway down to activate autofocus. The focus frame will turn green when focus is achieved.
5. Press the **Shutter Button** fully down to capture the image.

5.4. Recording Videos

1. Rotate the **Mode Dial** to the Video mode.
2. Press the dedicated **Video Record Button** (if available, otherwise the Shutter Button) to start recording.
3. Press the button again to stop recording.

5.5. Playback and Deleting

Press the **Playback Button** to review your photos and videos. Use the navigation buttons to scroll through media. To delete an item, select it and press the **Delete Button** (often marked with a trash can icon), then confirm.

6. MAINTENANCE

6.1. Cleaning the Camera

- **Lens:** Use a soft, lint-free cloth specifically designed for camera lenses. For stubborn smudges, use a small amount of lens cleaning fluid. Avoid touching the lens with your fingers.
- **Body:** Wipe the camera body with a soft, dry cloth. For dirt, slightly dampen the cloth with water. Do not use strong cleaning agents or solvents.
- **LCD Screen:** Use a soft, dry cloth. Avoid excessive pressure.

6.2. Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging the battery frequently to prolong its lifespan.
- Do not expose batteries to extreme temperatures.

6.3. Storage

When storing the camera for extended periods, remove the battery and memory card. Store the camera in a dry, dust-free environment, preferably in a camera bag or case.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly inserted.	Charge the battery fully. Ensure the battery is inserted correctly.

Problem	Possible Cause	Solution
Images are blurry.	Camera shake, incorrect focus, or dirty lens.	Hold the camera steady. Ensure autofocus locks before shooting. Clean the lens.
Flash does not fire.	Flash mode is off, or battery is low.	Check flash settings. Recharge the battery.
Memory card error.	Card is full, corrupted, or incompatible.	Delete unnecessary files. Format the card (this will erase all data). Try a different, compatible card.
Camera freezes or becomes unresponsive.	Temporary software glitch.	Remove and reinsert the battery to reset the camera.

8. SPECIFICATIONS

Feature	Detail
Model Name	Kodak Astro Zoom AZ362
Sensor Type	16 Megapixel CMOS (1/2.3-inch)
Optical Zoom	36x
Digital Zoom	4x
Lens	24-864mm f/3.7-5.7 (equivalent) wide-angle zoom lens
Image Stabilization	Optical
LCD Screen	3.0-inch (460,000 dots)
Still Image Format	JPEG
Video Format	MOV (Full HD 1920x1080 at 30fps)
Continuous Shooting	5 fps
ISO Sensitivity	Expanded ISO Maximum 3200
Storage Media	SD/SDHC/SDXC Card
Connectivity	HDMI, USB
Battery Type	Rechargeable Li-ion
Dimensions (Approx.)	Item Height: 3.22 inches
Weight (Approx.)	0.92 Pounds

9. WARRANTY INFORMATION

Your KODAK PIXPRO Astro Zoom AZ362 Digital Camera is covered by a limited warranty. Please refer to the warranty card included in your package for specific terms, conditions, and duration of coverage. Retain your proof of purchase for warranty claims.

10. CUSTOMER SUPPORT

For further assistance, technical support, or service inquiries regarding your KODAK PIXPRO Astro Zoom AZ362 Digital Camera, please visit the official KODAK PIXPRO support website or contact their customer service department. Contact information can typically be found on the service card or the manufacturer's website.

Online Resources: www.kodakpixpro.com/support (Example link, actual link may vary)

© 2023 KODAK. All rights reserved. Information in this manual is subject to change without notice.