

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for Fisher Models 6142542910, TAD994, REM994, 6142695562, CA9535

Redi-Remote RT6142563014

Redi-Remote Replacement Remote Control Instruction Manual

For Fisher Models: 6142542910, TAD994, REM994, 6142695562, CA9535, CA9535B, 9535B, CA9435, CA9335, RCA9335, RCA9535, 6142563014

1. INTRODUCTION

This document provides instructions for the Redi-Remote replacement remote control, designed to operate specific Fisher audio system models. This remote is a custom-built replacement and is not an original Fisher product. It is engineered to perform all functions of the original remote for the listed compatible units.



Figure 1: Redi-Remote replacement remote control. This image shows the remote control, which is black with various control buttons and features a sliding cover at the bottom to reveal additional buttons.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment. The remote includes batteries.
4. Close the battery compartment cover securely.

2.2 Initial Use

Once batteries are installed, the remote control is ready for use with your compatible Fisher unit. No programming is required. Point the remote directly at the infrared receiver on your Fisher audio system.

3. OPERATING INSTRUCTIONS

3.1 Basic Functions

The remote control provides access to all primary functions of your Fisher audio system, including power, volume, channel/track selection, and input switching. Press the corresponding buttons to control your device.

3.2 Accessing Additional Buttons

A sliding cover is located over the lower half of the remote control. Slide this cover downwards to reveal additional control buttons for advanced functions.

3.3 Auxiliary Device Control

This Redi-Remote control is specifically designed for your Fisher unit and cannot be programmed to control any auxiliary devices.

4. MAINTENANCE

4.1 Battery Replacement

Replace batteries when the remote's performance diminishes or if the unit becomes unresponsive. Always replace all four AAA batteries simultaneously with new ones.

4.2 Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the remote's surface or internal components.

4.3 Storage

Store the remote control in a dry environment, away from extreme temperatures and direct sunlight. If storing for extended periods, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

5.1 Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the proper polarity. Replace old batteries with new ones if necessary.
- **Line of Sight:** Confirm there are no obstructions between the remote control and the infrared receiver on your Fisher

unit.

- **Distance:** Ensure you are within the effective operating range of the remote control.

5.2 Specific Functions Not Working

- **Sliding Cover:** If certain buttons are not responding, ensure the sliding cover is fully open to expose all controls.
- **Unit Compatibility:** Verify that your Fisher unit model is listed as compatible with this remote control.

6. SPECIFICATIONS

Feature	Detail
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Model Number	RT6142563014
Batteries Required	4 AAA batteries (included)
Compatible Devices	Fisher Stereo Systems (specific models listed in Introduction)
Connectivity Technology	Infrared
Max Number of Supported Devices	1
Special Feature	Ergonomic design

7. SUPPORT

For any concerns or issues with your Redi-Remote replacement remote control after purchase, please contact the seller directly for assistance. Direct contact with the seller ensures the most efficient resolution to any product-related inquiries.

© 2024 Redi-Remote. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00CMVSRGY>

More documents and user manuals: <https://manuals.plus/>