

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual

Redi-Remote RT112150010006

Redi-Remote Replacement Remote Control User Manual

Model: RT112150010006

INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote Replacement Remote Control, model RT112150010006. This remote is a custom-built replacement designed to be compatible with specific FEDDERS units, including models A6D30E7AA, A6X06F2A, A6D30E7A, A6Y12F2B, A7D16E2A, M6Q10F2AE, 112150010006, and M6X07F2BA. It is engineered to perform every function for the specific unit it is designed to control and does not require programming for auxiliary devices.

Please note that this is a replacement remote and not an original FEDDERS product. It is not equipped with laser pointers or LED lights.

PRODUCT OVERVIEW



Figure 1: Front view of the Redi-Remote Replacement Remote Control. The remote features a top section with primary controls like power, channel, volume, and number pad, and a lower section with additional function buttons hidden under a sliding cover.

The remote control measures approximately 7.5 inches in length, 2.25 inches in width, and 0.75 inches in thickness. It is designed for single-device control and operates using infrared technology.

SETUP

Battery Installation

The remote control requires 4 AAA batteries (included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Once batteries are installed, the remote is ready for use with your compatible FEDDERS unit without any additional programming.

OPERATING INSTRUCTIONS

This section details the functions of the buttons on your Redi-Remote replacement control.

Primary Controls (Top Section)

- **PWR (Power):** Turns the connected FEDDERS unit on or off. *(Red button)*
- **SLEEP:** Activates or deactivates the sleep timer function.
- **TV/VIDEO:** Switches between TV and Video input sources.
- **DISP (Display):** Shows on-screen display information.
- **CH+ / CH- (Channel Up/Down):** Changes the channel up or down. *(Blue buttons)*
- **VOL+ / VOL- (Volume Up/Down):** Increases or decreases the volume. *(Blue buttons)*
- **MUTE:** Mutes or unmutes the audio output.
- **MENU:** Accesses the unit's main menu.
- **RECALL:** Recalls the previously viewed channel or setting.
- **Number Pad (0-9, 100):** Used for direct channel entry or numerical input.
- **ENT (Enter):** Confirms numerical input or selections.

Advanced Controls (Hidden Section)

To access these functions, slide down the cover located on the lower half of the remote control.

- **POWER (Lower):** An additional power button for specific functions or modes.
- **FAN SPEED:** Adjusts the fan speed settings of the FEDDERS unit.
- **TEMP/TIME+ / TEMP/TIME-:** Adjusts temperature settings or time settings.
- **TIMER:** Sets or adjusts the unit's timer functions.
- **MODE:** Cycles through different operating modes (e.g., Cool, Heat, Fan, Dry).
- *Additional unlabeled buttons:* These buttons are typically used for specific functions related to the FEDDERS unit's advanced settings, such as swing, light, or other auxiliary controls. Refer to your FEDDERS unit's original manual for

their exact functions.

MAINTENANCE

Cleaning the Remote

To clean the remote control, gently wipe it with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water. Do not use abrasive cleaners, solvents, or alcohol, as these can damage the remote's surface or internal components.

Battery Replacement

Replace the batteries when the remote's range decreases or if it becomes unresponsive. Always replace all 4 AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries. Dispose of used batteries according to local regulations.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries.	Check battery polarity. Replace all batteries with new AAA batteries.
Remote range is poor.	Weak batteries; Obstruction between remote and unit.	Replace batteries. Ensure a clear line of sight to the FEDDERS unit's infrared receiver.
Certain buttons do not work.	Dirty contacts; Remote damage.	Clean the remote. If problem persists, the remote may be damaged and require replacement.
Remote does not control my unit.	Incompatible unit model.	Verify your FEDDERS unit model number against the compatible models listed in the Introduction section. This remote is specifically designed for the listed models.

SPECIFICATIONS

Brand:	Redi-Remote
Model Number:	RT112150010006
Product Dimensions:	7 x 2.5 x 1 inches (approx. 17.8 x 6.4 x 2.5 cm)
Item Weight:	4.5 ounces (approx. 127.6 grams)
Batteries:	4 AAA batteries (included)
Connectivity Technology:	Infrared
Max Number of Supported Devices:	1
Compatible Devices:	Air Conditioner (FEDDERS units: A6D30E7AA, A6X06F2A, A6D30E7A, A6Y12F2B, A7D16E2A, M6Q10F2AE, 112150010006, M6X07F2BA)
Special Feature:	No Programming Needed
Date First Available:	May 3, 2013

WARRANTY AND SUPPORT

This Redi-Remote replacement control is designed for reliable performance. For any concerns with the remote after purchase, please contact the seller directly for support. Information regarding optional protection plans may be available at the point of purchase.

Please refer to the original documentation of your FEDDERS unit for specific details regarding its operation and features, especially for the advanced functions accessed via the hidden button section of this remote.

© 2023 Redi-Remote. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question