

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control for Yamaha RXV440, YHT440, HTR5650, RAV246, RXV540, YHT740 User Manual

Redi-Remote RTWA164100

Redi-Remote Replacement Remote Control for Yamaha RXV440, YHT440, HTR5650, RAV246, RXV540, YHT740 User Manual

INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed for use with various Yamaha audio/video receiver models. This remote offers direct functionality for your compatible Yamaha unit without requiring complex programming.

Compatible Yamaha models include: **RXV440, YHT440, HTR5650, RAV246, RXV540, YHT740, YHT700, WA164100, YHT540, HTR5640.**

PRODUCT OVERVIEW

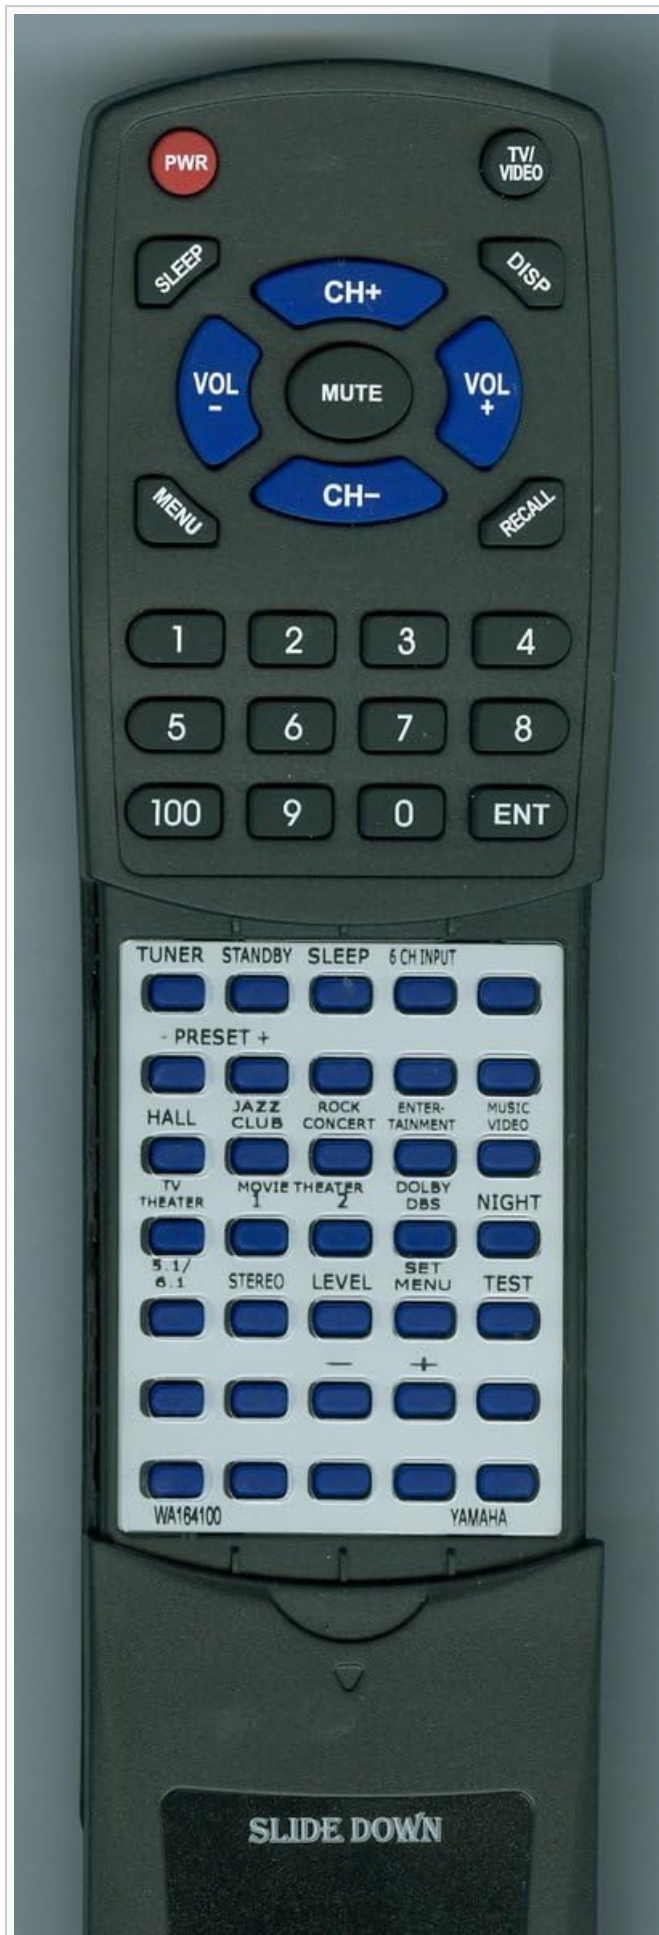


Image Description: A black Redi-Remote replacement remote control. The upper section features primary control buttons: a red circular **PWR** button, a black oval **SLEEP** button, blue directional **CH+** and **CH-** buttons, blue **VOL+** and **VOL-** buttons, a black oval **MUTE** button, and black oval buttons for **TV/VIDEO**, **DISP**, **MENU**, and **RECALL**. Below these are numeric buttons **1** through **9**, **0**,

100, and **ENT**. The lower half of the remote is covered by a sliding panel labeled "**SLIDE DOWN**". When slid down, it reveals a white panel with numerous blue oval buttons for advanced functions such as **TUNER**, **STANDBY**, **SLEEP**, **6 CH INPUT**, **PRESET +/-**, various sound modes (**HALL**, **JAZZ CLUB**, **ROCK CONCERT**, **ENTERTAINMENT**, **MUSIC VIDEO**, **TV THEATER**, **MOVIE THEATER 1/2**, **DOLBY DBS**, **NIGHT**, **5.1/6.1**, **STEREO**), and control buttons like **LEVEL**, **SET MENU**, and **TEST**. The model number **WA164100** and brand **YAMAHA** are visible on this lower panel.

The Redi-Remote is a dedicated replacement remote control. It features a standard set of primary controls on the upper section, and a sliding cover on the lower half that reveals additional function buttons for advanced audio and video settings.

SETUP

Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by any arrows or grooves.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment. The batteries are included with the remote.
4. Replace the battery compartment cover until it clicks securely into place.

Initial Use

This Redi-Remote is pre-programmed for the specified Yamaha models and does not require any additional setup or programming. Once batteries are installed, it is ready for immediate use with your compatible Yamaha receiver.

OPERATING INSTRUCTIONS

The remote control is divided into two main sections: the primary control area and the advanced function area, accessible by sliding down the lower cover.

Primary Controls (Upper Section)

- **PWR (Power)**: Turns the Yamaha receiver on or off.
- **TV/VIDEO**: Selects the TV/Video input source.
- **DISP (Display)**: Changes the display mode or information shown on the receiver.
- **VOL +/- (Volume)**: Adjusts the master volume level.
- **MUTE**: Temporarily silences the audio output. Press again to restore sound.
- **CH +/- (Channel)**: Navigates through channels or presets, typically for tuner functions.
- **MENU**: Accesses the receiver's on-screen menu system.
- **RECALL**: Recalls previous settings or information.
- **Numeric Buttons (0-9, 100)**: Used for direct input of channel numbers, preset numbers, or menu selections.
- **ENT (Enter)**: Confirms selections or inputs.
- **SLEEP**: Activates or adjusts the sleep timer function.

Advanced Functions (Lower Section - Slide Down)

Slide the lower cover downwards to reveal additional buttons for specific audio modes and settings.

- **TUNER**: Selects the tuner input.
- **STANDBY**: Puts the receiver into a low-power standby mode.
- **6 CH INPUT**: Selects the 6-channel direct input.
- **PRESET +/-**: Navigates through radio station presets.

- **Sound Field Programs (HALL, JAZZ CLUB, ROCK CONCERT, ENTERTAINMENT, MUSIC VIDEO, TV THEATER, MOVIE THEATER 1/2, DOLBY DBS, NIGHT):** These buttons activate various sound field programs and surround sound modes to enhance your listening experience. Refer to your Yamaha receiver's original manual for detailed descriptions of each mode.
- **5.1/6.1:** Selects specific surround sound configurations.
- **STEREO:** Switches to stereo audio playback.
- **LEVEL:** Adjusts individual speaker levels or other audio parameters.
- **SET MENU:** Accesses specific setup menus for advanced configurations.
- **TEST:** Initiates a test tone sequence for speaker setup.

Note: This Redi-Remote is designed solely for controlling the specified Yamaha receiver models. It cannot be programmed to control any auxiliary devices such as televisions, DVD players, or other components.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace all four AAA batteries when the remote's performance degrades or it stops responding. Always replace with new batteries of the same type. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the remote has fresh batteries and they are inserted with correct polarity.
 - Point the remote directly at the Yamaha receiver's infrared sensor.
 - Check for any obstructions between the remote and the receiver.
 - Verify that the remote is compatible with your specific Yamaha model (refer to the Introduction section).
- **Specific buttons not working:**
 - Some advanced functions may require the receiver to be in a specific mode (e.g., TUNER button only works when the receiver is set to tuner input).
 - Ensure the sliding cover is fully open to access the lower section buttons.
- **Remote controls other devices:** This remote is designed only for the specified Yamaha receiver models and cannot be programmed for other devices. If it appears to control another device, it may be due to incidental infrared signal overlap, which is rare.

SPECIFICATIONS

Brand	Redi-Remote
Model Number	RTWA164100
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries	4 AAA batteries required (included)

Special Feature	No Programming Required
Max Number of Supported Devices	1 (Yamaha Receiver)
Compatible Devices	Yamaha Receivers (RXV440, YHT440, HTR5650, RAV246, RXV540, YHT740, YHT700, WA164100, YHT540, HTR5640)
Connectivity Technology	Infrared

SUPPORT

For any concerns or issues with your Redi-Remote replacement control after purchase, please contact the manufacturer, Redi-Remote, directly for assistance. Refer to your purchase documentation for contact information.

Redi-Remote Replacement Remote Control User Manual. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00CMVT27M>

More documents and user manuals: <https://manuals.plus/>