

Redi-Remote RT6450228780

Redi-Remote Replacement Remote Control Instruction Manual

For SANYO VWM Series VCRs (Models: VWM662, 6450228780, 6450214196, VWM352, VWM362, VHRM457, B19205)

1. INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed to operate specific SANYO VCR models. This remote is a custom-built replacement and is not an original SANYO product. It is engineered to perform all essential functions of the original remote for the compatible units listed below.

Compatible SANYO VCR Models: VWM662, 6450228780, 6450214196, VWM352, VWM362, VHRM457, B19205.

2. SETUP

2.1 Battery Installation

The remote control requires four (4) AAA batteries, which are included with the product. Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert the four AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.



Figure 1: Front view of the Redi-Remote replacement remote control. This image displays the layout of the primary control buttons and the ergonomic shape of the device.

2.2 Initial Use

This Redi-Remote replacement remote control is pre-programmed for the specified SANYO VCR models. No additional programming or setup is required. Once batteries are installed, the remote is ready for immediate use.

with your compatible SANYO VCR.

3. OPERATING INSTRUCTIONS

The Redi-Remote is designed to replicate the full functionality of your original SANYO VCR remote control. Point the remote directly at your VCR unit for optimal signal transmission.

3.1 Basic Functions

All standard VCR functions such as Power, Play, Stop, Pause, Fast Forward, Rewind, Record, Channel Up/Down, and Volume Up/Down are accessible via the corresponding buttons on the remote.

3.2 Sliding Cover for Additional Buttons

Some models of this remote feature a sliding cover located on the lower half. To access additional or less frequently used buttons, gently slide this cover downwards. Slide it back up to conceal these buttons when not in use.

3.3 Important Considerations

- This remote control cannot be programmed to operate auxiliary devices such as televisions, DVD players, or cable boxes. It is dedicated solely to the compatible SANYO VCR units.
- The Redi-Remote is not equipped with laser pointers or LED lights.

4. MAINTENANCE

4.1 Cleaning the Remote

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace the batteries when the remote control's response becomes sluggish or stops functioning. Always replace all four AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or improper operation. Dispose of used batteries according to local regulations.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the batteries are correctly installed with the proper polarity (+/-).
 - Replace the batteries with fresh ones.
 - Check for any obstructions between the remote control and the VCR's infrared sensor.
 - Ensure you are within the effective operating range and pointing the remote directly at the VCR.
- **Certain buttons not working:**
 - Verify that the sliding cover (if present) is fully open to reveal all buttons.
 - Clean the remote's surface and buttons to ensure no debris is interfering with button presses.
- **Remote controls other devices:**
 - This remote is specifically designed for SANYO VCRs and cannot be programmed for other devices. If

it appears to affect other devices, ensure no other remote controls are being used simultaneously or that the VCR is not inadvertently sending signals to other IR-controlled equipment.

6. SPECIFICATIONS

Brand	Redi-Remote
Model Number	RT6450228780
Compatible Devices	SANYO VCR (VWM662, 6450228780, 6450214196, VWM352, VWM362, VHRM457, B19205)
Connectivity Technology	Infrared (IR)
Max Number of Supported Devices	1 (Dedicated to VCR)
Special Feature	Ergonomic design, Sliding button cover
Product Dimensions	7 x 2.5 x 1 inches (approximately 17.8 x 6.4 x 2.5 cm)
Item Weight	4.5 ounces (approximately 127.6 grams)
Batteries Required	4 x AAA (included)

7. WARRANTY INFORMATION

Specific warranty details for this Redi-Remote replacement remote control are not provided in this manual. For information regarding warranty coverage, return policies, or any guarantees, please refer to the documentation provided at the time of purchase or contact the seller directly.

8. SUPPORT

If you encounter any issues or have questions regarding the operation or compatibility of your Redi-Remote replacement remote control, please contact the seller or manufacturer (Redi-Remote) for assistance. Providing your product's model number (RT6450228780) and the specific SANYO VCR model you are using will help expedite support.