

Redi-Remote RT6711R1N072A

Redi-Remote Replacement Remote Control User Manual

For Zenith Models 6711R1N072A, VRE4222, EC980CM, EC480CM, VRE4122, 6711R1N072B

1. PRODUCT OVERVIEW

This Redi-Remote replacement remote control is designed to function as a direct substitute for specific Zenith remote control models. It provides all essential functions for your compatible Zenith unit without requiring any programming.

1.1 Compatibility

This remote control is compatible with the following Zenith unit models:

- 6711R1N072A
- VRE4222
- EC980CM
- EC480CM
- VRE4122
- 6711R1N072B

This remote is not an original Zenith product but a custom-built replacement by Redi-Remote. It is not designed to control auxiliary devices.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch (if present) to open the compartment.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

The remote control is now ready for use. No programming is required.

3. OPERATING INSTRUCTIONS

Ensure a clear line of sight between the remote control and the Zenith unit for optimal performance.

3.1 Remote Control Layout



Image: Front view of the Redi-Remote replacement remote control. The top section features primary TV/VCR controls, while the lower section, covered by a sliding panel, contains VCR playback and advanced functions.

3.2 Button Functions (Top Section)

- **PWR (Power):** Turns the Zenith unit on or off.
- **SLEEP:** Activates the sleep timer function.
- **TV/VIDEO:** Switches between TV and Video input modes.
- **DISP (Display):** Shows on-screen information.
- **CH+ / CH- (Channel Up/Down):** Changes channels.
- **VOL+ / VOL- (Volume Up/Down):** Adjusts the volume level.
- **MUTE:** Silences the audio output.
- **MENU:** Accesses the on-screen menu.
- **RECALL:** Returns to the previously viewed channel.
- **Number Buttons (0-9, 100):** Directly selects channels or enters numerical values.
- **ENT (Enter):** Confirms channel selection or menu options.

3.3 Sliding Cover and Lower Section Buttons

The lower half of the remote control is protected by a sliding cover. To access the VCR playback and advanced functions, gently slide this cover downwards.

- **EJECT:** Ejects a tape from the VCR.
- **CLEAR:** Clears entries or selections.
- **TV/VCR:** Toggles between TV and VCR modes.
- **SP/SLP:** Selects standard play or super long play recording speeds.
- **CM SKIP:** Skips forward a set amount of time (e.g., 30 seconds).
- **EZ REVIEW:** Rewinds briefly for quick review.
- **CH/TRK+ / CH/TRK-:** Adjusts tracking or changes channels/tracks.
- **ADJ- / ADJ+:** Adjusts settings (e.g., picture, sound).
- **ENTER:** Confirms selections.
- **Playback Controls (Play, Stop, Pause, Rewind, Fast Forward, Skip Back, Skip Forward):** Standard VCR tape transport functions.

4. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops functioning. Always replace all batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. If not used for extended periods, remove the batteries to prevent leakage.

5. TROUBLESHOOTING

- **Remote not responding:** Check if the batteries are inserted correctly with the correct polarity. Replace old batteries with new ones. Ensure there are no obstructions between the remote and the Zenith unit's infrared sensor.
- **Limited range:** Ensure batteries are fresh. Operate the remote within a reasonable distance and angle from the Zenith unit.
- **Specific buttons not working:** If only certain buttons are unresponsive, try replacing the batteries. If the issue persists, the remote may require replacement.

6. SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RT6711R1N072A
Compatible Devices	Zenith VCR/TV units (6711R1N072A, VRE4222, EC980CM, EC480CM, VRE4122, 6711R1N072B)
Connectivity Technology	Infrared
Special Feature	No Programming Required
Max Number of Supported Devices	1
Product Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries Required	4 AAA batteries (included)

7. WARRANTY AND SUPPORT

For any concerns or issues with your Redi-Remote replacement remote control after purchase, please contact the seller directly for assistance. Specific warranty details may vary and are typically provided by the point of purchase.