

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for NAKAMICHI RS1, CP1, R1, 7158113001

Redi-Remote RT7158113001

User Manual

REDI-REMOTE REPLACEMENT REMOTE CONTROL

For NAKAMICHI RS1, CP1, R1, 7158113001

1. Introduction

This manual provides comprehensive instructions for the Redi-Remote replacement remote control, designed specifically for use with NAKAMICHI audio/video units including models RS1, CP1, R1, and 7158113001. This remote is a custom-built replacement and is not an original NAKAMICHI product. It is engineered to perform all functions of the specific unit it is designed to control without requiring additional programming.

2. Product Overview



Image: Front view of the Redi-Remote replacement remote control. The top section features primary control buttons, while the lower section is covered by a sliding panel revealing additional function buttons.

Key Features:

- **Direct Compatibility:** Specifically designed for NAKAMICHI models RS1, CP1, R1, and 7158113001.
- **No Programming Required:** Ready to use out of the box with compatible units.
- **Comprehensive Control:** Performs every function for the specific unit it is designed to control.
- **Compact Design:** Measures approximately 7.5 inches (19 cm) in length, 2.25 inches (5.7 cm) in width, and 0.75 inches (1.9 cm) in thickness.
- **Sliding Cover:** Features a protective cover over the lower half of the remote, which slides down to reveal additional buttons.
- **Infrared Connectivity:** Operates using infrared technology.

3. Setup

Battery Installation:

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment. The remote includes batteries.
4. Close the battery compartment cover securely.

Initial Use:

This Redi-Remote control does not require any programming. Once batteries are installed, it is ready for immediate use with your compatible NAKAMICHI unit.

4. Operating Instructions

Top Section Buttons:

- **PWR (Power):** Turns the NAKAMICHI unit on or off.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **TV/VIDEO:** Switches between TV and Video input modes.
- **DISP (Display):** Changes the display information on the NAKAMICHI unit.
- **CH+ / CH- (Channel Up/Down):** Navigates through channels or tracks.
- **VOL+ / VOL- (Volume Up/Down):** Adjusts the audio volume level.
- **MUTE:** Mutes or unmutes the audio output.
- **MENU:** Accesses the unit's main menu.
- **RECALL:** Recalls the previously selected channel or input.
- **Number Buttons (0-9, 100):** Directly input channel numbers or other numerical selections.
- **ENT (Enter):** Confirms a selection or input.

Sliding Cover Functions:

The lower half of the remote control is protected by a sliding cover. To access additional functions, gently slide the cover downwards. This reveals a panel of buttons for specific audio/video source control and playback functions.

- **Source Selection (TUNER/AUX, CD, TAPE, VIDEO):** Selects the corresponding audio/video input source.
- **AM/FM:** Switches between AM and FM radio bands.
- **MEMORY:** Stores or recalls radio station presets.
- **P1-P6 (Preset Buttons):** Directly selects stored radio station presets or other programmed functions.
- **Playback Controls (▶, ■, ◀◀, ▶▶):** Standard playback controls for media (Play, Stop, Rewind, Fast Forward).

- **PROG (Program):** Initiates programming mode for various functions.
- **REPEAT:** Toggles repeat playback mode.
- **SEEK- / SEEK+:** Scans backward or forward through radio frequencies or tracks.
- **VOL- / MUTE / VOL+ (Lower Panel):** Additional volume and mute controls, mirroring the top section for convenience when the cover is open.

5. Maintenance

Cleaning:

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or abrasive materials, as they may damage the remote's surface or buttons.

Battery Replacement:

Replace batteries when the remote's responsiveness decreases or it stops functioning. Always replace all four AAA batteries at the same time with new ones. Dispose of old batteries according to local regulations.

6. Troubleshooting

Issue	Possible Cause	Solution
Remote not responding.	Dead or incorrectly installed batteries. Obstruction between remote and unit. Remote out of range.	Check battery polarity and replace if necessary. Ensure clear line of sight to the NAKAMICHI unit's sensor. Move closer to the unit.
Certain buttons do not work.	Sliding cover is closed, obscuring lower buttons. Button malfunction.	Slide down the cover to reveal all buttons. If issue persists, contact customer support.
Remote does not control other devices.	This remote is not designed for universal control.	Redi-Remotes are specifically designed for the NAKAMICHI unit and cannot be programmed to control auxiliary devices.

7. Specifications

Feature	Detail
Product Dimensions	7 x 2.5 x 1 inches (approx. 17.8 x 6.35 x 2.54 cm)
Item Weight	4.5 ounces (approx. 127.57 grams)
Model Number	RT7158113001
Batteries Required	4 AAA batteries (included)
Connectivity Technology	Infrared
Max Number of Supported Devices	1 (Specific NAKAMICHI unit)
Special Feature	No Programming Needed

8. Customer Support

If you encounter any issues or have questions regarding your Redi-Remote replacement control, please contact the seller, RemotesPro, directly. They can provide assistance and support for product-related concerns.

© 2024 Redi-Remote. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question