

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual for Teac RC-1090, CDX10I, MCDX32I

Redi-Remote RT0217CD10I00000

Redi-Remote Replacement Remote Control User Manual for Teac RC-1090, CDX10I, MCDX32I

1. INTRODUCTION AND OVERVIEW

This document provides comprehensive instructions for the Redi-Remote replacement remote control, designed for use with Teac audio systems. This remote is specifically compatible with Teac models RC-1090, CDX10I, and MCDX32I. It is a custom replacement remote and not an original Teac product.

The remote control is engineered to perform all essential functions for the specified Teac units. It measures approximately 7.5 inches in length, 2.25 inches in width, and 0.75 inches in thickness.



Figure 1: Redi-Remote Replacement Remote Control. The image displays the remote control with its upper section showing power, channel, volume, mute, and numeric keys, and a lower section that slides down to reveal additional function buttons for FM/AM, timer, shuffle, preset, menu, playback controls, bass, treble, and time set.

2. SETUP

2.1 Battery Installation

To begin using your Redi-Remote, install the required batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or lift the cover to open the compartment.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover securely.

The remote control does not require programming for the specified Teac models. It is designed to function directly upon battery installation.

3. OPERATING INSTRUCTIONS

This remote control is pre-configured for the Teac RC-1090, CDX10I, and MCDX32I units. It cannot be programmed to control auxiliary devices.

3.1 Basic Controls (Upper Section)

- **PWR (Power):** Turns the Teac unit on or off. (Red button, top left)
- **TV/VIDEO:** Switches between TV and Video input sources. (Top right)
- **SLEEP:** Activates or deactivates the sleep timer function. (Left, below PWR)
- **DISP (Display):** Changes the display mode or information shown on the unit. (Right, below TV/VIDEO)
- **VOL + / VOL - (Volume):** Adjusts the audio volume up or down. (Blue buttons, left and right of MUTE)
- **MUTE:** Silences or restores the audio output. (Center of volume/channel cluster)
- **CH + / CH - (Channel):** Changes channels or navigates through menu options. (Blue buttons, top and bottom of MUTE)
- **MENU:** Accesses the system menu. (Bottom left of volume/channel cluster)
- **RECALL:** Recalls previous settings or channels. (Bottom right of volume/channel cluster)

3.2 Numeric Keypad

- **0-9:** Used for direct input of track numbers, radio frequencies, or other numerical selections.
- **100:** May function as a '10+' button for track selection or specific unit functions.
- **ENT (Enter):** Confirms numerical input or selections.

3.3 Advanced Functions (Lower Section)

The lower section of the remote control contains additional, model-specific functions. To access these buttons, gently slide down the cover located at the bottom of the remote. The cover is labeled "SLIDE DOWN".

- **FUNCT (Function):** Cycles through various input sources or operational modes.
- **FM/AM:** Switches between FM and AM radio bands.
- **TIMER:** Sets or adjusts timer functions.
- **FM MODE:** Changes FM reception mode (e.g., Stereo/Mono).
- **RPT (Repeat):** Repeats the current track or disc.
- **SHUFFLE:** Activates or deactivates shuffle playback mode.
- **PRESET + / PRESET -:** Navigates through radio station presets.
- **SELECT:** Confirms selections within menus or modes.
- **Playback Controls (|<, ||, >|, >>):** Standard controls for previous track, play/pause, next track, and fast forward/rewind.
- **BASS:** Adjusts the bass level.
- **TREBLE:** Adjusts the treble level.
- **MEM/TIME SET:** Used for memory functions or setting the time.

4. MAINTENANCE

4.1 Cleaning

To maintain the remote control's appearance and functionality:

- Wipe the remote with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Avoid using harsh chemicals or abrasive materials, as these can damage the remote's surface or buttons.

4.2 Battery Replacement

Replace batteries when the remote's performance degrades or it stops responding. Always replace all four (4) AAA batteries simultaneously with new ones. Do not mix old and new batteries, or different types of batteries.

5. TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are correctly installed with proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the Teac unit's infrared sensor.
 - Ensure you are within the effective range and line of sight of the Teac unit.
- **Some buttons not working:**
 - Verify that the remote is compatible with your specific Teac model (RC-1090, CDX10I, MCDX32I).
 - Ensure the lower cover is fully slid down to access all functions if you are trying to use advanced controls.
 - This remote is a replacement and may not perfectly replicate every single function of an original Teac remote, especially for very specific or rarely used features.
- **Remote is not programmable:**
 - This Redi-Remote is a dedicated replacement remote and is not designed to be programmed for other devices. It functions solely with the specified Teac models.

6. SPECIFICATIONS

Brand	Redi-Remote
Model Number	RT0217CD10I00000
Compatible Devices	Teac RC-1090, Teac CDX10I, Teac MCDX32I Stereo Systems
Power Source	4 x AAA Batteries (not included)
Product Dimensions	7 x 2.5 x 1 inches (approximately 19.05 x 6.35 x 2.54 cm)
Item Weight	5 ounces (approximately 141.75 grams)
Color	Black
Special Feature	Ergonomic design, Sliding cover for advanced functions

7. WARRANTY AND SUPPORT

Specific warranty details for this Redi-Remote product are not provided within this manual. For warranty information or technical support, please contact the seller or manufacturer directly through your purchase platform.

If you have concerns with the remote after purchase, it is recommended to contact the seller for assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00CMVVS0G>

More documents and user manuals: <https://manuals.plus/>