

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control for MEMOREX 845D47BT1DVDBMEH, MLTD3222, MLTD2622 User Manual

Redi-Remote RT845D47BT1DVDBMEH

Redi-Remote Replacement Remote Control User Manual

For MEMOREX Models: 845D47BT1DVDBMEH, MLTD3222, MLTD2622

INTRODUCTION

This manual provides instructions for the Redi-Remote replacement remote control, designed for specific MEMOREX TV/DVD Combo units. This remote is a custom-built replacement and is not an original MEMOREX product. It is pre-programmed to function with the listed models without additional setup.

Compatible MEMOREX Models:

- 845D47BT1DVDBMEH
- MLTD3222
- MLTD2622

PACKAGE CONTENTS

- Redi-Remote Replacement Remote Control
- 4 AAA batteries (included)

SETUP

1. Installing Batteries

The remote control requires 4 AAA batteries. These batteries are included with your purchase.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open the compartment.
3. Insert the 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: This remote control is pre-programmed for the specified MEMOREX models and does not require any additional programming.

OPERATING THE REMOTE CONTROL

This Redi-Remote is designed to perform all functions of the original remote for your MEMOREX TV/DVD Combo unit. Point the remote directly at the MEMOREX unit when operating.

Key Features and Functions

The remote features 58 buttons. A cover over the lower half of the remote can be slid down to reveal additional buttons.



Image: Front view of the Redi-Remote Replacement Remote Control. This image displays the ergonomic design and the layout of the buttons, including the sliding cover for the lower half.

- **Power Button:** Turns the MEMOREX unit on or off.

- **Channel Buttons:** Navigate through channels.
- **Volume Buttons:** Adjust the audio volume.
- **Number Pad:** Direct channel input.
- **Menu Button:** Access the unit's on-screen menu.
- **Navigation Buttons (Up/Down/Left/Right/OK):** Used for menu navigation and selection.
- **Input/Source Button:** Select input sources (e.g., TV, DVD).
- **DVD Playback Controls:** Play, Pause, Stop, Fast Forward, Rewind, Skip for DVD functions. (Located under the sliding cover)
- **Other Function Buttons:** Specific functions related to your MEMOREX unit, such as display, audio settings, etc. (Some may be under the sliding cover).

This remote control operates using infrared technology and has a maximum range of 20 feet. Ensure there are no obstructions between the remote and the MEMOREX unit for optimal performance.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace all 4 AAA batteries when the remote's performance degrades or if the unit does not respond. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a dry place, away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not responding.	Dead or incorrectly inserted batteries.	Replace batteries with new ones, ensuring correct polarity (+/-).
Remote has short range or intermittent response.	Weak batteries; Obstruction between remote and unit; Remote not pointed directly at unit.	Replace batteries. Remove any obstructions. Point the remote directly at the MEMOREX unit's IR receiver.
Specific buttons not working.	Button stuck or damaged; Remote malfunction.	Gently press the button multiple times. If issue persists, contact customer support.
Remote controls other devices.	This remote is designed for specific MEMOREX models only and cannot be programmed for auxiliary devices.	Ensure you are using the correct remote for the intended device. This remote is not universal.

SPECIFICATIONS

- **Brand:** Redi-Remote
- **Model Number:** RT845D47BT1DVDBMEH
- **Compatible Devices:** MEMOREX TV/DVD Combo (Models: 845D47BT1DVDBMEH, MLTD3222, MLTD2622)
- **Connectivity Technology:** Infrared
- **Maximum Range:** 20 Feet (approx. 6 meters)
- **Number of Buttons:** 58
- **Controller Type:** Button Control

- **Special Features:** Ergonomic design, Sliding cover for lower buttons
- **Power Source:** 4 x AAA Batteries (included)
- **Item Dimensions (L x W x H):** 7.5" x 2.25" x 0.75" (19.05 cm x 5.72 cm x 1.91 cm)
- **Item Weight:** 4.5 Ounces (approx. 127.57 grams)
- **UPC:** 791090936521

WARRANTY AND SUPPORT

For any concerns or issues with your Redi-Remote replacement remote control after purchase, please contact the manufacturer directly. This product is a custom replacement and is supported by Redi-Remote. Please refer to your purchase documentation for specific warranty details and contact information.

