

Redi-Remote RTAKB69680439

Redi-Remote Replacement Remote Control User Manual

For Zenith TV Models: Z42PT320, Z50PJ240, Z50PV220, Z42PJ240, Z60PV220

INTRODUCTION

This manual provides comprehensive instructions for the Redi-Remote replacement remote control, specifically designed for various Zenith television models. Please read this manual thoroughly to ensure proper setup and operation of your remote control.

PACKAGE CONTENTS

- Redi-Remote Replacement Remote Control
- 4 AAA Batteries (included)

SETUP

1. Battery Installation

The remote control requires 4 AAA batteries for operation.

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert 4 AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

2. Initial Use (No Programming Required)

This Redi-Remote is pre-programmed for the specified Zenith models and does not require any additional setup or programming. It is ready for use immediately after battery installation.

OPERATING INSTRUCTIONS

The remote control features standard buttons for television operation. Refer to the image below for button layout and functions.



Image: Front view of the Redi-Remote replacement remote control. The top section features power, channel, volume, mute, menu, and number buttons. The lower section, revealed by sliding down a cover, includes buttons for information, input, navigation arrows, enter, exit, return, freeze, ratio, favorite, and color-coded buttons (red, green, yellow, blue).

Key Functions:

- **PWR (Power):** Turns the television on or off.
- **TV/VIDEO:** Switches between TV and video input modes.
- **VOL +/- (Volume):** Adjusts the volume level.
- **CH +/- (Channel):** Changes channels up or down.
- **MUTE:** Mutes or unmutes the television audio.
- **MENU:** Accesses the television's main menu.
- **DISP (Display):** Shows on-screen display information.
- **RECALL:** Returns to the previously viewed channel.
- **Number Buttons (0-9, 100, ENT):** Directly select channels or input numerical values.
- **INFO:** Displays program information.
- **Q-MENU (Quick Menu):** Accesses quick settings or options.
- **INPUT:** Selects different input sources (HDMI, AV, etc.).
- **P-SAVE (Picture Save):** Function for picture settings.
- **FLSHBK (Flashback):** Jumps back to a previous scene or channel.
- **Navigation Arrows (Up, Down, Left, Right) & ENTER:** Used for menu navigation and selection.
- **EXIT:** Exits the current menu or function.
- **RETURN:** Returns to the previous screen or menu.
- **FREEZE:** Pauses the current image on screen.
- **RATIO:** Adjusts the screen aspect ratio.
- **FAV (Favorite):** Accesses favorite channels.
- **RED, GREEN, YELLOW, BLUE:** Color-coded function buttons, typically used for specific features within menus or interactive services.

MAINTENANCE

- Keep the remote control clean by wiping it with a soft, dry cloth.
- Avoid exposing the remote to extreme temperatures, humidity, or direct sunlight.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

TROUBLESHOOTING

Remote not responding:

- Ensure the batteries are inserted correctly with the proper polarity.
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote control and the television's infrared sensor.
- Confirm the remote is pointed directly at the television.

Specific functions not working:

- Verify that the television model is listed as compatible with this remote control.
- Some advanced functions may be specific to the original remote or television model.

SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RTAKB69680439
Compatible Zenith Models	Z42PT320, Z50PJ240, Z50PV220, Z42PJ240, Z60PV220, AKB69680439, Z50PT320
Dimensions	7 x 2.5 x 1 inches
Item Weight	4.5 ounces
Batteries Required	4 AAA (included)
Connectivity Technology	Infrared
Special Feature	No Programming Required

WARRANTY AND SUPPORT

For any concerns with the remote after purchase, please contact the seller directly. This product is a custom replacement remote.

Manufacturer: Redi-Remote

Contact: Refer to your purchase documentation or the seller's information on the platform where the product was acquired for support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00CMVYXEE>

More documents and user manuals: <https://manuals.plus/>