

Redi-Remote RTAXD7501

Redi-Remote Replacement Remote Control Instruction Manual

FOR PIONEER MODELS AXD7501 AND VSX92TXH

1. Introduction

This manual provides instructions for the Redi-Remote replacement remote control, designed specifically for use with Pioneer AXD7501 and VSX92TXH audio/video receiver models. This remote is a custom-built replacement and is not an original Pioneer product. It is pre-programmed to control all functions of the specified Pioneer units without requiring any additional setup.

Key features of this remote include:

- **No Programming Required:** Ready to use right out of the box.
- **Dedicated Functionality:** Controls all functions for the specific Pioneer unit it is designed for.
- **Compact Design:** Measures approximately 7.5 inches in length, 2.25 inches in width, and 0.75 inches in thickness.

2. Product Overview

The Redi-Remote replacement remote control features a standard layout with a primary button section and a hidden panel that slides down to reveal additional controls. Refer to the image below for a visual guide to the remote's buttons.



Image 1: Front view of the Redi-Remote replacement remote control. The top section displays primary controls such as Power, Volume, Channel, and Number Pad. The lower section is covered by a sliding panel, which, when moved down, reveals advanced function buttons for input selection, audio settings, and more. The remote is dark gray with blue and red accent buttons.

2.1. Top Section Buttons

- **PWR (Red Button):** Powers the Pioneer unit on or off.
- **SLEEP:** Activates the sleep timer function.
- **TV/VIDEO:** Switches between TV and video inputs.
- **DISP:** Changes the display mode or information shown on the unit.
- **VOL +/- (Blue Buttons):** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the audio output.
- **CH +/- (Blue Buttons):** Changes channels or navigates menus.
- **MENU:** Accesses the main menu of the Pioneer unit.
- **RECALL:** Recalls previous settings or channels.
- **Number Pad (0-9, 100):** Direct input for channels or settings.
- **ENT:** Confirms selections or enters numerical values.

2.2. Hidden Panel Buttons (Slide Down to Access)

To access these buttons, slide the lower cover of the remote downwards. This section contains advanced controls for audio, video, and system settings.

- **INP SEL:** Input Selector.
- **DIMMER:** Adjusts display brightness.
- **ANALOG:** Selects analog input.
- **SR+:** Surround sound mode plus.
- **GENRE:** Selects audio genre modes.
- **CH LEVEL:** Adjusts individual channel levels.
- **SETUP:** Enters the system setup menu.
- **RETURN:** Returns to the previous menu or screen.
- **STATUS:** Displays current system status.
- **SIG SEL:** Signal Selector.
- **ENTER:** Confirms selections within menus.
- **SB ch:** Surround Back channel control.
- **ST/F.S.:** Stereo/Full Surround mode.
- **THX:** Activates THX listening modes.
- **STANDARD:** Selects standard audio mode.
- **ADV SURR:** Advanced Surround modes.
- **PHASE:** Adjusts speaker phase.
- **MCACC:** Accesses Multi-Channel Acoustic Calibration System.
- **TUNE +/-:** Adjusts tuner frequency.
- **S-DIR:** Sound Director.
- **D-ACCESS:** Direct Access.
- **CLASS:** Selects audio class modes.
- **ST +/-:** Stereo settings plus/minus.
- **BAND:** Selects tuner band (AM/FM).
- **T-EDIT:** Tone Editor.
- **MPX:** Multiplex mode.
- **T-DISP:** Tuner Display.

3. Setup

3.1. Battery Installation

The remote control requires 4 AAA batteries, which are included with the product. To install or replace batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by the arrow (if present).
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

Note: Always replace all batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

4. Operating Instructions

This Redi-Remote is designed for immediate use with your Pioneer AXD7501 or VSX92TXH unit without any programming steps. Simply point the remote at your Pioneer receiver and press the desired function button.

4.1. Basic Operation

- **Power On/Off:** Press the **PWR** button.
- **Volume Control:** Use the **VOL +** to increase volume and **VOL -** to decrease.
- **Mute Audio:** Press the **MUTE** button to temporarily silence the audio. Press again to restore.
- **Input Selection:** Use the **TV/VIDEO** button for common video inputs or slide down the panel and use **INP SEL** for more specific input options.
- **Channel/Menu Navigation:** Use **CH +/-** for channel changes or menu scrolling. The **MENU** button accesses the main menu, and the **ENTER** button (under the slide panel) confirms selections.

4.2. Advanced Operation

For advanced settings and functions, slide down the lower panel of the remote. This reveals buttons for detailed audio adjustments, system setup, and specific input/output controls as described in Section 2.2.

5. Maintenance

To ensure the longevity and proper functioning of your remote control:

- **Cleaning:** Wipe the remote with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Care:** Remove batteries if the remote will not be used for an extended period to prevent leakage. Dispose of used batteries responsibly according to local regulations.
- **Storage:** Store the remote in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as this can damage internal components.

6. Troubleshooting

If you experience issues with your Redi-Remote, consider the following:

- **Remote Not Responding:**
 - Ensure the remote is pointed directly at the Pioneer unit's infrared sensor.
 - Check if there are any obstructions between the remote and the unit.
 - Replace the batteries with fresh AAA batteries, ensuring correct polarity.

- **Limited Functionality:**

- Confirm that the remote control model (RTAXD7501) is compatible with your specific Pioneer unit (AXD7501 or VSX92TXH).
- This remote is designed to control only the specified Pioneer unit and cannot be programmed for auxiliary devices.

- **Sliding Panel Stuck:**

- Gently attempt to slide the panel. Ensure no debris is obstructing its movement.

If troubleshooting steps do not resolve the issue, please contact the seller for further assistance.

7. Specifications

- **Model Number:** RTAXD7501
- **Product Dimensions:** 7 x 2.5 x 1 inches (approximately 17.8 x 6.4 x 2.5 cm)
- **Item Weight:** 4.5 ounces (approximately 127.6 grams)
- **Batteries:** 4 AAA batteries (included)
- **Connectivity Technology:** Infrared (IR)
- **Max Number of Supported Devices:** 1 (Pioneer AXD7501 or VSX92TXH)
- **Special Feature:** No Programming Required

8. Warranty and Support

For any concerns regarding your Redi-Remote replacement control after purchase, please contact the seller directly. Information regarding specific warranty terms may be provided by the seller at the time of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question