

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for PANASONIC Models PVV4030S, PVV4020, LSSQ0206

Redi-Remote RTLSSQ0206

Redi-Remote Replacement Remote Control Instruction Manual

MODEL: RTLSSQ0206

Compatible with PANASONIC PVV4030S, PVV4020, LSSQ0206

INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Redi-Remote replacement remote control. This remote is specifically designed to function with PANASONIC models PVV4030S, PVV4020, and LSSQ0206 without requiring any programming.

SETUP

Battery Installation

The remote control requires 4 AAA batteries (included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

Initial Use

This Redi-Remote replacement control is pre-programmed for the specified PANASONIC models. No additional programming or setup is required. Simply install the batteries, and the remote is ready for use.

OPERATING INSTRUCTIONS

Familiarize yourself with the layout of your Redi-Remote control. The remote features an upper section with primary controls and a lower section with advanced functions, accessible by sliding down a cover.



This image displays the full Redi-Remote replacement remote control. The upper section features power, channel, volume, mute, menu, and number buttons. The lower section, revealed by a slide-down cover, contains playback controls like EJECT, PLAY, REW, FFWD, STOP, REC, and other advanced functions.

Upper Section Controls

- **PWR (Power):** Turns the connected device on or off.
- **SLEEP:** Activates the sleep timer function, if available on your device.
- **TV/VIDEO:** Switches between TV and video input modes.
- **DISP (Display):** Shows on-screen display information.
- **CH+ / CH- (Channel Up/Down):** Changes the channel.
- **VOL+ / VOL- (Volume Up/Down):** Adjusts the audio volume.
- **MUTE:** Silences or restores the audio.
- **MENU:** Accesses the device's main menu.
- **RECALL:** Returns to the previously viewed channel.
- **Number Pad (0-9, 100):** Directly enters channel numbers or other numerical inputs.
- **ENT (Enter):** Confirms selections or entered numbers.

Lower Section Controls (Slide Down Cover)

To access the advanced playback and recording functions, slide down the cover located at the bottom of the remote control.

- **EJECT:** Ejects a tape or disc from the device.
- **ACTION:** Initiates a specific action, context-dependent on the device.
- **INPUT:** Selects the input source.
- **PROG/VCR+:** Used for programming or VCR specific functions.
- **PLAY:** Starts playback of media.
- **REW (Rewind):** Rewinds media.
- **FFWD (Fast Forward):** Fast forwards media.
- **STOP:** Stops playback or recording.
- **ADD/HLT (Add/Delete):** Used for adding or deleting items, typically in programming or lists.
- **COUNTER RESET:** Resets the tape counter.
- **TAPE POSITION:** Adjusts or displays tape position.
-  **(Pause):** Pauses playback or recording.
- **SKIP:** Skips forward or backward in media.
- **SPEED SEARCH:** Initiates a speed search function during playback.
- **REC (Record):** Starts recording.

MAINTENANCE

Proper care ensures the longevity and optimal performance of your remote control.

- **Cleaning:** Wipe the remote with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace all batteries simultaneously when the remote's performance diminishes. Do not mix old and new batteries or different battery types.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common solutions:

- **Remote Not Responding:**

- Check if the batteries are correctly installed with the correct polarity.
- Replace old batteries with new ones.
- Ensure there are no obstructions between the remote and the device's infrared sensor.

- **Limited Range:**

- Ensure the remote is pointed directly at the device.
- Verify that the batteries are not low.

- **Specific Functions Not Working:**

- Confirm that the remote is compatible with your specific PANASONIC model (PVV4030S, PVV4020, LSSQ0206).
- Some advanced functions may require the device to be in a specific mode (e.g., VCR mode for VCR controls).

SPECIFICATIONS

- **Product Dimensions:** 7 x 2.5 x 1 inches
- **Item Weight:** 4.5 ounces
- **Batteries:** 4 AAA batteries (included)
- **Special Feature:** No Programming Required
- **Max Number of Supported Devices:** 1
- **Compatible Devices:** Stereo System (specifically PANASONIC PVV4030S, PVV4020, LSSQ0206)
- **Connectivity Technology:** Infrared
- **Model Number:** RTLSSQ0206

WARRANTY INFORMATION

This Redi-Remote is a custom-built replacement remote. If you have any concerns or issues with the remote after purchase, please contact the seller directly for assistance. Specific warranty terms may vary and are typically handled by the seller.

SUPPORT

For technical support, troubleshooting assistance, or any questions regarding your Redi-Remote replacement control, please contact the seller through your purchase platform. They are best equipped to provide specific guidance and resolve any issues you may encounter.

© 2023 Redi-Remote. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00CMW0DIS>

More documents and user manuals: **<https://manuals.plus/>**