

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control for MUSTEK DVDR100A User Manual

Redi-Remote RTDVDR100A

Redi-Remote Replacement Remote Control User Manual

MODEL: RTDVDR100A FOR MUSTEK DVDR100A

Introduction

This manual provides instructions for the Redi-Remote replacement remote control, model RTDVDR100A. This remote is specifically designed to operate the MUSTEK DVDR100A unit. It is a custom-built replacement and does not require programming.

Setup

Battery Installation

The remote control requires four (4) AAA alkaline batteries for operation.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards to open the compartment.
3. Insert four AAA batteries, ensuring the positive (+) and negative (-) terminals align with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image Description: A view of the Redi-Remote replacement remote control. The image highlights the overall design and suggests the location of the battery compartment on the rear side.

Operating Instructions

Basic Operation

This Redi-Remote replacement remote control is pre-programmed for the MUSTEK DVDR100A unit and requires no additional setup. Point the remote directly at the infrared sensor on your MUSTEK DVDR100A unit.

Accessing Additional Functions

The remote control features a sliding cover on its lower half. To access additional buttons and functions, gently slide this cover downwards. After use, you may slide it back up to protect the buttons.

Maintenance

Cleaning

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these may damage the surface or internal components.

Battery Replacement

Replace batteries when the remote's response becomes inconsistent or stops functioning. Always replace all four batteries simultaneously with new AAA alkaline batteries. Do not mix old and new batteries or different battery types.

Troubleshooting

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old batteries with new AAA alkaline batteries.
- **Line of Sight:** Verify there are no obstructions between the remote control and the MUSTEK DVDR100A unit's infrared sensor.
- **Distance:** Ensure you are within the effective operating range (approximately 20 feet).
- **Unit Power:** Confirm that the MUSTEK DVDR100A unit is powered on.

Limited Functionality

- **Sliding Cover:** Ensure the lower sliding cover is moved down to reveal all available buttons for full functionality.
- **Compatibility:** This remote is designed exclusively for the MUSTEK DVDR100A. It cannot be programmed to control other devices.

Specifications

Feature	Detail
Model Number	RTDVDR100A
Compatibility	MUSTEK DVDR100A
Dimensions	7 1/2" x 2 1/4" x 3/4"
Power Source	4 x AAA Alkaline Batteries (included)
Connectivity	Infrared (IR)
Operating Range	Up to 20 feet
Special Features	No programming required, sliding cover for additional buttons
Weight	4.5 Ounces
Button Quantity	58

Support

For any questions or concerns regarding your Redi-Remote replacement remote control, please contact the seller or manufacturer directly. Refer to your purchase documentation for contact information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question