

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control User Manual

Redi-Remote RTEDW8020

Redi-Remote Replacement Remote Control User Manual

INTRODUCTION

This manual provides detailed instructions for the Redi-Remote replacement remote control, designed for seamless compatibility with Centrios models ZA64894 and EDW8020. This remote is a custom-made replacement and is not an original Centrios product. Please read this manual thoroughly to ensure proper setup and operation.

PRODUCT OVERVIEW

The Redi-Remote replacement remote is engineered to replicate all essential functions of your original Centrios remote for models ZA64894 and EDW8020. It features a durable design and an intuitive button layout.



This image displays the full layout of the Redi-Remote replacement remote control. The upper section features power, input, display, sleep, volume, channel, mute, menu, recall, and number pad buttons. The lower section, which is revealed by sliding down a cover, includes advanced functions such as open/close, angle, repeat, A-B, intro, shuffle, setup, title, menu/PBC, subtitle, language, N/P, return, goto, program, enter, audio, zoom, step, and various playback controls.

KEY FEATURES

- **Direct Compatibility:** Specifically designed to work with Centrios models ZA64894 and EDW8020.
- **Full Functionality:** Performs every function for the specific unit it is designed to control.
- **Non-Programmable:** Cannot be programmed to control auxiliary devices.
- **Compact Design:** Measures approximately 7.5 inches in length, 2.25 inches in width, and 0.75 inches in thickness.
- **Sliding Cover:** Features a sliding cover to protect and reveal advanced function buttons.

PACKAGE CONTENTS

- 1 x Redi-Remote Replacement Remote Control
- 4 x AAA Batteries (pre-installed or included separately)

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Close the battery compartment cover securely.
5. Test the remote by pressing the 'PWR' button to see if the indicator light flashes.

OPERATING INSTRUCTIONS

Basic Functions (Upper Section)

- **PWR (Power):** Turns the Centrios unit on or off.
- **INPUT:** Selects the input source on the Centrios unit.
- **DISP (Display):** Shows on-screen display information.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **VOL +/- (Volume):** Increases or decreases the audio volume.
- **CH +/- (Channel):** Changes channels up or down.
- **MUTE:** Mutes or unmutes the audio.
- **MENU:** Accesses the main menu of the Centrios unit.
- **RECALL:** Recalls the previously viewed channel or function.
- **Number Pad (0-9, -, .):** Directly enters channel numbers or other numerical inputs.
- **ENT (Enter):** Confirms a selection or input.

Advanced Functions (Lower Section - Slide Down Cover)

To access the advanced functions, gently slide down the cover located at the bottom half of the remote control.

- **OPEN/CLOSE:** Opens or closes the disc tray.
- **ANGLE:** Changes the viewing angle during DVD playback.

- **REPEAT:** Repeats the current track, chapter, or disc.
- **A-B:** Repeats a specific segment between two marked points (A and B).
- **INTRO:** Plays the introductory segments of tracks or chapters.
- **SHUFFLE:** Plays tracks in a random order.
- **SETUP:** Accesses the system setup menu.
- **TITLE:** Displays the disc title menu.
- **MENU/PBC:** Accesses the disc menu or Playback Control (PBC) menu.
- **SUBTITLE:** Toggles subtitle display or selects subtitle language.
- **LANGUAGE:** Changes the audio language.
- **N/P (NTSC/PAL):** Switches between NTSC and PAL video formats (if supported).
- **Arrow Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **RETURN:** Returns to the previous menu or screen.
- **GOTO:** Allows direct navigation to a specific time, track, or chapter.
- **PROGRAM:** Programs playback order for tracks.
- **ENTER:** Confirms selections within menus.
- **AUDIO:** Selects audio tracks or modes.
- **ZOOM:** Zooms in on the picture.
- **STEP:** Advances playback frame by frame.
- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind, Skip Forward, Skip Backward, Record, Rec Mode):** Standard controls for media playback and recording functions.
- **CLEAR:** Clears an entry or selection.
- **EDIT:** Accesses editing functions (if applicable to the Centrios unit).
- **SOURCE:** Selects the recording source.
- **RECORD:** Initiates recording.
- **REC MODE:** Selects recording quality or mode.

MAINTENANCE

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's range decreases or buttons become unresponsive. Always replace all batteries at the same time with new ones of the same type.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures. Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Solution
Remote is not working.	Check battery orientation and ensure they are fresh. Ensure there are no obstructions between the remote and the Centrios unit's infrared sensor.
Buttons are unresponsive or require multiple presses.	Replace the batteries. Clean the remote's surface if it appears dirty.

Problem	Solution
Remote range is reduced.	Replace the batteries. Ensure the remote is pointed directly at the Centrios unit. Avoid strong light sources that might interfere with the infrared signal.
Remote does not control other devices.	This remote is specifically designed for Centrios models ZA64894 and EDW8020 and cannot be programmed to control auxiliary devices.
Sliding cover is stiff.	Ensure no debris is lodged in the sliding mechanism. Gently clean the tracks.
Remote does not have a laser pointer.	This remote is not designed for projectors and therefore is not equipped with a laser.
Remote does not control a TV.	This remote is designed to control specific Centrios units (ZA64894, EDW8020) and not universal TV functions.

SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Compatible Models	Centrios ZA64894, EDW8020
Model Number	RTEDW8020
Connectivity Technology	Infrared (IR)
Power Source	4 x AAA Batteries (included)
Product Dimensions	Approx. 7.5" x 2.25" x 0.75" (19.05 cm x 5.72 cm x 1.91 cm)
Item Weight	Approx. 5 ounces (141.75 grams)
Special Features	Sliding cover for advanced functions, dedicated buttons for Centrios unit control.

WARRANTY INFORMATION

This Redi-Remote replacement remote control comes with a standard manufacturer's warranty. For specific details regarding warranty coverage, duration, and terms, please refer to the documentation provided with your purchase or contact Redi-Remote customer support directly. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you encounter any issues or have questions regarding your Redi-Remote replacement remote control, please contact the manufacturer, Redi-Remote, for assistance. Contact information can typically be found on the product packaging or the seller's website. When contacting support, please have your product model number (RTEDW8020) and details of your Centrios unit (ZA64894 or EDW8020) ready.