

- Manuals.plus /
- › Redi-Remote /
- › Redi-Remote Replacement Remote Control User Manual for Power ACOUSTIK PTID8001NT and PTID5800

Redi-Remote RTPTID5800

Redi-Remote Replacement Remote Control User Manual

For Power ACOUSTIK Models: PTID8001NT, PTID5800

INTRODUCTION

This manual provides detailed instructions for the Redi-Remote replacement remote control, designed for seamless operation with Power ACOUSTIK PTID8001NT and PTID5800 units. This remote is a custom-built replacement and does not require programming for the specified models. It is not an original manufacturer's remote control.

PRODUCT OVERVIEW



Image Description: A dark gray replacement remote control with black and blue buttons. The top section features primary controls like power, volume, channel, and navigation. The lower section, initially covered by a sliding panel, reveals additional function buttons for setup, playback, and menu options. The remote has a textured grip and clear button labels.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert four (4) AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Close the battery compartment cover securely.

Initial Use

This Redi-Remote replacement control is pre-programmed for Power ACOUSTIK PTID8001NT and PTID5800 units. No additional programming steps are required. Once batteries are installed, the remote is ready for immediate use.

OPERATING INSTRUCTIONS

Top Section Buttons

- **PWR (Power):** Turns the unit on or off.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **TV/VIDEO:** Switches between TV and video input sources.
- **DISP (Display):** Changes the display mode or shows on-screen information.
- **CH+ / CH- (Channel Up/Down):** Changes channels.
- **VOL+ / VOL- (Volume Up/Down):** Adjusts the volume level.
- **MUTE:** Silences or restores audio.
- **MENU:** Accesses the main menu of the unit.
- **RECALL:** Recalls the previously viewed channel or function.
- **Number Pad (0-9, 100):** Direct input for channels or numerical selections.
- **ENT (Enter):** Confirms a selection or input.

Lower Section Buttons (Under Slide Down Cover)

To access these functions, slide down the cover located at the bottom of the remote control.

- **SETUP:** Enters the system setup menu.
- **P-ANGLE (Picture Angle):** Adjusts the viewing angle for compatible media.
- **AUDIO:** Selects audio tracks or modes.
- **PBC/AST:** Playback Control / Auto Store (function may vary by unit).
- **LOUD/EQ (Loudness/Equalizer):** Adjusts audio loudness or equalizer settings.
- **SUB-T (Subtitle):** Toggles or selects subtitle options.
- **TITLE:** Accesses the title menu of a DVD or disc.
- **Navigation Arrows (Up, Down, Left, Right):** Navigates through menus and options.
- **BAND/ENTER:** Selects radio bands or confirms selections.
- **PROG (Program):** Initiates programming functions or sequence playback.
- **D-ANGLE (Disc Angle):** Changes camera angles on compatible DVDs.
- **Playback Controls (Rewind, Fast Forward, Previous Track, Next Track, Play, Pause, Stop):** Standard media

playback functions.

- **RDM (Random):** Activates random playback mode.
- **SLOW:** Initiates slow-motion playback.
- **REPEAT:** Repeats a track, chapter, or entire disc.
- **A-B:** Repeats a specific segment between points A and B.
- **ZOOM:** Magnifies a portion of the screen.
- **SEL (Select):** Selects an item or option.
- **P-SPW (Picture Special Window):** Activates a special picture window function.
- **P-MENU (Picture Menu):** Accesses picture-related menu options.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or inconsistent. Always replace all four AAA batteries simultaneously with new ones. Do not mix old and new batteries or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

- **Remote Not Responding:**
 - Ensure batteries are correctly installed with proper polarity.
 - Replace old batteries with new ones.
 - Check for any obstructions between the remote and the unit's infrared sensor.
 - Ensure you are within the effective operating range and line of sight of the unit.
- **Specific Functions Not Working:**
 - Verify that the function you are trying to use is supported by your specific Power ACOUSTIK model (PTID8001NT or PTID5800).
 - Some functions may only be active in certain modes (e.g., DVD playback controls only work when a DVD is playing).

SPECIFICATIONS

- **Model Number:** RTPTID5800
- **Compatible Units:** Power ACOUSTIK PTID8001NT, PTID5800
- **Dimensions:** Approximately 7 x 2.5 x 1 inches
- **Item Weight:** Approximately 4.5 ounces
- **Batteries:** 4 x AAA (included)
- **Connectivity Technology:** Infrared (IR)
- **Special Feature:** No Programming Required
- **Max Number of Supported Devices:** 1

WARRANTY AND SUPPORT INFORMATION

This Redi-Remote replacement control is designed for reliable performance. For any concerns or issues with the remote after purchase, please contact the seller directly for assistance. Specific warranty details may vary and are typically provided at the point of purchase.

Redi-Remotes are designed to control the specific unit they are intended for and cannot be programmed to control auxiliary devices.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00CMW2W7S>

More documents and user manuals: <https://manuals.plus/>