

[Manuals.plus](#) /

› [Redi-Remote](#) /

› Redi-Remote Replacement Remote Control Instruction Manual for ONKYO TXSR603 Series (Models TXSR603B, TXSR603X, TXSR603XS, RC623M)

Redi-Remote RT24140623

Redi-Remote Replacement Remote Control Instruction Manual

For ONKYO TXSR603 Series AV Receivers (Models: TXSR603B, TXSR603X, 24140623, TXSR603XS, RC623M)

INTRODUCTION

This document provides instructions for the Redi-Remote replacement remote control, designed for seamless compatibility with various ONKYO TXSR603 series AV receivers. This remote is a custom-built replacement and is not an original ONKYO product. It is engineered to perform all essential functions for the specified ONKYO units without requiring any programming.

Please note that this Redi-Remote cannot be programmed to control auxiliary devices. It is dedicated solely to the functions of the ONKYO unit it is designed for. This remote does not include laser pointers or LED lights.

SETUP

1. Battery Installation

The remote control requires 4 AAA batteries for operation. These batteries are typically included with your purchase.

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch and lift to open.
3. Insert 4 AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, sliding it back into place until it clicks securely.

2. Initial Use

This Redi-Remote is pre-programmed for the compatible ONKYO models. No additional setup or programming is required. Once batteries are installed, the remote is ready for immediate use with your ONKYO receiver.

OPERATING INSTRUCTIONS

The remote control features a standard layout with an upper fixed section and a lower section concealed by a sliding cover. Familiarize yourself with the button layout and their corresponding functions.



Image: Redi-Remote replacement remote control for ONKYO TXSR603 series. The image displays the full remote, including the upper fixed section with power, volume, channel, and number buttons, and the lower section with advanced control buttons, revealed by a 'SLIDE DOWN' cover.

Upper Section Buttons

- **PWR (Red button):** Powers the ONKYO receiver on or off.
- **SLEEP:** Activates or adjusts the sleep timer function.
- **TV/VIDEO:** Switches between various video input sources.
- **DISP (Display):** Toggles the on-screen display of information.
- **CH+ / CH-:** Navigates up or down through channels or menu options.
- **VOL+ / VOL-:** Increases or decreases the audio volume level.
- **MUTE:** Toggles the audio mute function.
- **MENU:** Accesses the main system menu of the receiver.
- **RECALL:** Recalls the previously selected channel or input.
- **Number Pad (1-0, 100, ENT):** Used for direct entry of channel numbers or other numerical inputs.

Lower Section Buttons (Slide Down Cover)

To access these buttons, slide the lower cover of the remote downwards.

- **ON / STNDBY / TUNER / DIMMER / T-MENU:** Dedicated buttons for specific functions such as power on, standby mode, tuner selection, display dimmer, and tone menu access.
- **RETURN/EXIT:** Returns to the previous menu screen or exits the current menu.
- **SETUP/GUIDE:** Accesses the receiver's setup menu or electronic program guide.
- **Navigation Arrows (Up, Down, Left, Right) and ENTER:** Used for navigating through menus and confirming selections.
- **PREV CH (Previous Channel):** Switches to the last viewed channel.
- **STEREO / SURR (Surround):** Selects between stereo and various surround sound modes.
- **DIRECT / ALL ST (All Stereo) / T-TONE (Test Tone) / CH SEL (Channel Select):** Buttons for direct audio modes, test tone generation, and channel selection within specific functions.
- **LEVEL +/-:** Adjusts individual channel levels or other audio parameters.
- **L NIGHT (Late Night) / CINE FL (Cinema Filter):** Activates late night listening mode or cinema filter audio processing.

MAINTENANCE

To ensure optimal performance and longevity of your Redi-Remote control, follow these maintenance guidelines:

- **Cleaning:** Wipe the remote control regularly with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Battery Replacement:** If the remote's response becomes sluggish or inconsistent, replace all 4 AAA batteries with new ones. Do not mix old and new batteries, or different types of batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

TROUBLESHOOTING

If you encounter issues with your Redi-Remote, please refer to the following common solutions:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh AAA batteries.

- Ensure there are no obstructions between the remote control and the ONKYO receiver's infrared sensor.
- Confirm you are within the effective range of the receiver.

- **Specific Buttons Not Working:**

- Ensure the remote is pointed directly at the receiver.
- Verify that the function you are trying to use is supported by your specific ONKYO receiver model.

- **Remote Controls Other Devices:**

- This remote is designed specifically for ONKYO TXSR603 series receivers and cannot be programmed for other devices. If it appears to control another device, it may be due to incidental infrared signal overlap, which is rare.

If these steps do not resolve the issue, please refer to the Support section for further assistance.

SPECIFICATIONS

Feature	Detail
Brand	Redi-Remote
Model Number	RT24140623
Compatible Devices	ONKYO TXSR603B, TXSR603X, 24140623, TXSR603XS, RC623M, TXSR603XB, TX603X AV Receivers
Connectivity Technology	Infrared (IR)
Special Feature	No Programming Needed
Max Number of Supported Devices	1 (Dedicated to the specified ONKYO receiver)
Product Dimensions	7 x 2.5 x 1 inches (approximately 19.05 x 6.35 x 2.54 cm)
Item Weight	4.5 ounces (approximately 127.57 grams)
Batteries	4 AAA batteries required (included)

SUPPORT

If you have any concerns with the remote control after purchase, or if the troubleshooting steps do not resolve your issue, please contact the seller directly for assistance. They can provide further support and guidance regarding your Redi-Remote replacement control.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B00CMW3SNU>

More documents and user manuals: <https://manuals.plus/>